

3onedata



IES6210 Series

Layer 2 Managed Industrial Ethernet Switch

CLI User Manual

Document Version: 01

Issue Date: 03/14/2022

Copyright © 2022 3onedata Co., Ltd. All rights reserved.

No company or individual is allowed to duplicate or transmit this manual in any forms without written permission issued by 3onedata Co., Ltd.

Trademark statement

3onedata, **3onedata** and  are the registered trademark owned by 3onedata Co., Ltd. And other trademarks mentioned in this manual belong to their corresponding companies.

Note

Purchased product, service or features should be constrained by 3onedata commercial contracts and clauses. The whole or part product, service or features described in this document may beyond purchasing or using range. 3onedata won't make any statement or warranty for this document content unless any other appointment exists.

Due to product version upgrading or other reason, this document content will be upgraded periodically. Unless other appointment exists, this document only for usage guide, all statement, information and suggestion in this document won't constitute any warranty.

3onedata

Make network communication more reliable



Please scan our QR code
for more details

3onedata

Make network communication more reliable



BlueEyes pro

BlueEyes Pro
Management Software

VSP Virtual Serial Port
Management Software

SNMP Management
Software



Embedded Industrial
Ethernet Switch Modules

Embedded Serial
Device Server Modules



Industry-specialized
Products
(Rail Transit, Power,
Smart City, Pipe Gallery...)

Honor · Quality · Service



Layer 2 (Unmanaged)
Managed Industrial
Ethernet Switch

Layer 3 Managed
Industrial Ethernet Switch
Industrial PoE Switch



Modbus Gateway
Serial Device Server
Media Converter
CAN Device Server
Interface Converter



Industrial Wireless
Products

3onedata Co., Ltd.

Headquart 3/B, Zone 1, Baiwangxin High Technology Industrial park, Nanshan District, Shenzhen,

Technolog tech-support@3onedata.com

Service +86-400-880-4496

E-mail: sales@3onedata.com

Fax: +86-0755-26703485

Website: <http://www.3onedata.com>

<http://www.3onedata.com>

Preface

Switch CLI user manual has introduced the CLI configuration of this switch:

Audience

This manual applies to the following engineers:

- Network administrators
- Technical support engineers
- Network engineer

Port Convention

The port number in this manual is only an example, and does not represent the actual port with this number on the device. In actual use, the port number existing on the device shall prevail.

Text Format Convention

Format	Description
" "	Words with "" represent the interface words. Such as: "Port No.".
>	Multi-level path is separated by ">". Such as opening the local connection path description: Open "Control Panel> Network Connection> Local Area Connection".
Light Blue Font	It represents the words clicked to achieve hyperlink. The font color is as follows: 'Light Blue'.
About this chapter	The section 'about this chapter' provide links to various sections of this chapter, as well as links to the Principles Operations Section of this chapter.

Symbols

Format	Description
 Notice	Remind the announcements in the operation, improper operation may result in data loss or equipment damage.
 Warning	Pay attention to the notes on the mark, improper operation may cause personal injury.
 Note	Make a necessary supplementary instruction for operation description.
 Key	Configuration, operation, or tips for device usage.
 Tip	Pay attention to the operation or information to ensure success device configuration or normal working.

Revision Record

Version No.	Date	Revision note
01	14/03/2022	Product release

Contents

PREFACE	1
CONTENTS	1
1 LOG IN TO THE CLI CONFIGURATION INTERFACE	1
1.1 LOGIN TO THE SWITCH VIA CONSOLE PORT	1
1.2 LOGIN TO THE SWITCH VIA TELNET	3
1.3 COMMAND LINE INTERFACE	4
1.3.1 Command Line Online Help	5
1.3.2 Command Line Common Error	6
1.3.3 History Command	6
1.3.4 Common Command	6
2 POE CONFIGURATION COMMAND	9
2.1 ACCESS TO THE POE CONFIGURATION VIEW	9
2.2 DISABLE/ENABLE PORT POE FUNCTION	10
2.3 CONFIGURE THE POE PARAMETERS OF PORT	10
2.4 VIEW THE POE STATUS INFORMATION OF PORT	11
3 PORT CONFIGURATION COMMAND	13
3.1 PORT INFORMATION DISPLAY	13
3.1.1 DDM Information Display	14
3.2 PORT ENABLE	15
3.3 PORT FLOW CONTROL	15
3.4 PORT SPEED AND WORKING MODE	16
3.5 PORT MDI/MDIX SELF-ADAPTION	16
4 BANDWIDTH CONFIGURATION COMMAND	18
4.1 BANDWIDTH CONFIGURATION	18
4.2 BANDWIDTH DISPLAY	19
5 STATISTICS CONFIGURATION COMMAND	21
5.1 PORT STATISTICS CONFIGURATION	21
6 IGMP CONFIGURATION COMMAND	23
6.1 IGMP SNOOPING CONFIGURATION COMMAND	23
7 LLDP CONFIGURATION COMMAND	25
7.1 LLDP ENABLE	25
7.2 DISPLAY LLDP INFORMATION	25
7.3 LLDP CONFIGURATION	26
8 VLAN CONFIGURATION COMMAND	27

8.1 VLAN TYPE CONFIGURATION AND DISPLAY	27
8.2 PORT ISOLATION	28
8.3 PORT-BASED VLAN	28
8.4 IEEE802.1Q VLAN.....	29
9 QOS CONFIGURATION COMMAND	31
9.1 QoS QUEUE MECHANISM CONFIGURATION	31
9.2 ToS AND CoS ENABLEMENT	32
9.3 ToS/CoS VALUE MAPPING	32
9.4 DEFAULT PORT PRIORITY CONFIGURATION	33
9.5 DISPLAY QoS CONFIGURATION INFORMATION.....	34
10 RING CONFIGURATION COMMAND	35
10.1 ENABLE OR DISABLE RING NETWORK FUNCTION	35
10.2 RING3 CONFIGURATION	36
10.3 DISPLAY RING NETWORK CONFIGURATION INFORMATION	37
10.4 RSTP CONFIGURATION.....	37
10.5 DISPLAY RSTP CURRENT STATUS	39
11 LOOPDETECTION CONFIGURATION COMMAND	40
11.1 DISPLAY PORT STATE	40
11.2 ENABLE PORT LOOPBACK DETECTION.....	40
11.3 ENABLE THE PORT TO SEND TRAP	41
11.4 CONFIGURE LOOP DETECTION TIME.....	41
12 TRUNK CONFIGURATION COMMAND.....	43
12.1 PORT TRUNKING CONFIGURATION	43
12.2 PORT TRUNKING DISPLAY	44
13 SNMP CONFIGURATION COMMAND.....	45
13.1 SNMP ENABLE.....	45
13.2 SNMP CONFIGURATION.....	46
13.3 SNMP DISPLAY	46
14 ALARM CONFIGURATION COMMAND	48
14.1 ALARM CONFIGURATION/DELETE	48
14.2 DISPLAY ALARM INFORMATION	49
15 MIRROOR CONFIGURATION COMMAND.....	51
15.1 PORT MIRRORING CONFIGURATION/DELETE	51
15.2 DISPLAYS PORT MIRRORING INFORMATION.....	52
16 MANAGE CONFIGURATION COMMAND	53
16.1 NETWORK DIAGNOSIS SETTING	53
16.2 DISPLAY MODBUS TCP FUNCTION	54
16.3 ENABLE MODBUS TCP FUNCTION.....	54
16.4 DISPLAY DEVICE NETWORK ADDRESS.....	55
16.5 IP ADDRESS, DEFAULT GATEWAY, DNS ADDRESS SETTINGS.....	55
16.6 DHCP AUTOMATIC ACQUISITION OF IP	56
16.7 SYSTEM LOG INFORMATION	56
16.8 SYSTEM TIMEOUT SETTINGS	56

16.9 USER NAME AND PASSWORD SETTINGS	57
16.10 RESTORE FACTORY SETTINGS.....	57
17 EVENTLOG CONFIGURATION COMMAND	59
17.1 LOG INFORMATION ENABLE	59
17.2 LOG INFORMATION TYPE	60
17.3 LOG INFORMATION STATUS DISPLAY	60
18 MULTICAST CONFIGURATION COMMAND.....	61
18.1 DISPLAY MULTICAST FILTER LIST	61
18.2 ADD STATIC MULTICAST ADDRESS	62
18.3 DELETE STATIC MULTICAST ADDRESS	62
19 INFORMATION CONFIGURATION COMMAND	63
19.1 DISPLAY DEVICE INFORMATION	63
19.2 CONFIGURE DEVICE INFORMATION.....	63
19.3 CLEAN DEVICE INFORMATION	64
20 DOT1X CONFIGURATION COMMAND	65
20.1 GLOBAL IEEE802.1X AUTHENTICATION ENABLE	65
20.2 IEEE802.1X AUTHENTICATION CONFIGURATION.....	65
21 TIME CONFIGURATION COMMAND.....	67
21.1 TIME CONFIGURATION.....	67
21.2 DISPLAYS THE TIME CONFIGURATION VIEW	68
22 TFTP CONFIGURATION COMMAND	69
22.1 TFTP CONFIGURATION	69
22.2 DISPLAY TFTP CONFIGURATION INFORMATION	69

1 Log in to the CLI Configuration Interface

1.1 Login to the Switch via Console Port

The PC can log in to the command line interface of the device by connecting to the Console port.

Operation steps


Step 1 Connect the serial port of the computer to the Console port of the device through the serial port line to establish a local configuration environment, as shown in the topology diagram below.



- 1 Connect DB9 at one end of serial port line to RS-232 serial port of PC.
- 2 Connect the RJ45 on the other end of the serial line to the Console port of the device.


Note:

Diagram of internal connection line of serial port line/communication cable is shown below.

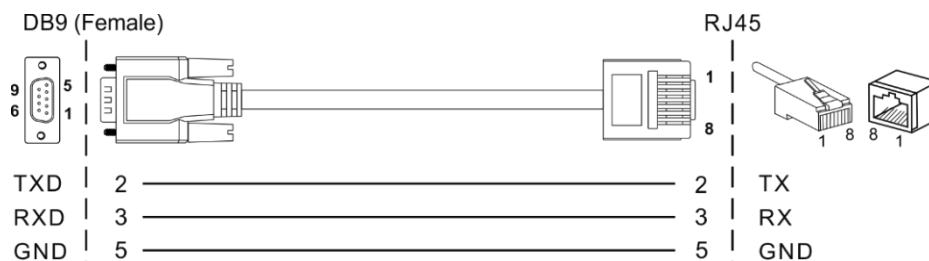


Step 2 Open the terminal simulation software on the PC, create a new connection, and set the interface and communication parameters of the connection. (Using PuTTY as an example here.)

- 1 Open PuTTY and click "Session" on the menu bar.
- 2 In the "Basic options for your PuTTY session" input box on the right, do the following:
 - Select "Connection type" to "Serial".
 - Enter "115200" in the "Speed" text box;
 - Click "Open".

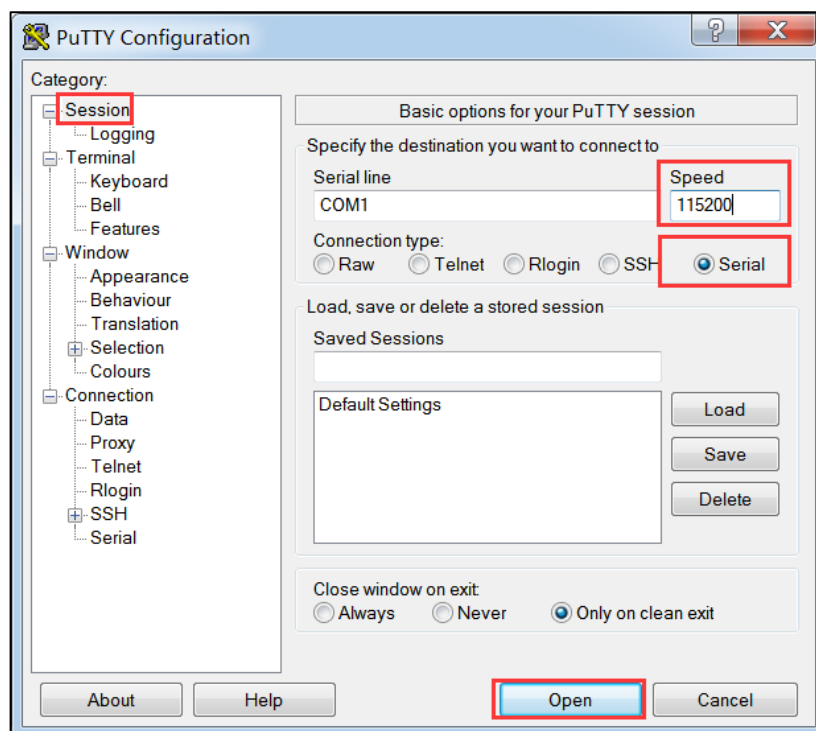

- 3 The "COM1-PuTTY" command line edit dialog box pops up. Press enter key to enter user name and password. The user name and password of the device are both admin by default, as shown below.

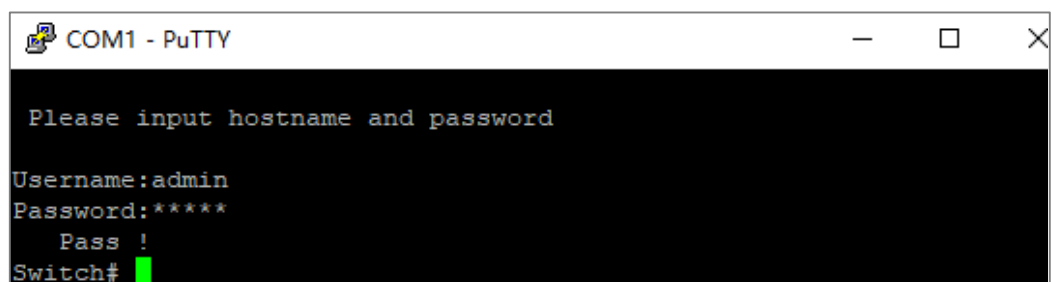

Step 3 End.

1.2 Login to the Switch via Telnet


Through Telnet client login to the command line interface of the device, the client and the device should meet the following requires:

- 1 Configure the IP address of the switch correctly.
- 2 If the Telnet client and the device are in the same LAN, the IP address of the device and the client must be configured in the same network segment. Otherwise, the route between Telnet client and device must be accessible.

User can log in to the switch device through the Telnet client and configure the device if the two requires above are met.


Operation steps

Step 1 As shown in the figure below, set up the configuration environment to connect the Ethernet port of the computer to the Ethernet port of the device through the LAN.

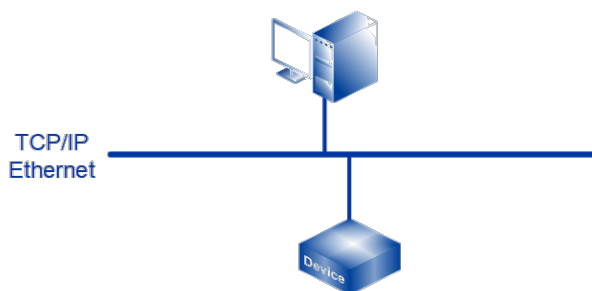

Step 2 Run the Telnet client on the computer and input the administrative IP address of the Ethernet port connected the computer to the switch, as shown in the figure below.

- 1 Press "Win+R" to pop up the running window;
- 2 Enter "Telnet+ space + device IP address" in the "Open (O)" input box.
- 3 Click "OK" button.

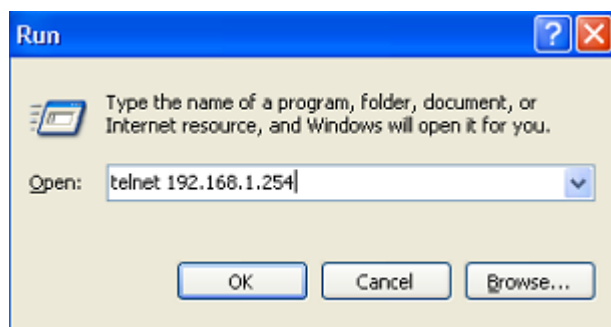


Note:

- Using the command line prompt interface of Win7/Win8/Win10 and other operating systems to configure the device needs to enable Telnet client in advance, user can check and enable Telnet client in the Windows function window under the path of "Control Panel > Program and Function > Enable or Disable Windows function", if Telnet client has been enabled, user can ignore this instruction.
- If the computer operating system does not support Telnet clients, a third party software PuTTY can be used as a Telnet client.
- The default IP address of the device is "192.168.1.254".

Step 3 Click "OK" to start the Telnet connection request.

Step 4 After successful connection, enter the correct user name and password according to the interface prompt, as shown in the figure below.

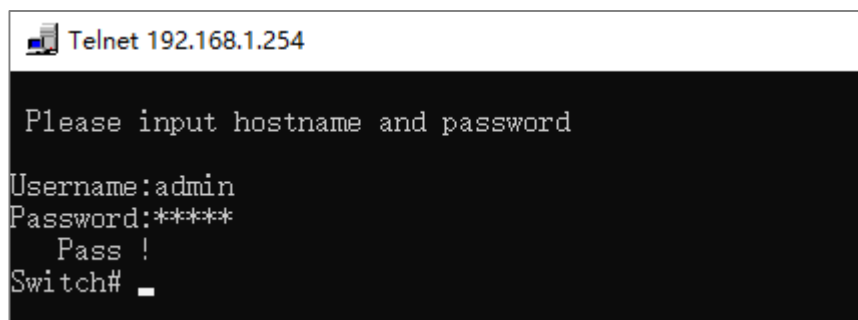

Note:

The default user name and password of the device are "admin".

Step 5 End.

1.3 Command Line Interface

The switch provides a command line interface and configuration commands to users for easy configuration and management. The command line interface has the following features:

- Local configuration through the Console port;
- Support history command save, 10 can be saved. Saved history command information can be selected through the upper and lower arrow key.
- User can enter "help" or "?" to get help;
- Command input supports Tab key intelligent completion;
- The command line interpreter adopts an incomplete search method for keywords, and the user only needs to type conflict-free keywords, for example, for the config command, just type conf.

1.3.1 Command Line Online Help

CLI provides the following kinds of online help:

- Complete help;
- Partial help.

Complete help

1) In any view, enter <?> to get all commands and their simple description in this view.

```
Switch# ?  
  
List                --List commands of current menu  
Help                --Help commands of current menu  
Quit                --Quit from CLI  
Exit                --Exit from current menu  
Reboot              --Reboot switch  
.....
```

2) Enter a command followed by "?" separated by space, all keywords and their simple description would be listed if this location has keywords.

```
Switch(information)# show ?  
  
mac                  --Device MAC Address  
version              --Device version  
others               --Device type,name,etc
```

Partial help

1) Enter a character string followed by <?>, all character string that start with this character string will be listed.

```
Switch# M?  
  
Mirror      <dir>    --Enter port mirror menu  
Manage      <dir>    --Enter system manage menu  
Multicast   <dir>    --Enter static multicast filters menu
```

2) Enter first several letters of the command and press <Tab>, if regard the first keyword of the entered letters as unique, then complete keyword would be displayed.

```
Switch# inf press <Tab>  
Switch# information
```

1.3.2 Command Line Common Error

All commands typed by the user, if they pass the syntax check will be executed correctly; otherwise, error messages are reported to the user. Common error messages are shown in the table below.

English error message	Cause of Error
Invalid Command	No command found
	No keyword found
	Parameter type error
	Parameter value out of range
Incomplete Command	The input command is incomplete
Too many parameters	Too many parameters

1.3.3 History Command

Command line interface provides features like Doskey, which can save history Command entered by user automatically. User can call history Commands saved by command line interface at any time and execute them repeatedly.

Access history command:

Operation	Key	Result
Visit last history command	The up cursor key<↑>	If there are earlier history commands, the last history command would be fetched
Visit next history command	The down cursor key<↓>	If there are later history commands, the next history command would be fetched

1.3.4 Common Command

The regular command is the most frequently used command. For the convenience of operation, the command List, Help, Quit, Exit and Reboot is arranged in all modes.

Common Command:

Operation	Command	Note
Lists the names of command in this mode	List	Execute in any mode
Lists the names of command and their help information in this mode	Help	Execute in any mode
From the current mode back to the login interface	Quit	Execute in any mode
From the current mode back to the last mode, can not back to login interface	Exit	Execute in any mode
Reboot the device	Reboot	Execute in any mode

Configuration Instance

1) Returns the previous layer from port configuration mode, enter the following bold font command and press enter key.

```
Switch(Port) # exit
Switch#
```

2) View the command format name in VLAN setting mode, enter the following bold font command and press enter key.

```
Switch(VLAN) # list
List
Help
Quit
Exit
Reboot
Show vlantype
Enable
Show_IsolateList
Delete_IsolateList
Config
PVLANSetting    <dir>
QVLANSetting    <dir>
```

3) restart the settings in the information view, enter the following bold font command and press enter.

```
Switch(information) # reboot
Please waiting.....
```

Please input hostname and password

Username:

2 PoE Configuration Command



Note

This function is only supported by PoE products.

2.1 Access to the PoE Configuration View

PoE settings include:

- Disable/enable the port PoE function;
- Configure the port priority;
- View the POE status information of the port;
- Configure the maximum POE power and total POE power of the port.

Access to the command of POE settings view:

Operation	Command	Description
Access to the POE settings view	POE	Carry out under system view

Configuration Examples

Access to the port configuration view, enter the following bold commands and press the enter key.

Switch# Poe

Switch (POE) # ?

List	--List commands of current menu
Help	--Help commands of current menu

Quit	--Quit from CLI
Exit	--Exit from current menu
Reboot	--Reboot switch
Power	--Power
Port_maxpower	--Port max power
Total_Power	--MAX Power
Priority	--Priority
Show poe_state	--Show poe state

2.2 Disable/Enable Port POE Function

Access to the commands of resetting POE port and POE chip:

Operation	Command	Description
Disable/enable port POE function	<i>Power {on off} <portlist></i>	{on off}: - On: enable - Off: disable <portlist>: Port 1, 2, 3... or all.

Configuration Examples

Disable the POE function of port 2, enter the following bold command and press the Enter key.

```
Switch(POE)# Power off 2
```

```
[OK]
```

2.3 Configure the POE Parameters of Port

Access to the commands of configuring maximum power, priority and total POE power of the port:

Operation	Command	Description
Configure the maximum power of port	Port_maxpower <i>{10W 15W 30W}</i> <i><portlist></i>	{10W 15W 30W}: port power. <portlist>: port 1, 2, 3... or all.

Operation	Command	Description
Configure the port priority;	Priority <i>{high medium low}</i> <i><portlist></i>	{high medium low}: - High: high priority - Medium: medium priority - Low : low priority <portlist>: port 1, 2, 3... or all.
Configure total POE power	MAX_Power <i><Power></i>	<Power>: total POE power value.

Configuration Examples

1. Configure the maximum power of port 2 to be 15w. Enter the following bold command and press the Enter key.

```
Switch(POE)# Port_maxpower 15w 2
```

```
[OK]
```

2. Configure the priority of port 5 to be high. Enter the following bold command and press the Enter key.

```
Switch(POE)# Priority high 5
```

```
[OK]
```

3. Set the total POE power value to 120w. Enter the following bold command and press the Enter key.

```
Switch(POE)# Total_Power 120
```

```
[OK]
```

2.4 View the POE Status Information of Port

Access to the command of viewing the POE status information of port:

Operation	Command	Description
View the POE status information of port	Show poe_state <i><port></i>	<port>: port 1, 2, 3... or all.

Configuration Examples

View the POE status information of port 2, enter the following bold command and press the Enter key.

Switch (POE) # Show poe_state 2

Status : Disconnect

Class : 0

Current : 0.00

Current : 0.00

Current : 0.00

MAX Power: 30 W

Priority : High

enable : Disabled

3 Port Configuration Command

Enter port configuration view.

Operation	Command	Note
Enter port configuration view	Port	Execute in the system view

```
Switch# Port
Switch(Port)#
```

3.1 Port Information Display

Port state and configuration information

Operation	Command	Note
Port state information display	Show state <portlist>	<portlist>: 1,2,3,.....or all
Port configuration information display	Show config <portlist>	<portlist>: 1,2,3,.....or all

Configuration Instance

1) Display state information of port 3.

```
Switch(Port)# show state 1
      Speed  Port_status  Link_status  Interface_type
port 1  100M      FULL        LOS          TX
```

Display configuration information of port 3.

```
Switch(Port)# show config 1
      Speed      Mode      Port_status      Flow_contorl
Interface_type
port 1  Auto      FULL      Enable      Disable      TX
```

3.1.1 DDM Information Display

DDM state information.

Operation	Command	Note
SFP DDM status information display	DDM <portlist>	<portlist>: 1,2,3,.....or all

Configuration Instance

1. Display DDM information of port 1.

```
Switch(Port)# DDM 1
Common information:
  Transceiver Type      :SFP/SFP+
  Compliance            :10G BASE-LR
  Connector Type        :LC
  WaveLength(nm)        :1310
  Transfer Distance(m)   :10000 (9um)
  Digital Diagnostic Monitoring :YES
  VendorName            :OEM                      H900S013881
2018-12-25
Manufacture information:
  Manu. Serial Number   :H900S013881      2018-12-25
  Manufacturing Date     :2018-12-25
Diagnostic information:
  Temperature(degree Celsius)      :37
  Temp High Threshold              :85
  Temp Low Threshold               : -35
  Voltage(V)                       :3.30
  Voltage High Threshold(V)        :3.48
  Voltage Low Threshold(V)         :3.10
```

```
Bias Current(mA)           :27.03
Bias High Threshold(mA)    :80.00
Bias Low Threshold(mA)     :4.00
RX Power(dBM)              :0.00
RX Power High Threshold(dBM) :-1.00
RX Power Low Threshold(dBM) :-14.40
TX Power(dBM)              :-2.22
TX Power High Threshold(dBM) :-1.00
TX Power Low Threshold(dBM) :-6.00
[OK]
```

3.2 Port Enable

The user can enable or disable ports using the following commands. By default, the port is enabled.

Operation	Command	Note
Port enable	switch <portlist> {enable disable}	<portlist>: 1,2,3,.....or all

Configuration Instance

Disable port 1.

```
Switch (Port) # switch 1 disable
[OK]
```

3.3 Port Flow Control

Enable or disable port flow control.

Operation	Command	Note
Enable port flow control	Flow-con <portlist> enable	<portlist>: 1,2,3,.....or all
Disable port flow control	Flow-con <portlist> disable	<portlist>: 1,2,3,.....or all

Configuration Instance

Enable port 2 flow control

```
Switch (Port) # flow-con 2 enable
[OK]
```

3.4 Port Speed and Working Mode

Configure the speed and duplex state of the port

Operation	Command	Note
Configure the speed and duplex mode of the port	Mode <portlist> <rate>	<portlist>: 1,2,3,.....or all <rate>: • 10h: 10Mbps half duplex; • 10f: 10Mbps full duplex; • 100h: 100Mbps half duplex; • 100f: 100Mbps full duplex; • Auto: port rate auto-negotiation

Configuration Instance

Configure the speed of Port 3 to 100Mbps and working mode to half duplex.

```
Switch (Port) # mode 3 100h
[OK]
```

3.5 Port MDI/MDIX Self-Adaption

Configure straight-through line and cross line self-adaption.

Operation	Command	Note
Configure MDI/MDIX self-adaption	AutoMDI <portlist> <mode>	<portlist>: 1,2,3,.....or all <mode>: • 0: self-adaption • 1: MDI • 2: MDIX

Configuration Instance

Configure Port 3 self-adaptive MDI/MDIX twisted pair.

```
Switch (Port) # autoMDI 3 0
```

```
[OK]
```

4 Bandwidth Configuration Command

Enter bandwidth management view

Operation	Command	Note
Enter bandwidth management view	Bandwidth	Execute in the system view

```
Switch# bandwidth
Switch(Bandwidth) #
```

4.1 Bandwidth Configuration

Ingress bandwidth and egress bandwidth configuration commands.

Operation	Command	Note
Limit Packet Type	Config intype <portlist> {0 1 2 3}	<portlist>:1,2,3,.....or all; {0 1 2 3}: • 0: all frames; • 1: broadcast, multicast and flood unicast data frames; • 2: broadcast and multicast packages only; • 3: broadcast package only

Operation	Command	Note
Configure ingress bandwidth	Config inrate <portlist> <low_bw> <normal_bw> <medium_bw> <high_bw>	<portlist>:1,2,3,.....or all; <low_bw> : low priority queue bandwidth (128k, 256k, 512k, 1M, 2M, 4M, 8M, 16M, 32M, 64M, 128M, 256M, 0 means unlimited); <Normal_bw>: bandwidth of normal priority queue, 1-2 times of lower priority bandwidth; <medium_bw>: bandwidth of medium priority queue, 1-2 times of ordinary low priority bandwidth; <high_bw>: bandwidth of high priority queue, 1-2 times medium priority bandwidth
Configure egress bandwidth	Config egrate <portlist> <bandwidth>	<portlist>:1,2,3,.....or all; <bandwidth> : 128k, 256k, 512k, 1M, 2M, 4M, 8M, 0 means unlimited

Configuration Instance

Set the restrict packet types of port 1 to broadcast packets only, low priority to 128K, normal priority to 256K, medium priority to 512K, high priority to 1M.

```
Switch(Bandwidth)# config intype 1 3
[OK]
Switch(Bandwidth)# config inrate 1 128k 256k 512k 1m
[OK]
```

Configure the egress bandwidth of port 1 as unlimited.

```
Switch(Bandwidth)# config egrate 1 0
[OK]
```

4.2 Bandwidth Display

Display commands of ingress bandwidth and egress bandwidth.

Operation	Command	Note
View limit package type	Show intype <portlist>	<portlist>:1,2,3,.....or all

Operation	Command	Note
View ingress bandwidth information	Show inrate <portlist>	<portlist>:1,2,3,.....or all
View egress bandwidth information	Show egrate <portlist>	<portlist>:1,2,3,.....or all

Configuration Instance

Display ingress bandwidth, egress bandwidth, and limited packet types of port 1.

```
Switch(Bandwidth)# show inrate 1  
port 1 egress bandwidth: unlimited  
Switch(Bandwidth)# show egrate 1  
port 1 egress bandwidth: unlimited  
Switch(Bandwidth)# show intype 1  
port 1 Limit packets: Broadcast only
```

5 Statistics Configuration Command

Enter port statistics configuration view.

Operation	Command	Note
Enter port statistics view	Statistics	Execute in the system view

```
Switch# statistics
Switch(Statistics)#
```

5.1 Port Statistics Configuration

Port statistics configuration.

Operation	Command	Note
Count the frame number and type of ports	Show frames <port>	<portlist>:1,2,3,.....or all
Clean up the frame count	Clean frames	Execute in port statistics view
Displays information of the MAC address table	Show mac <port>	<port>: • 0: all ports • >: 1, 2, 3, or all • 11: CPU port

Configuration Instance

Count the frame number of port 1.

```
Switch(Statistics)# show frames 1
InGoodOctets    20887291          OutOctets       3177472
InbadOctets     0              OutUnicast      4505
```

InUnicasts	5138	OutBroadCasts	31
InBroadcasts	250416	OutMulticasts	1926
InMulticasts	15860	OutPause	0
InPause	0	Excessive	0
InUndersize	0	Collisions	0
InFragments	0	Deferred	0
InOversize	0	Single	0
InJabber	0	Multiple	0
IN RxErr	0	OutFCSErr	0
INFCSErr	0	Late	0

6 IGMP Configuration Command

Enter IGMP snooping view

Operation	Command	Note
Enter the multicast filter configuration view	IGMP Snooping	Execute in the system view

```
Switch# igmp  
Switch(Igmp) # ?
```

6.1 IGMP Snooping Configuration Command

IGMP-snooping configuration

Operation	Command	Note
Configure IGMP snooping enablement	Set IGMP {enable disable}	{enable disable}: • Enable • Disable
Configure IGMP query enablement	Set query {enable disable}	{enable disable}: • Enable • Disable
Configure the IGMP query interval	Query <time>	<time>: 60-1000s
Display IGMP information	Show MAClist	Execute under the IGMP snooping view

Configuration Instance

Enable IGMP snooping and IGMP query, query interval set to 125s and display IGMP information.

```
Switch(MultiFilter)# set igmp enable
[OK]
Switch(MultiFilter)# set query enable
[OK]
Switch(MultiFilter)# Query 125
[OK]
Switch(MultiFilter)# show MAClist
IGMP Snooping query time 125 seconds
[ 1] MAC List: 01-00-5E-00-00-FB Port: 1
```

7 LLDP Configuration Command

Enter LLDP View

Operation	Command	Note
Enter LLDP configuration view	LLDP	Execute in the system view

```
Switch# lldp  
Switch(Lldp) #
```

7.1 LLDP Enable

Enable/disable LLDP configuration command

Operation	Command	Note
Enable/disable LLDP	Lldp {enable disable}	{enable disable}: • Enable • Disable

7.2 Display LLDP Information

Display LLDP information

Operation	Command	Note
Display LLDP configuration	Show	Execute in LLDP configuration view

7.3 LLDP Configuration

LLDP configuration command

Operation	Command	Note
Send LLDP configuration	Config <TxInterval> <TxHold> <TxDelay> <TxReinit>	<TxInterval>: Tx Interval [5-32768] <TxHold>: Tx Hold [2-10] <TxDelay>: Tx Delay [1-8192 and <= TxInterval/4] <TxReinit>: Tx Reinit [1-10]
Port configuration	Set <portlist> {0 1 2 3}	<portlist>: 1,2,3,.....or all {0 1 2 3}: 0: Disabled 1: Rx Tx 2: Tx only 3: Rx only
Display neighbor information	Print neighbors	Execute in LLDP configuration view
Display local LLDP statistics	print local	Execute in LLDP configuration view
Clear local LLDP statistics	clear	Execute in LLDP configuration view

8 VLAN Configuration Command

Enter VLAN configuration view:

Operation	Command	Note
Enter VLAN configuration view	Vlan	Execute in the system view

```
Switch# vlan  
Switch (VLAN) #
```

8.1 VLAN Type Configuration and Display

VLAN type configuration and display commands.

Operation	Command	Note
Enter VLAN information view	Show vlantype	Execute in VLAN view
Select the VLAN type	Enable {0 1}	{0 1}: 0: port-based VLAN - VLAN of 1: 802.1Q

Configuration Instance

Enable port VLAN and display the VLAN type.

```
Switch (VLAN) # enable 0  
Based on port VLAN is enable!  
[OK]  
Tip: This configuration will be validated after restarting
```

```
Switch(VLAN) # show vlantype
```

Based on port VLAN is enable!

8.2 Port Isolation

Configure port isolation.

Operation	Command	Note
Configure isolated port	Config <isolatelist> <portlist>	<Isolatelist>: isolation group 1, 2, 3, 4, 5 <portlist>: port 1,2,3,.....or all
Delect isolated entry	Delete_IsolateList <isolatelist>	<Isolatelist>: isolation group 1, 2, 3, 4, 5
Display isolated entry	Show_IsolateList <isolatelist>	<Isolatelist>: isolation group 1, 2, 3, 4, 5

8.3 Port-based VLAN

Enter port VLAN view.

Operation	Command	Note
Port VLAN view	PVLANSetting	Execute in VLAN view

```
Switch(VLAN) # PVLANSetting
```

```
Switch(PVlan) #
```

Port VLAN configuration

Operation	Command	Note
Add Vlan	Add <item> <portlist>	<item> : VLAN ID range 1-4094 <portlist>: 1,2,3,.....or all
Delete VLAN	Delete <items>	<items>: 1, 4, 5-4094 or all
View Vlan information	Show vlan <items>	<items>: 1, 4, 5-4094 or all

Configuration Instance

Add VLAN 2 with port members of port 2 and port 3.

```
Switch(PVlan) # add 2 2,3
[OK]
```

8.4 IEEE802.1Q VLAN

Enter 802.1Q VLAN view

Operation	Command	Note
802.1Q Vlan view	QVLANSetting	Execute in VLAN view

```
Switch(Vlan) # qVLANSetting
Switch(QVlan) #
```

802.1Q VLAN Configuration

Operation	Command	Note
Set port type	Config type <portlist> {Trunk Access}	<portlist>:1,2,3,...or all {Trunk Access}: - Trunk: keep VID unchanged - Access: replace VID with port default VID
Pvid setting	config pvid <portlist> <pvid>	<portlist> : 1, 2, 3... or all, 0 represents the CPU port <pvid>: 1-4094
Add Vlan	Add <vid> <portlist> <typelist>	<vid>: 1-4094 <portlist> : 1, 2, 3... or all, 0 represents the CPU port <typelist>: - M: UnModified - U: UnTagged - T: Tagged
Delete VLAN	Delete <vidlist>	<Vidlist>: 1-4094 or all
View vlan information	Show vlan <vidlist>	<Vidlist>: 1-4094 or all
View port pvid	Show pvid <portlist>	<portlist> : 1, 2, 3... or all, 0 represents the CPU port
View port type	Show type <portlist>	<portlist> : 1, 2, 3... or all, 0 represents the CPU port

Configuration Instance

Add VLAN 3, port 2-3, member type UnModified.

```
Switch(QVlan) # add 3 2-3 M
VID           :    3
Port_cpu      : ----
port 1        : ----
port 2        : UnModified
port 3        : UnModified
...
[OK]
```

9 QoS Configuration Command

Enter QoS configuration view.

Operation	Command	Note
Enter QoS configuration view	QoS	Execute in the system view

```
Switch# QoS  
Switch(QoS) #
```

9.1 QoS Queue Mechanism Configuration

QoS queue mechanism configuration command.

Operation	Command	Note
QoS Queue Mechanism Configuration	Queuingm {0 1}	{0 1}: 0: weighted average scheduling algorithm 1: strict priority scheduling algorithm

Configuration Instance

QoS queue mechanism was set as weighted average scheduling algorithm (8:4:2:1).

```
Switch(QoS) # queuingm 0  
[OK]
```

9.2 ToS and CoS Enablement

ToS and CoS enablement configuration command

Operation	Command	Note
ToS and CoS enablement	Check <portlist> {0 1 2 3}	<portlist>:1,2,3,.....or all {0 1 2 3}: • 0: Forbid • 1: use ToS • 2: use Cos • 3: all use

Configuration Instance

1) Enable the Cos of port 1, 3, 4 and 6.

```
Switch(QoS) # Check 1,3,4,6 1
[OK]
```

2) Enable ToS of port 2, 3, 5 and 6.

```
Switch(QoS) # Check 2,3,5,6 2
[OK]
```

9.3 ToS/CoS Value Mapping

The user can configure the ToS/CoS value mapping using the following command.

Operation	Command	Note
CoS value mapping configuration	Config cos <coslist> <classlist>	<coslist> : CoS mapping value, 0, 1, 2-7 <classlist>: • L: low • N: normal • M: medium • H: high

Operation	Command	Note
ToS value mapping configuration	Config tos <dscplist> <classlist>	<dscplist> : ToS mapping value, 1, 2, 3-64 <classlist>: • L: low • N: normal • M: medium • H: high

Configuration Instance

1) set 0, 2, 5, and 7 of CoS value to correspond to the priority queues of Low, Normal, Medium, and High respectively.

```
Switch(QoS) # config cos 0,2,5,7 1,n,m,h
CoS value:0    priority:Low
CoS value:2    priority:Normal
CoS value:5    priority:Medium
CoS value:7    priority:High
```

2) set 1,17,42 and 62 of Dscp values to correspond to the priority queues of Low, Medium, High and Normal.

```
Switch(QoS) # config dscp 1,17,42,62 1,m,h,n
DSCP ( 1) :Low           DSCP (17) :Medium           DSCP (42) :High
DSCP (62) :Normal
```

9.4 Default Port Priority Configuration

The user can configure the default port priority using the following command.

Operation	Command	Note
Default Port Priority Configuration	Default priority <portlist> <0-7>	<portlist>:1,2,3,.....or all <0-7> : port priority

Configuration Instance

Set the default priority of port 1 to 3.

```
Switch(QoS) # default priority 1 3
```

[OK]

9.5 Display QoS Configuration Information

The user can view the QoS information using the following command.

Operation	Command	Note
View the QoS queue mechanism	Show queuingm	Execute in QoS view
View CoS value mapping	Show cos <coslist>	<coslist> : cos mapping value, 0, 1, 2-7
View ToS value mapping	Show tos <dscplist>	<dscplist> : tos mapping value, 1, 2, 3-64
View ToS/CoS enablement state	Show state <portlist>	<portlist>:1,2,3,.....or all
View the default port priority	Show default <portlist>	<portlist>:1,2,3,.....or all

10 Ring Configuration Command

Enter ring configuration view.

Operation	Command	Note
Enter ring configuration view	ring	Execute in the system view

```
Switch# ring
Switch(Ring)#
```

10.1 Enable or Disable Ring Network Function

Users can set up ring network enablement using the following command.

Operation	Command	Note
Ring network enablement	Open {3 4}	{3 4}: 3: enable ring3; 4: enable rstp
Ring network close	Close {0 3 4}	{0 3 4}: 0: disable ring network function; 3: disable Ring3; 4: disable rstp

Configuration Instance

Enable ring3

```
Switch(Ring)# Open 3
[OK]
Tip: This configuration will be validated after restarting
```

10.2 Ring3 Configuration

Once Ring3 is enabled, Ring3 can be set using the following command.

Operation	Command	Note
Configure ring3	Config ring3 {1 2} <id> <LoopType> <Ringport> <hellotime> <Master>	{1 2}: 1 represents ring group 1, 2 represents ring group 2 <id> : represents the ring network identity, and the value is 0-255 <LoopType>: Loop type • 0: Single • 1: Couple • 2: chain • 3: Daul_homing <portlist>: 2 ring network ports, such as: 1, 2 <hellotime>: value range is [0-300]*100ms <Master>: single-ring master-slave station • 0: Master • 1: Slave
Modify ring3	Modify ring3 {1 2} <options> <parameter>	{1 2}: 1 represents ring group 1, 2 represents ring group 2 <options>: the options that can be modified are as follows: • -h: Hello packet interval time, with the value of [0--300]*100ms. • -i: ring network ID, ranging [0--255] • -t: ring network type, ranging {0 1 2 3} • -p: ring network port • -s: ring network status, {enable or disable} • -m: ring network master-slave station, with the value of {0:Master 1:Slave} <parameter>: parameters matched with -h -i -p

Configuration Instance

Configure Port 1 and Port 2 to the first group loop port, loop id is 1, hello time is 0 and loop type is Couple.

```
Switch(Ring)#Open 3 //enable Ring3
```

[OK]

Tip: This configuration will be validated after restarting
Switch(Ring)#config ring3 1 1 1 1,2 0 1// configure port 1, 2 to
Ring3, Ring type to Couple, no master station

[OK]

Tip: This configuration will be validated after restarting

10.3 Display Ring Network Configuration Information

After configuring ring network, user can use the following command to view ring network configuration information.

Operation	Command	Note
Display Ring Network Configuration Information	show ring	Execute in Ring network view
Display ring network status	show ring_state	Execute in Ring network view

Configuration Instance

View the current Ring network configuration information

```
Switch(Ring)# show ring
Ring III Enable
Group:1 ID: 1 port:6,5 type: Couple Hello_time: 0*100ms
Mster:Slave state:Enable
Group:2 ID: 2 port:3,4 type: Single Hello_time: 0*100ms
Mster:Slave state:Disable
```

10.4 RSTP Configuration

Once RSTP is enabled, RSTP can be set using the following command.

Operation	Command	Note
Configure RSTP status	Config rstp_state <priority> <hellotime> <delaytime> <maxage>	<priority>: RSTP priority {0 4096 8192 12288 16384 20480 24576 28672 32768 36864 40960 45056 49152 53248 57344 61440} <hellotime> : polling interval time, ranging 1-10s <delaytime> : forwarding delay time, ranging from 4 to 30s <maxage> : address survival time, ranging 6-40s
Modify RSTP state parameter	Modify rstp_state <options> <parameter>	<options>: -P: priority {0 4096 8192 12288 16384 20480 24576 28672 32768 36864 40960 45056 49152 53248 57344 61440} -h: polling interval time, ranging from 1 to 10s -d: forwarding delay time, ranging from 4 to 30s -m: address survival time, ranging 6-40s <parameter>
Configure RSTP port	Config rstp_port <port> <pathcost> <portpriority> <p2p> <edge> <enable>	<port>: RSTP port <pathcost> : port path cost, ranging 0-200000000 <portpriority> : port priority, the range is {0 16 32 48 64 80 96 112 128 144 160 176 192 208 224 240} <p2p> : point-to-point network connection, values are {no yes auto} <edge>: directly connected terminal, values are {no yes} <enable> : participate in spanning tree, values are {no yes}

Operation	Command	Note
Modify the RSTP port parameters	Modify rstp_port <port> <options> <parameter>	<port>: RSTP port <options>: • -c: port path cost, ranging 0-200000000 • -p: port priority, ranging {0 16 32 48 64 80 96 112 128 144 160 0 176 1 192 3 208 3 224 4 240} • -t: point-to-point network connection, values are {no yes auto} • -e: direct connection terminal, values are {no yes} • -a: participate in spanning tree, values are {no yes} <parameter>

Configuration Instance

1) Configure the path cost of RSTP port 1 to 2000.

```
Switch(Ring)# modify rstp_port 1 -c 2000
```

```
[OK]
```

Tip: This configuration will be validated after restarting

2) Configure priority of switch of rstp to 4096

```
Switch(Ring)# modify rstp_state -p 4096
```

```
[OK]
```

Tip: This configuration will be validated after restarting

10.5 Display RSTP Current Status

After configuring RSTP, user can use the following command to view the current status of RSTP.

Operation	Command	Note
Display RSTP current status	RSTP Status	Execute in Ring network view

11 LoopDetection Configuration Command

Enter the loop protection view.

Operation	Command	Note
Enter the loop protection view	LoopDetection	Execute in the system view

```
Switch# LoopDetection  
Switch (Loop) #
```

11.1 Display Port State

Display port status.

Operation	Command	Note
Display port state	Show Status <portlist>	<portlist>:1,2,3,.....or all

Configuration Instance

Display loop detection status of Port 1.

```
Switch (Loop) # show status 1  
Loop Time: 30  
Range Time: 3  
STATE ENABLE Trap
```

11.2 Enable Port Loopback Detection

Enable port loopback detection;

Operation	Command	Note
Enable port loopback detection	Enable <portlist> <enable disable>	<portlist>:1,2,3,.....or all <enable disable>: • Enable • Disable

Configuration Instance

Set port 1 to enable loop detection:

```
Switch(Loop)# enable 1 enable
[OK]
```

11.3 Enable the Port to Send Trap

Enable the port to send trap:

Operation	Command	Note
Enable the port to send trap	Trap Enable <portlist> <enable disable>	<portlist>:1,2,3,.....or all <enable disable>: • Enable • Disable

Configuration Instance

Set port 1 to enable sending trap function:

```
Switch(Loop)# trap 1 enable
[OK]
```

11.4 Configure Loop Detection Time

Configure loop detection time.

Operation	Command	Note
Loop detection time after loop formation	Config_LoopTime <time>	<time>: time interval, 1--600, unit: second.
Loop detection time before loop formation	Config_RangeTime <time>	<time>: time interval, 1--60, unit: second.

Configuration Instance

Set the loop detection interval to 5 seconds.

```
Switch (Loop) # config_RangeTime 10  
[OK]
```

12 Trunk Configuration Command

Enter port trunking view.

Operation	Command	Note
Enter port trunking configuration view	trunk	Execute in the system view

```
Switch# trunk  
Switch(Trunk) #
```

12.1 Port Trunking Configuration

The user can configure the port trunking using the following command.

Operation	Command	Note
Port Trunking Configuration	Config <trunkgroup> <portlist>	<trunkgroup> : trunk group 1, 2, 3 <portlist>: trunking port 1,2,3,.....or all
Port trunking clear	Clean <trunkgroup>	<trunkgroup> : 1, 2, 3 respectively represent the trunk group 1, 2, 3; all represents all trunk groups

Configuration Instance

Set ports 2 and 3 to trunk group 1.

```
Switch (Trunk) # config 1 2,3  
[OK]
```

12.2 Port Trunking Display

Users can view port trunking configuration information using the following command.

Operation	Command	Note
Display configuration information of port trunking	Show <trunkgroup>	<trunkgroup> : 1, 2, 3 respectively represent the trunk group 1, 2, 3; All represents all trunk groups

Configuration Instance

View the port trunking information of trunk group 1.

```
Switch(Trunk)# show 1
Group: 1
    state: enable
Port: 2,3
```

13 SNMP Configuration Command

Enter SNMP configuration view.

Operation	Command	Note
Enter SNMP configuration view	snmp	Execute in the system view

```
Switch# snmp  
Switch(Snmp) #
```

13.1 SNMP Enable

SNMP enable and disable configuration command.

Operation	Command	Note
Enable/Disable SNMP	snmp {enable disable}	{enable disable}: • Enable: enable SNMP • Disable: disable SNMP

Configuration Instance

Enable SNMP function

```
Switch(Snmp) # snmp enable  
[OK]
```

13.2 SNMP Configuration

Community name and gateway address configuration commands.

Operation	Command	Note
Configure SNMP Read/Write community	Config <orcomm> <rwcomm>	<orcomm>: read-only community name <rwcomm>: read-write community name
Configure SNMP gateway.	Trap {1 2 3} <ip>	{1 2 3}: IP address 1-3 <IP>: the IP address of the trip destination, such as 192.168.1.1

Configuration Instance

Set SNMP gateway address 2 to 192.168.11.1.

```
Switch(Snmp) # trap 2 192.168.11.1
[OK]
```

13.3 SNMP Display

SNMP display command.

Operation	Command	Note
Display SNMP Information	SHOW	Execute in SNMP view

Configuration Instance

Display SNMP configuration information.

```
Switch(Snmp) # show

The only read community name      :public

The read or write community name:private

The SNMP gateway                  :192.168.1.1
```

The SNMP gateway :192.168.11.1

14 Alarm Configuration Command

Enter alarm configuration view.

Operation	Command	Note
Enter alarm configuration view	Alarm	Execute in the system view

```
Switch# alarm  
Switch (Alarm) #
```

14.1 Alarm Configuration/Delete



Note

- Single power supply device does not support power off alarm.
- After the dual power supply device is connected to two power supplies at the same time, it supports power failure alarm.

The user can configure the alarm using the following commands

Operation	Command	Note
Relay Output Type	type {0 1}	{0 1}: • 0: normally closed • 1: normally open

Operation	Command	Note
Configure the power supply alarm.	Power relay {1 2 all} {enable disable}	{1 2 all}: 1: represents the first power supply; 2: represents the second power supply; - All: all the power supplies {enable disable}: - Enable; - Disable
Configure the port alarm.	Port relay <portlist> {enable disable}	<portlist>:1,2,3,.....or all {enable disable}: - Enable; - Disable
close the alarm information	Close alarm	Execute in alarm view

Configuration Instance

1) enable the alarm of port 1, 3, 5 and 7.

```
Switch(Alarm) # port relay 1,3,5,7 enable
[OK]
```

2) disable the alarm function.

```
Switch (Alarm) # close alarm
[OK]
```

14.2 Display Alarm Information

The user can view the alarm information using the following command.

Operation	Command	Note
Display relay output type	Show type	Execute in alarm view

Operation	Command	Note
Display power supply alarm information	Show power {1 2 all}	{1 2 all}: 1: represents the first power supply; 2: represents the second power supply; All: represents all the power supply
Displays alarm information of the port	Show port <portlist>	<portlist>:1,2,3,.....or all

Configuration Instance

View alarm information of the port

```
Switch(Alarm) # show type  
Relay type: open
```

15 Mirroor Configuration Command

Enter port mirroring configuration view.

Operation	Command	Note
Enter port mirroring configuration view	Mirror	Execute in the system view

```
Switch# mirror
Switch(Mirror) #
```

15.1 Port Mirroring Configuration/Delete

The user can configure/delete the port mirroring using the following command.

Operation	Command	Note
Configure port mirroring	Config {0 1 2} <mirror_port> <port>	{0 1 2}: 0: means collecting all data; 1: means collecting ingress data 2: means collecting data of egress <mirror_port > : mirror port 1, 2, 3... Or all <portlist>: collect port 1,2,3,.....or all
Delete mirror information	Close mirror	Execute in port mirroring view

Configuration Instance

Configure port 3 to collect all data from ports 1 and 2.

```
Switch(Mirror)#config 0 1,2 3  
[OK]
```

15.2 Displays Port Mirroring Information

View mirror information command:

Operation	Command	Note
Display mirror information	Show mirror	Execute in port mirroring view

Configuration Instance

View port mirroring information.

```
Switch(Mirror)#show mirror  
Mirror portlist: 1,2  
Collect port   : 3
```

16 Manage Configuration Command

Enter system management view

Operation	Command	Note
Enter system management view	Manage	Execute in the system view

```
Switch# manage
Switch (Manage) #
```

16.1 Network Diagnosis Setting

Enter system management view:

Operation	Command	Note
Network Diagnosis Setting	Ping <IP_address> <options> <content> <options> <content> <options>	<IP_address> : IP address, for example 192.168.1.254 <options>: • -t: Time To Live • -l: Data size • -n: Number of echo requests to send <content> : the parameter that matches -t/-l/-n

Configuration Instance

The Ping address of the device is 192.168.5.117, and the packet size is 64, 2 messages will be sent.

```
Switch(Manage)# ping 192.168.5.117 -l 64 -n 2
Pinging 192.168.5.117 with 64 bytes of data:
Reply from 192.168.5.117: bytes=64 time<0ms TTL=64
Reply from 192.168.5.117: bytes=64 time<0ms TTL=64
Ping statistics for 192.168.5.117:
    Packets: Sent = 2, Received = 2, Lost = 0 (0.000000% loss).
Approximate round trip times in milli-seconds:
    Minimum = 0ms, Maximum = 0ms, Average = 0ms
```

16.2 Display Modbus TCP Function

Display Modbus TCP:

Operation	Command	Note
Display Modbus TCP	show modbus	Execute in system management view

Configuration Instance

Display Modbus TCP Function:

```
Switch(Manage)# show modbus
The Modbus is Disable !
```

16.3 Enable Modbus TCP Function

Enable Modbus TCP:

Operation	Command	Note
Enable Modbus TCP	ModBus {Enable Disable}	{Enable Disable} • Enable; • Disable

Configuration Instance

Enable the Modbus TCP function:

```
Switch(Manage)# modbus Enable
```

[ok] !

16.4 Display Device Network Address

View IP, subnet mask, default gateway and DNS address of the device.

Operation	Command	Note
Display IP, subnet mask, default gateway and DNS address of the device.	show net_address	Execute in system management view

Configuration Instance

View IP, subnet mask, default gateway of the device.

```
Switch(Manage) # show net_address
Device IP address   : 192.168.1.254
Device mask address : 255.255.255.0
Device gateway      : 192.168.1.1
DNS address         : 202.96.134.133
```

16.5 IP Address, Default Gateway, DNS Address Settings

The user can set the device IP, the default gateway address with the following command.

Operation	Command	Note
Device IP address configuration	IP <IP_address> <mask>	<IP_address>: IP address <mask>: subnet mask
Default gateway configuration	Gateway <gateway>	<gateway>: gateway address
DNS server address configuration	DNS <Server>	<Server>: DNS address

Configuration Instance

Configure the IP address of the device to 192.168.5.25, the subnet mask to 255.255.255.0 and the default gateway to 192.168.5.1

```
Switch(Manage) # IP 192.168.5.25 255.255.255.0
[OK]
The Switch is rebooting.Please waiting.....
Switch(Manage) # gateway 192.168.5.1
[OK]
The Switch is rebooting.Please waiting.....
```

16.6 DHCP Automatic Acquisition of IP

Users can enable DHCP clients to automatically obtain the IP address assigned by DHCP server.

Operation	Command	Note
DHCP Enable Configuration	DHCP {enable disable}	{enable disable}: Enable or disable DHCP.

16.7 System Log Information

The user can set the device IP, the default gateway address with the following command.

Operation	Command	Note
Configure the server address information of the syslog	Syslog <ip_address> <port_num>	<ip_address>: syslog server IP address <port_num>: TCP port of syslog server

16.8 System Timeout Settings

The user can set the system timeout with the following command.

Operation	Command	Note
System timeout settings	Set <time_out>	<time_out>: system timeout, value range is [0-60], unit: min; 0 means to disable timeout function

Configuration Instance

Set the system timeout to 10 minutes.

```
SWitch (manage) # set 10
[OK]
```



Note

The system timeout is used to define the timeout period without any operation after entering CLI configuration mode. After the system timeout, it will automatically back to user mode and re-authenticate the user name and password.

16.9 User Name and Password Settings

The user can set the user name and password with the following command.

Operation	Command	Note
User name configuration	Hostname <hostname>	<hostname>: username string
Password configuration	Password <password> <password>	<password> : password string

16.10 Restore Factory Settings

The user can restore the device to factory settings with the following command.

Operation	Command	Note
Restore the device to factory settings.	Restore	Execute in system management view

Configuration Instance

Restore the device to factory settings.

```
Switch (manage) # restore  
Restore Settings or not? (yes/no) yes //press <Y>  
Wait.....
```

17

EventLog Configuration Command

Enter log information view.

Operation	Command	Note
Enter log information view	Eventlog	Execute in the system view

```
Switch# eventLog
Switch(EventLog) #
```

17.1 Log Information Enable

Log information enable configuration.

Operation	Command	Note
Log information enable configuration	EventLog {Enable Disable}	Execute in log information view.

Configuration Instance

Enable logging.

```
Switch(EventLog) # eventLog enable
[OK]
```

17.2 Log Information Type

Log information type configuration.

Operation	Command	Note
Log information type configuration	LogType {0 1 2 3}	{0 1 2 3}: • 0: all messages • 1. Startup information • 2: operation information • 3: link information
Delete log record	ClearEventLog	Execute in log information view.

Configuration Instance

Log device connection information.

```
Switch(EventLog)# logType 3
[OK]
```

17.3 Log Information Status Display

Log information status display.

Operation	Command	Note
Log information status	Show EventLog	Execute in log information view.

Configuration Instance

Display the logging information status.

```
Switch(EventLog)# show EventLog
Log Record   : Enable
Display Type : Connection
```

18 Multicast Configuration Command

Enter the static multicast filter view.

Operation	Command	Note
Enter the static multicast view	Multicast	Execute in the system view

```
Switch# multicast  
Switch(Multicast)#
```

18.1 Display Multicast Filter List

Display command of static multicast address.

Operation	Command	Note
Displays static multicast filter address	Show multicast	Execute in the multicast view

Configuration Instance

Displays information of the static address table.

```
Switch(Multicast)# show multicast  
( 1)  MAC : 01-22-33-44-55-66  
      PORT: 1,2,3
```

18.2 Add Static Multicast Address

Multicast address adding command

Operation	Command	Note
Add multicast address	Add <macaddress> <portlist>	<macaddress>: multicast address in XY-XX-XX-XX-XX-XX or XY.XX.XX.XX.XX.XX, X is any hexadecimal number <portlist>: 1,2,3,.....or all

Configuration Instance

Add a multicast address of 01-22-33-44-55-66 with member ports of 1,2,3.

```
Switch(Multicast)# add 01.22.33.44.55.66 1-3  
[OK]
```

18.3 Delete Static Multicast Address

Command of deleting multicast address

Operation	Command	Note
Delete multicast address	Delete <1-15>	<1-15> : entry 1-15 or all multicast address

Configuration Instance

Delete entry 1 of static multicast address.

```
Switch(Multicast)# delete 1  
[OK]
```

19 Information Configuration Command

Enter device information view:

Operation	Command	Note
Enter device information view	information	Execute in the system view

```
Switch# information  
Switch(information)#
```

19.1 Display Device Information

Display device information command.

Operation	Command	Note
Display system version	show version	Executable in the device information view
Display device MAC address	show mac	Executable in the device information view
Display model, name of the device	show others	Executable in the device information view

19.2 Configure Device Information

Configure device information, including type, name, description of the device, contact information, and so on.

Operation	Command	Note
Configure Device Information	Config <options> <string>	<options>: • -t: device type • -n: device name • -p: device description • -c: contact information <string>: parameter



Notice

Input type should conform to GB2312 code type, otherwise display error will occur.

19.3 Clean Device Information

Clean up device information, including type, name, number, description of the device and contact information.

Operation	Command	Note
Clean Device Information	Clean <options>	<options>: • -t: device type • -n: device name • -p: device description • -c: contact information

20 Dot1X Configuration Command

Enter IEEE802.1X View:

Operation	Command	Note
Enter IEEE802.1X View	Dot1X	Execute in the system view

```
Switch# Dot1x
Switch(Dot1x)# ?
```

20.1 Global IEEE802.1X Authentication Enable

IEEE802.1X authentication enable global configuration command.

Operation	Command	Note
Enable IEEE802.1X Authentication	enable dot1x	Execute in IEEE802.1X view
Disable IEEE802.1X Authentication	disable dot1x	Execute in IEEE802.1X view

20.2 IEEE802.1X Authentication Configuration

Related configuration commands of IEEE802.1X authentication.

Operation	Command	Note
IEEE802.1X port configuration enable configuration	port {enable disable} <portlist>	{enable disable}: enable/disable <portlist>:1,2,3,.....or all

Operation	Command	Note
Radius server authentication mode		{local_type server_type}: - local_type: local - server_type: remote
Add the login account and password of authentication database	add-user name <name> passwd <passwd>	<name>: username <passwd>: password
Delete the login account of authentication database	del-user name <name>	<name>: username
Certification time	reauth-period <seconds>	<seconds>: 60-60000, unit: seconds
Authentication Server Address	auth-server ip <ip_address> port_num <port_num> shared_secret <secret>	<ip_address>: authentication server IPv4 address <port_num>: port number of the authentication server, 0-65535 <secret>: shared password for authentication

21 Time Configuration Command

Enter time configuration view.

Operation	Command	Note
Enter time configuration view	Time	Execute in the system view

```
Switch# time
Switch(Time)#
```

21.1 Time Configuration

Time Configuration Command

Operation	Command	Note
Enable time configuration	enable	Execute in time configuration view
Disable time configuration	close	Execute in time configuration view
SNTP time synchronization period	Interval <Time>	<Time>: time interval, unit: seconds.
World time zone selection	Zone <time-zone>	<time-zone>: World Time Zone, {-12 -11 -10 -9 -8 -7,1 -7,2 -6,1 -6,2 -5,1 -5,2 -4,1 -4,2 -3,1 -3,2 -2,1 +0,1 +0,2 +1,1 +1,2 +2,1 +2,2 +3 +4 +5 +6 +7 +8,1 +8,2 +9 +10,1 +10,2 +11 +12,1 +12,2}
NTP server address	Server <serveraddr>	<serveraddr>: NTP server address

Configuration Instance

Set the corresponding mapping value of the world time zone to + 8,1.

```
Switch(Time)# zone +8, 1
```

```
[OK]
```

21.2 Displays the Time Configuration View

Displays time configuration information.

Operation	Command	Note
Displays the time configuration information	Show	Execute in the time view

Configuration Instance

Displays time configuration information.

```
Switch(Time)# show
Time Configuration:Enable
The World TimeZone:(GMT+08:00) China, Hong Kong, Australia
Western
The NTP server:time-a.nist.gov
The SNTP Synchronization interval:10 (s)
The system time:2020-12-29,01:08:47, Tue
```

22 TFTP Configuration Command

Enter TFTP Configuration View.

Operation	Command	Note
Enter TFTP configuration view	TFTP	Execute in the system view

```
Switch# TFTP  
Switch(TFTP) #
```

22.1 TFTP Configuration

TFTP configuration command

Operation	Command	Note
IP address of the TFTP server	Server <ip_address>	<ip_address> : TFTP server IP address, for example 192.168.1.254
Upload configuration file or update program	Get <File_name>	<File_name> : program name, such as XXXX. cfg.
Download Configuration File	Put <File_name>	<File_name> : program name, such as XXXX. cfg.

22.2 Display TFTP Configuration Information

Display TFTP configuration information.


Operation	Command	Note
Display TFTP Configuration Information	Show TFTP_config	Execute in the TFTP view

Configuration Instance

Display TFTP configuration information.

```
Switch(TFTP) # show tFTP_config  
TFTP Server ip: 192.168.1.1
```

3onedata

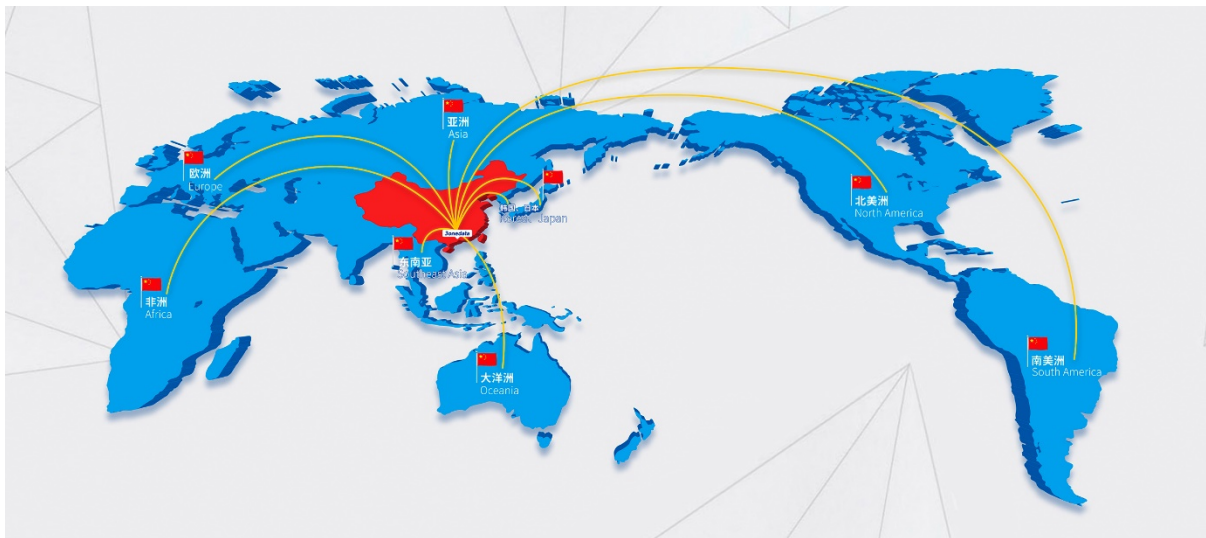

3onedata Co., Ltd.

Headquarter address: 3/B, Zone 1, Baiwangxin High Technology Industrial Park, Song Bai Road,
Nanshan District, Shenzhen, 518108, China

Technology support: tech-support@3onedata.com

Service hotline: 400-880-4496

Official Website: <http://www.3onedata.com>