



12-Port Layer 2 Industrial Ethernet Switch User Manual

Document Version: 01

Issue Date: 09/20/2024

Preface

This Switch User Manual has introduced:

- Product features
- Product network management configuration
- Overview of related principles of network management

Audience

This manual applies to the following engineers:

- Network administrators responsible for network configuration and maintenance
- On-site technical support and maintenance personnel
- Network engineer

Port Convention

The port number in this manual is only an example, and does not represent the actual port with this number on the device. In actual use, the port number existing on the device shall prevail.




Text Format Convention


Format	Description
" "	Words with "" represent the interface words. Such as: "Port No.".
>	Multi-level path is separated by ">". Such as opening the local connection path description: Open "Control Panel> Network Connection> Local Area Connection".
Light Blue Font	It represents the words clicked to achieve hyperlink. The font color is as follows: 'Light Blue'.
About this chapter	The section 'about this chapter' provides links to various sections of this chapter, as well as links to the Principles/Operations Section of this chapter.

Icon Convention

Format	Description
 Notice	Remind the announcements in the operation, improper operation may result in data loss or equipment damage.
 Warning	Pay attention to the notes on the mark, improper operation may cause personal injury.
 Note	Conduct necessary supplements and explanations for the description of operation content.
 Key	Configuration, operation, or tips for device usage.
 Tips	Pay attention to the operation or information to ensure success device configuration or normal working.

Button Operation Convention

Format	Description
	There is a logout button in the upper right corner of the webpage. After clicking it, the webpage returns to the login page.
	There is a port button in the upper right corner of the webpage. Click or press F2 to view the port status, and press F2 or Esc to close the port status page.
	There is a restart button in the upper right corner of the webpage. After clicking, a restart confirmation box pops up. After confirmation, the device will restart.
	There is a Save button in the upper right corner of the webpage. Click it to save the current device configuration. After setting the device, the save icon will flash to remind the user to save the configuration, so as to avoid losing unsaved configuration information due to restart and other operations.
	Click the Add button to add a line of configuration. Note that repeated configuration may result in data overwrite.
	Check the line to be deleted, and then click the Delete button to delete the configuration.
	Check the line to be configured, and then click the configure button to enter the configuration page.

Format	Description
	Click the function status button to switch the function status,  means on and  means off.
	Click the Set button to submit the current configuration.
	Click the “Clear” button to clear the information of current page.
	Click the Refresh button to refresh the information of current page.

Revision Record

Version No.	Revision Date	Revision Note
01	09/20/2024	Product release

Contents

PREFACE.....	1
CONTENTS.....	1
1 LOGIN TO THE WEB INTERFACE	1
1.1 SYSTEM REQUIREMENTS FOR WEB BROWSING	1
1.2 SET THE IP ADDRESS OF PC.....	1
1.3 LOGIN TO THE WEB CONFIGURATION INTERFACE	2
2 SYSTEM INFORMATION	4
3 LOGIN CONFIGURATION.....	6
3.1 IP ADDRESS	6
3.1.1 IPv4	6
3.2 USER.....	7
3.3 PROTOCOL AUTHORIZATION	8
4 PORT CONFIGURATION.....	10
4.1 PORT SETTINGS	10
4.2 LINK AGGREGATION	12
4.2.1 Link Aggregation.....	12
4.2.2 Aggregation Protection.....	14
4.3 PORT SPEED LIMIT.....	15
4.4 STORM CONTROL	17
4.5 PORT MIRRORING	18
4.6 PORT ISOLATION.....	19
4.7 PORT STATISTICS	20
4.7.1 Port Statistics-Overview	20
4.7.2 Port Statistics-Port	21
5 LAYER 2 CONFIGURATION.....	23
5.1 VLAN.....	23
5.1.1 VLAN Configuration	23
5.1.2 Access Configuration	24
5.1.3 Trunk Configuration	26
5.1.4 Hybrid Configuration	27
5.2 SOURCE MAC.....	28
5.2.1 Global Configuration	28
5.2.2 Static Unicast MAC	29
5.2.3 Static Multicast MAC	30

5.2.4	MAC Information	31
5.2.5	MAC Learning	32
5.3	SPANNING TREE	34
5.3.1	Global Configuration	34
5.3.2	Instance Configuration	36
5.3.3	Port Configuration	37
5.3.4	Port Instance Configuration	39
5.4	RING	41
5.4.1	Global Configuration	42
5.4.2	Ring Information	47
5.5	MRP	48
5.6	ERPS	49
5.6.1	Timer Configuration	50
5.6.2	Ring Network Configuration	51
5.6.3	Instance Configuration	52
5.7	IGMP SNOOPING	55
5.7.1	Global Configuration	55
5.7.2	Interface Configuration	57
5.7.3	Mroute Interface Configuration	58
5.7.4	Mroute Interface information	59
5.8	LINK FLAP PROTECTION	60
5.8.1	Global Configuration	60
5.8.2	Port Configuration	61
5.9	PORT LOOPBACK DETECTION	62
5.10	IPDT	64
6	IP NETWORK	66
6.1	INTERFACE	66
6.1.1	Layer 3 Interface	66
6.2	ARP	67
6.2.1	ARP Information	67
6.2.2	Static ARP	68
6.2.3	ARP Parameter Configuration	69
7	UNICAST ROUTING	71
7.1	IPv4	71
7.1.1	IPv4 Routing Table	71
7.1.2	IPv4 Static Route	72
8	NETWORK MANAGEMENT	74
8.1	SNMP	74
8.1.1	SNMP	74
8.1.2	View	75
8.1.3	Community	76
8.1.4	SNMP Group	77
8.1.5	V3 User	78

8.1.6	Trap Alarm.....	80
8.2	RMON.....	81
8.2.1	Event Group.....	82
8.2.2	Statistical Group.....	83
8.2.3	Historical Group.....	83
8.2.4	Alarm Group.....	84
8.3	LLDP.....	86
8.3.1	Global Configuration	86
8.3.2	Port Configuration	87
8.3.3	Neighbor Information.....	89
8.4	DHCP-SERVER	90
8.4.1	DHCP Switch.....	90
8.4.2	Address Pool Configuration	91
8.4.3	MAC Bind.....	92
8.4.4	Port Bind	93
8.4.5	Client List.....	94
8.5	DHCP SNOOPING	95
8.5.1	Global Configuration	96
8.5.2	VLAN Enable Configuration	97
8.5.3	Binding Configuration.....	98
8.5.4	Port.....	99
8.6	MODBUS TCP	101
8.7	IEC61850-MMS	109
8.7.1	Global Configuration	109
8.7.2	Export IDC Model File.....	110
9	TSN MANAGEMENT	111
9.1	CLOCK CONFIGURATION	111
9.2	PORT CONFIGURATION	114
9.3	MASTER CLOCK INFORMATION.....	115
9.4	PTP TIME	117
10	SYSTEM MAINTENANCE	118
10.1	NETWORK DIAGNOSIS	118
10.1.1	Ping	118
10.1.2	Traceroute.....	119
10.1.3	Network Cable Diagnosis	119
10.1.4	SFP Digital Diagnosis	120
10.2	TIME	121
10.2.1	NTP Configuration	121
10.2.2	Time Zone Configuration	122
10.3	ALARM.....	123
10.3.1	Alarm Trigger	123
10.3.2	Alarm Reception	130
10.4	CONFIGURATION FILE CONFIGURATION	133

10.4.1	Current Configuration	133
10.4.2	Configuration File Upgrade	133
10.4.3	Restore Factory Settings	134
10.5	SOFTWARE UPGRADE	135
10.6	LOG INFORMATION	136
10.6.1	Log Information	136
10.6.2	Syslog Server	137
11	FAQ	138
11.1	LOGIN PROBLEM	138
11.2	CONFIGURATION PROBLEM	138
11.3	INDICATOR PROBLEM	139

1 Login to the WEB Interface

1.1 System Requirements for WEB Browsing

Using this device, the system should meet the following conditions.

Hardware and Software	System Requirements
CPU	Above Pentium 586
Memory	Above 128MB
Resolution	Above 1024x768
Color	256 colors or above
Browser	Above Internet Explorer 9.0
Operating system	Windows 7/8/10 or above

1.2 Set the IP Address of PC

The default management IP address of the device as follows:

IP Settings	Default Value
IP Address	192.168.1.254
Subnet mask	255.255.255.0

When configuring a device through the Web:

- Before conducting remote configuration, please confirm the route between computer and device is reachable.
- Before making a local configuration, make sure that the IP address of the computer and the serial server are on the same subnet.

Note:

While configuring the device for the first time, if it's the local configuration mode, first confirm the network segment of current PC is 1.


Eg: Assume that the IP address of the current PC is 192.168.5.60, change the network segment "5" of the IP address to "1".

Operation Steps

Amendment steps are as follows:

Step 1 Open "Control Panel> Network Connection> Local Area Connection> Properties> Internet Protocol Version 4 (TCP / IPv4)> Properties".

Step 2 Change the "5" selected by the red frame in the figure to "1".

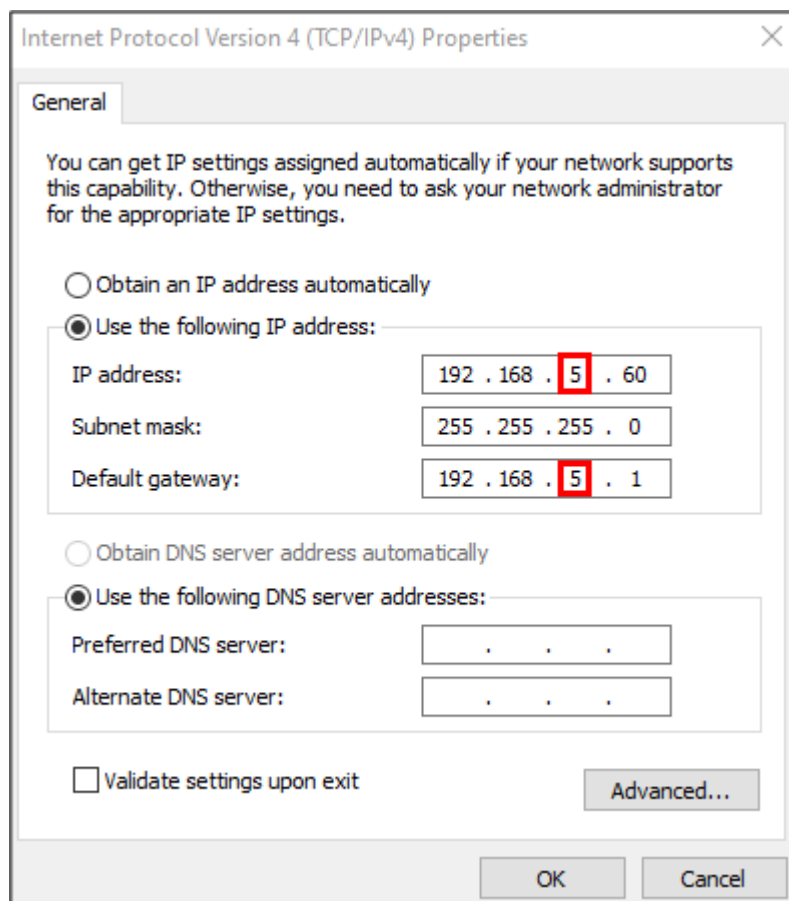

Step 3 Click "OK", modification is successful.

Step 4 End.

1.3 Login to the WEB Configuration Interface

Operation Steps


Log in to the WEB configuration interface is as follows:

Step 1 Run the computer browser.

Step 2 Enter the address of the device "http://192.168.1.254" in the address bar of the browser.

Step 3 Click the "Enter" key.

Step 4 Pop-up dialog box as shown below, enter the user name and password in the login window.

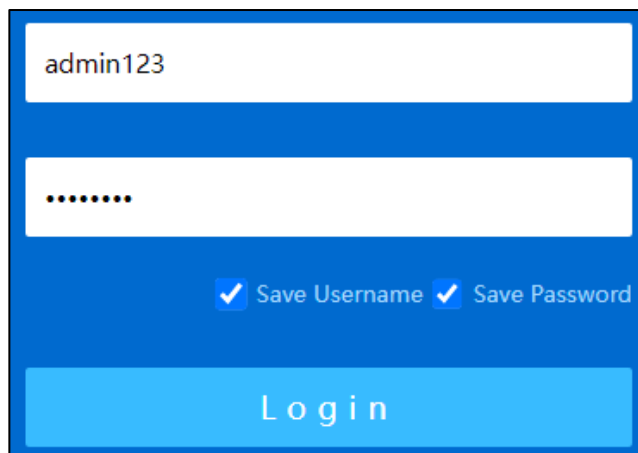A login dialog box with a blue background. It contains two white input fields. The first field contains the text "admin123". The second field contains a series of dots, indicating a password. Below the input fields, there are two checkboxes, both of which are checked. The first checkbox is labeled "Save Username" and the second is labeled "Save Password". At the bottom of the dialog box, there is a large blue button with the text "Login" in white.

Note:

- The default username and password are “admin123”; please strictly distinguish capital and small letter while entering.
- Default user account has the administrator privileges.
- When the user has not operated the Web network management configuration page for a long time, the system will log out and return to the Web login page after timeout; By default, the timeout of Web page login is 15 minutes.
- When the number of consecutive password login errors of a user reaches the limit (default is 5 times), the user will be restricted from logging in for the following time (default is 10 minutes).

Step 5 Click "Login".

Step 6 End.

After login successfully, user can configure relative parameters and information of WEB interface according to demands.

2 System Information

Function Description

View port status such as port type and connection status.


Check device information such as product model, software and hardware version, etc.

Operation Path

Open in the navigation bar: “System In”.

Interface Description

System information interface is as follows:

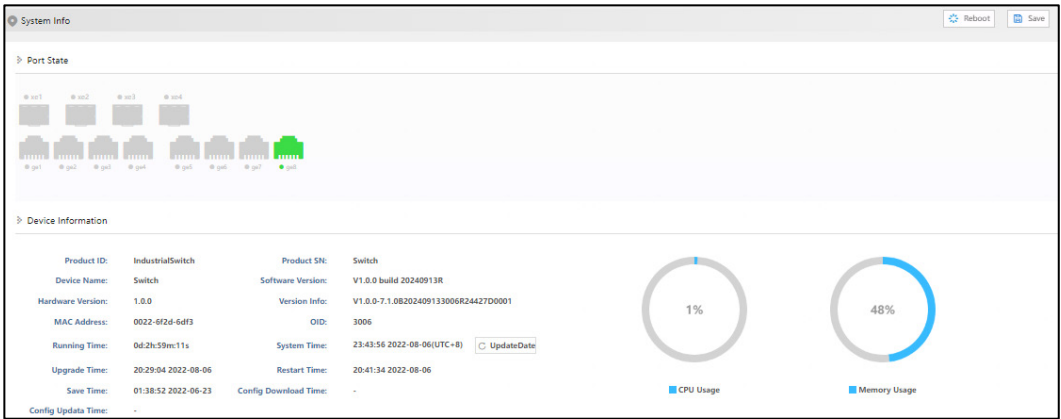

The main element configuration description of System Info interface:

Interface Element	Description
Port state	Display port icon and port connection status of the device:  Copper port icon, highlighting indicates that the port is connected.  Copper port icon, grayed out indicates that the

Interface Element	Description
	port is not connected or disabled. •  Fiber port icon, highlighting indicates that the port is connected. •  Fiber port icon, grayed out indicates that the port is not connected or disabled.
Device information	Basic information of software, hardware and operation of the device. • Product ID • Device Name • Hardware Version • MAC Address • Running Time • Upgrade Time • Save Time • Config Update Time • Product SN • Software Version • Version Info • OID • System Time • Restart Time • Config Download Time • CPU Usage • Memory Usage • UpdateDate

3 Login Configuration

3.1 IP Address

3.1.1 IPv4

Function Description


Configure the IPv4 address of the vlanif1 interface.

Operation Path

Open in order: "Login > IP Address > IPV4".

Interface Description

The IPV4 interface is as follows:

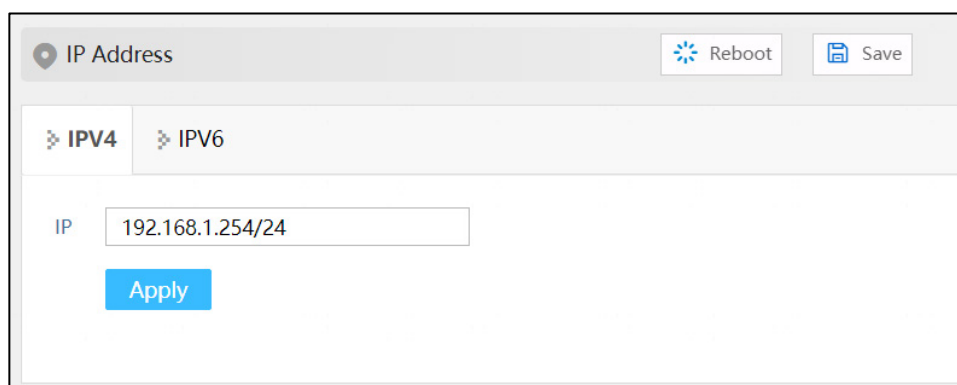

The screenshot shows a web interface for configuring IP addresses. At the top, there's a header bar with "IP Address" on the left and "Reboot" and "Save" buttons on the right. Below this, there are two tabs: "IPV4" (which is selected and highlighted) and "IPV6". Under the "IPV4" tab, there is a label "IP" followed by a text input field containing "192.168.1.254/24". Below the input field is a blue "Apply" button.

Main elements configuration descriptions of IPV4 interface:

Interface Element	Description
IP	The IPv4 address and subnet mask of the vlanif1 interface of the device. The default IP is 192.168.1.254/24. Note: After modifying the IP of the device, re-enter the corresponding IP address to access the WEB interface.

3.2 User

Function Description

To add and delete user, user needs to enter username and password to access the device, the initial username and password are: admin123.

Operation Path

Open in order: "Login > User".

Interface Description

User interface is as follows:

☐	User Name	Password	Privilege	Protocol
☐	admin123	admin123	15	telnet

Each page 20 Entries Home page Previous Next Last 1 Total: 1 Entries

The main element configuration description of user interface:

Interface Element	Description
User Name	Identification of the visitor. Note: - User name supports 1-16 valid characters, consisting of uppercase letters, lowercase letters, numbers or special characters (! @ _ -). - User name does not support sensitive characters such as root, daemon, bin, sys, sync, mail, proxy, www-data, backup, operator, haldaemon, dbus, ftp, nobody, sshd, default, etc.
Password	Password used by the visitor. Note: - Password supports 8-16 valid characters, consisting of combination of two or more of uppercase letters, lowercase letters, numbers, special characters (~! @ # \$% _ -). - The password is valid for 90 days by default, and the password needs to be revised after it expires.
Privilege	The visitor's privilege is 0-15, and it supports 16 priorities in 4

Interface Element	Description
	categories. • 0: visit level; You can only view the system information, IP address and log information of the device, and conduct network diagnosis (Ping, Traceroute). • 1: view level; The configuration information of the device can be viewed, but the configuration of the device cannot be modified. • 2: configuration level; User can view the configuration information of the device and configure some functional parameters of the device, but cannot manage the device. • 3-15: manage level, user has all privileges of the device, including downloading, uploading, rebooting, modifying device information and other operations. Notice: • Users can view, delete, or add other users whose priority does not exceed their own. • If the added user name already exists, the original user information will be overwritten.
Protocol	Provide Telnet protocol for users, with the following options: • Telnet • SSH

3.3 Protocol Authorization

Function Description

Configure device TELNET service and SSH service.

The CLI interface of the device can be accessed through TELNET protocol and SSH2.0 protocol. TELNET transmission process uses TCP protocol for plaintext transmission, and SSH (Secure Shell) protocol provides secure remote login, ensuring the safe transmission of data.

Operation Path

Open in order: "Login > Protocol Authorization".

Interface Description

Protocol authorization interface is as below:



Configuration description of main elements of the protocol authorization interface:

Interface Element		Description
Telnet Enable Switch	Enable	TELNET service enable switch button, which is enabled by default.
SSH Enable Switch		SSH service enable switch button, which is disabled by default.

4 Port Configuration

4.1 Port Settings

Function Description

Set port parameters individually or in batches.

Operation Path

Open in order: "Port > Port Setting".

Interface Description

Port setting interface is as follows:

The screenshot shows the 'Port Setting' interface. At the top, there is a 'Port Type Selection' dropdown menu set to 'none' and a 'Config' button. Below this is a table with the following columns: Port, State, Medium, Rate, Duplex Mode, Flow Control, MTU, Interface Switch, and Description. The table contains 16 rows of port configurations.

Port	State	Medium	Rate	Duplex Mode	Flow Control	MTU	Interface Switch	Description
ge1	down	copper	auto	auto	disable	10240	enable	
ge2	down	copper	auto	auto	disable	10240	enable	
ge3	down	copper	auto	auto	disable	10240	enable	
ge4	down	copper	auto	auto	disable	10240	enable	
ge5	down	copper	auto	auto	disable	10240	enable	
ge6	down	copper	auto	auto	disable	10240	enable	
ge7	down	copper	auto	auto	disable	10240	enable	
ge8	up	copper	1g(auto)	full	disable	10240	enable	
xe1	down	fiber	auto	auto	disable	10240	enable	
xe2	down	fiber	auto	auto	disable	10240	enable	
xe3	down	fiber	auto	auto	disable	10240	enable	
xe4	down	fiber	auto	auto	disable	10240	enable	

Main elements configuration description of port settings interface:

Interface Element	Description
Port Type Selection	Select ports of the same type in batches for configuration, and the options are as follows: - none - fe:100M port

Interface Element	Description
	- ge: Gigabit port - xe: 10Gigabit port - sa: static aggregation group - po: dynamic aggregation group Note: The port type is based on the actual port of the device.
Port	The corresponding port name of the device Ethernet port.
State	Ethernet port connection status, display status as follows: - down: represent the port is disconnected; - up: represent the port is connected.
Medium	The connection types of Ethernet ports, the status are shown as follows: - fiber: fiber port medium. - copper: copper port medium.
Rate	The default is self-adaption mode, and the display status is as follows: - auto: self-adaption; 10m: 10M; 100m: 100M; 1g: Gigabit. 2500m: 2.5G 5g: 5G 10g: 10 Gigabit.
Duplex Mode	The default is self-adaption mode, and the display status is as follows: - auto: self-adaption; - half: half-duplex - full: full duplex
Flow Control	Port flow control status, the display status is as follows: - disable - Both: Enable port data sending or receiving flow control.
MTU	Ethernet port transmitted maximum data frame length, the value range is 1518-10240.
Interface switch	Enable or disable Ethernet port. Options are as follows: - enable - disable
Description	Port description information, which supports 0-32 characters and consists of uppercase letters, lowercase letters, numbers

Interface Element	Description
	or special characters (! @ _-).

4.2 Link Aggregation

4.2.1 Link Aggregation

Function Description

Link aggregation is the shorter form of Ethernet link aggregation; it binds multiple Ethernet physical links into a logical link, achieving the purpose of increasing the link bandwidth. At the same time, these bundled links can effectively improve the link reliability by mutual dynamic backup.

The Link Aggregation Control Protocol (LACP) protocol based on the IEEE802.3ad standard is a protocol for implementing dynamic link aggregation. Devices running this protocol exchange LACPDU (Link Aggregation Control Protocol Data Unit, Link Aggregation Control Protocol Data Unit) to exchange link aggregation related information.

Based on the enabling or disabling of LACP protocol, the link aggregation can be divided into two modes, static aggregation and dynamic aggregation.

Operation Path

Open in order: "Port > Link Aggregation > Link Aggregation".

Interface Description

Link Aggregation interface as below:

Link Aggregation

Reboot Save

Link Aggregation Aggregation Protection

LACP Priority 32768

Work Mode source-dest-port

Apply

Add Delete

	Group Name	Port Member
☐		

The main element configuration description of Link Aggregation interface:

Interface Element	Description
LACP Priority	Priority level setting of dynamic aggregation system, the setting range is 1-65535, defaults to 32768. Note: The lower the priority value of the system LACP is, the higher the priority is, and the activity interface of the device with high system priority is selected at both ends of the aggregation link.
Work Mode	Configure the load balancing mode of the aggregation group. The options are as follows: • source-mac: Load balance mode based on source MAC • destination-mac: Load balance mode based on destination MAC • source-dest-ip: Load balance mode based on source and destination IP • source-dest-mac: Load balance mode based on source and destination MAC • source-dest-port: The load balancing mode is based on the source and destination TCP/UDP ports.
Group Name	Group type and ID, sa is a static aggregation group, po is a dynamic aggregation group, and the aggregation group ID supports up to 12 groups. Each group can configure up to 8 ports to join aggregation.
Port Member	Port member in the link aggregation group.

Interface Description: Add

The Link Aggregation-Add interface is as follows:

Add

Group ID

1

Type

static

Port

☐ ge1
 ☐ ge2
 ☐ ge3
☐ ge4
 ☐ ge5
 ☐ ge6
☐ ge7
 ☐ ge8
 ☐ xe1
☐ xe2
 ☐ xe3
 ☐ xe4

Add Description

Port configuration can be selected 8 ports at most

OK

The main elements configuration description of Link Aggregation-Add interface:

Interface Element	Description
Group ID	The ID number of the aggregation group, which can support up to 12 groups.
Type	Type of aggregation group: - static: static aggregation - dynamic: dynamic aggregation
Aggregation Mode	Dynamic Aggregation Group Mode: - active: active mode, in which the port actively initiates the aggregation negotiation process. - passive: the mode in which the port passively receives the aggregate negotiation process. Note: Under dynamic type, display this configuration.
Port	Port members in this aggregation group. Each group can configure up to 8 ports to join the aggregation.

4.2.2 Aggregation Protection

Function Description


Configure static aggregation protection.

Operation Path

Open in order: "Port > Link Aggregation > Aggregation Protection".

Interface Description

The aggregation protection interface is shown as follows:

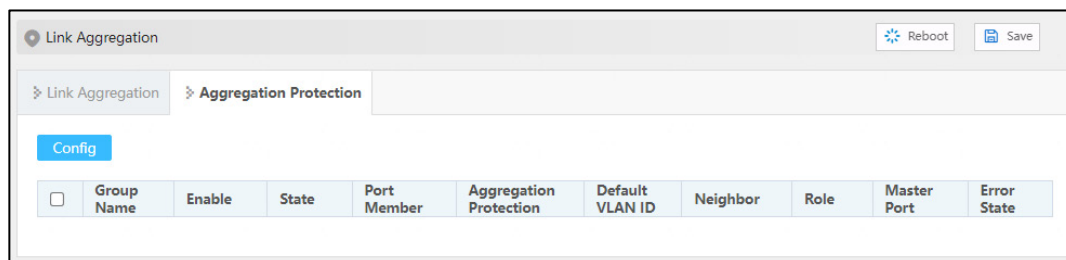

Description of configuration of main elements of aggregation protection interface:

Interface Element	Description
Group Name	The name of the static aggregation group set in Link Aggregation.

Interface Element	Description
Enable	The enabled state of the aggregation group. • Enable • Disable
State	Status of the aggregation group port. • Up: as long as any port member is Up, the status of the aggregation group is up; • Down: if all port members are Down, the status of the aggregation group is Down.
Port Member	Port member in the aggregation group.
Aggregation Protection	The enabled state of the aggregation protection. • Enable • Disable
Default VLAN ID	The VLAN where that aggregate group port resides.
Neighbor	MAC address of the opposite device of aggregation group. Note: If no device is connected to the opposite end, the MAC address is displayed as 0000.0000.0000.
Role	Elected roles in this device and the opposite device • Master: the one with a smaller MAC address is elected as Master • Slave: the one with a larger MAC address is elected as Slave
Master Port	The second link port of the master device is the master port.
Error State	Error message prompt of aggregation protection: • Neighbor timed out • Loop: forming a loop • Link error (such as generating a large number of error frames).

4.3 Port Speed Limit

Function Description

Limit the egress bandwidth and ingress bandwidth of the port.

Operation Path

Open in order: "Port > Port Speed Limit".

Interface Description

Port rate limit interface is as follows:

Port Speed Limit
Reboot
Save

Note: Configuring as the maximum bandwidth of the port means no restriction, and the page will not display the configuration value

Port Type Selection none Config

☐	Port	Egress Bandwidth(bps)	Ingress Bandwidth(bps)
☐	ge1		
☐	ge2		
☐	ge3		
☐	ge4		
☐	ge5		
☐	ge6		
☐	ge7		
☐	ge8		
☐	xe1		
☐	xe2		
☐	xe3		
☐	xe4		

The main element configuration description of port rate limit interface:

Interface Element	Description
Port	The corresponding port name of the device Ethernet port.
Egress Bandwidth (bps)	The limitation of port on the bandwidth of egress data transmission.
Ingress Bandwidth (bps)	The limitation of port on the bandwidth of ingress data transmission. Note: Support unit selection of K/M/G when configuring the bandwidth. In WEB display, unit conversion will be conducted and similar values will be taken according to the input value and the unit.



Note

- When using the port rate limit, flow control should be enabled, otherwise the rate between devices will no longer be a smooth curve;
- When using the port rate limit, packet loss should not occur unless the flow control is disabled. The representation of packet loss is the fluctuating transmission speed.
- Port speed limit has high requirements on network cable quality, otherwise lots of conflict packets and broken packet would appear.

4.4 Storm Control

Function Description

Configure the maximum broadcast, multicast or unknown unicast packet flow the port allows.

When the sum of each port broadcast, unknown multicast or unknown unicast flow achieves the value user sets, the system will discard the packets beyond the broadcast, unknown multicast or unknown unicast flow limit, so that the proportion of overall broadcast, unknown multicast or unknown unicast flow can be reduced to limited range, ensuring the normal operation of network business.

Operation Path

Open in order: "Port > Storm Control".

Interface Description

Storm control interface is as follows:

☐	Port	Broadcast(bps)	Multicast(bps)	Unicast(bps)
☐	ge1			
☐	ge2			
☐	ge3			
☐	ge4			
☐	ge5			
☐	ge6			
☐	ge7			
☐	ge8			
☐	xe1			
☐	xe2			
☐	xe3			
☐	xe4			

Main elements configuration description of storm suppression interface:

Interface Element	Description
Port	The corresponding port name of the device Ethernet port.
Broadcast (bps)	The device procedure can suppress the transmission speed of

Interface Element	Description
	broadcast packet Note: Broadcast packet, namely, the data frame with the destination address of FF-FF-FF-FF-FF-FF.
Multicast (bps)	Port suppression to the transmission speed of unknown multicast data packet. Note: Multicast packet, namely, the destination address is XX-XX-XX-XX-XX-XX data frame, the second X is odd number, such as: 1, 3, 5, 7, 9, B, D, F, other X represents arbitrary number.
Unicast (bps)	Port suppression to the transmission speed of unknown unicast data packet. Note: Unknown unicast packet, namely, the MAC address of the data frame doesn't exist in the MAC address table of the device, which needs to be forwarded to all ports.



Note

Support unit of K/M/G when click the "Config" button to configure the rate. In WEB display, unit conversion will be conducted and similar values will be taken according to the input value and the unit.

4.5 Port Mirroring

Function Description

Copy the data from the origin port to appointed port for data analysis and monitoring.

Operation Path

Open in order: "Port > Port Mirroring".

Interface Description

Port mirroring interface is as follows:

The main element configuration description of port mirroring interface:

Interface Element	Description
Source Port	Data source port, which can be one or more, from which the device will collect data in the specified direction.
Direction	Data direction of the source port, options are as follows: - transmit: the message sent by the source port will be mirrored to the destination port. - receive: the packet received by the source port will be mirrored to the destination port. - both: the packet received or sent by the source port will be mirrored to the destination port.
Destination Port	The destination port of device mirroring. The device only supports one destination port.



Note

- The function must be shut down in normal usage, otherwise all senior management functions based on port are not available, such as RSTP, IGMP snooping etc.
- Mirror function only deals with FCS normal packet; it cannot handle the wrong data frame

4.6 Port Isolation

Function Description

Port isolation is used for the layer 2 isolation between messages. It could add different ports to different VLANs, but waste limited VLAN resources. Adopting isolate-port characteristics can achieve isolation of ports within the same VLAN. After adding the ports to isolation group, user can achieve the layer 2 data isolation of ports within isolation group. Port isolation function has provided safer and more flexible networking scheme for users.

Operation Path

Open in order: "Port > Port Isolation".

Interface Description

Isolate-port configuration interface is as follows:

Port Isolation
Reboot
Save

Port Type Selection
none
Config

☐	Port	Enable Switch
☐	ge1	disable
☐	ge2	disable
☐	ge3	disable
☐	ge4	disable
☐	ge5	disable
☐	ge6	disable
☐	ge7	disable
☐	ge8	disable
☐	xe1	disable
☐	xe2	disable
☐	xe3	disable
☐	xe4	disable

The main element configuration description of isolate-port config interface:

Interface Element	Description
Port	The corresponding port name of the device Ethernet port.
Enable Switch	Port isolation enable status can be displayed as follows: - disable - enable

4.7 Port Statistics

4.7.1 Port Statistics-Overview

Function Description


Check the number of messages and bytes, discarded messages and error messages sent and received by each port.

Operation Path

Open in order: "Port > Port Statistics > Port Statistics-Overview".

Interface Description

Port Statistics-Overview interface is as follows:

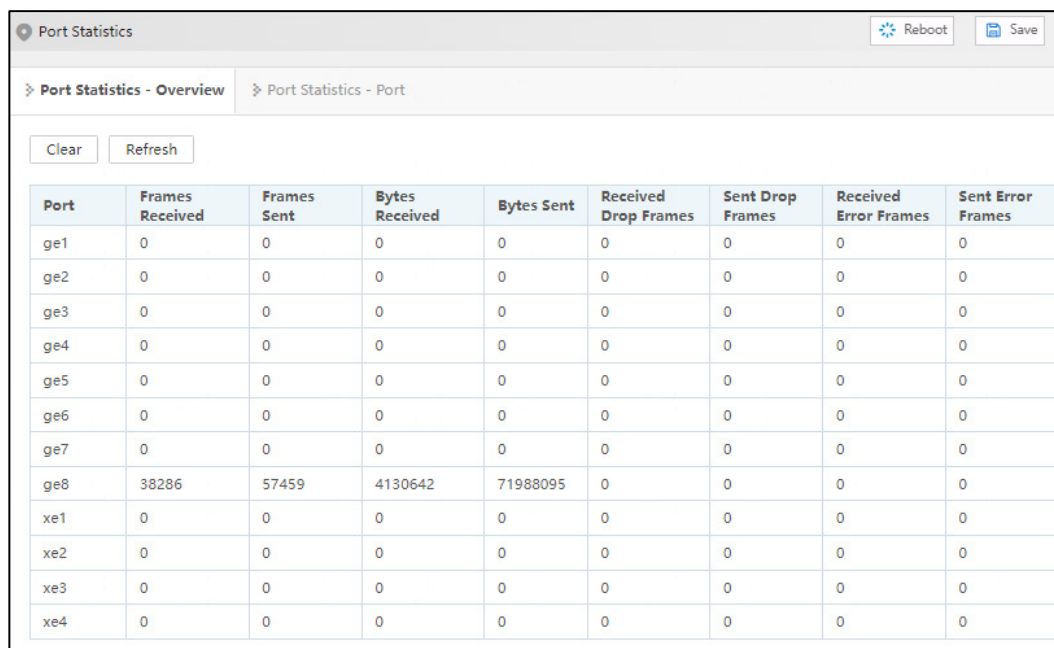

Port	Frames Received	Frames Sent	Bytes Received	Bytes Sent	Received Drop Frames	Sent Drop Frames	Received Error Frames	Sent Error Frames
ge1	0	0	0	0	0	0	0	0
ge2	0	0	0	0	0	0	0	0
ge3	0	0	0	0	0	0	0	0
ge4	0	0	0	0	0	0	0	0
ge5	0	0	0	0	0	0	0	0
ge6	0	0	0	0	0	0	0	0
ge7	0	0	0	0	0	0	0	0
ge8	38286	57459	4130642	71988095	0	0	0	0
xe1	0	0	0	0	0	0	0	0
xe2	0	0	0	0	0	0	0	0
xe3	0	0	0	0	0	0	0	0
xe4	0	0	0	0	0	0	0	0

4.7.2 Port Statistics-Port

Function Description

Check the classification statistics of the total number of messages sent and received by the designated port and the number of bytes of messages.

Operation Path

Open in order: "Port > Port Statistics > Port Statistics-Port".

Interface Description

Port Statistics-Port interface is as follows:

Port Statistics

Reboot

Save

Port Statistics - Overview

Port Statistics - Port

Port

ge1

Clear

Refresh

	Ingress Direction	Egress Direction
Counting Statistics		
Number of Packets	0	0
Unicast Number	0	0
Multicast Number	0	0
Broadcast Number	0	0
Pause Frame	0	0
Length Statistics		
64	0	0
65-127	0	0
128-255	0	0
256-511	0	0
512-1023	0	0
1024-1518	0	0
Over 1519	0	0

5 Layer 2 Configuration

5.1 VLAN

VLAN is Virtual Local Area Network. VLAN is the data switching technology that logically (note: not physically) divides the LAN device into each network segment (or smaller LAN) to achieve the virtual working group (unit).

VLAN advantages mainly include:

- Port isolation. Ports in different VLAN, even in the same switch, can't intercommunicate. Such a physical switch can be used as multiple logical switches.
- Network security. Different VLAN can't directly communicate with each other, which has eradicated the insecurity of broadcast information.
- Flexible management. Changing the network user belongs to needn't to change ports or connection; only needs to change the firmware configuration.

That is, ports within the same VLAN can intercommunicate; otherwise, ports can't communicate with each other. A VLAN is identified with VLAN ID, and ports with the same VLAN ID belong to a same VLAN.

5.1.1 VLAN Configuration

Function Description


Create VLAN and edit VLAN description.

Operation Path

Open in order: "Layer 2 > VLAN > VLAN Config".

Interface Description

The VLAN configuration interface is as follows:

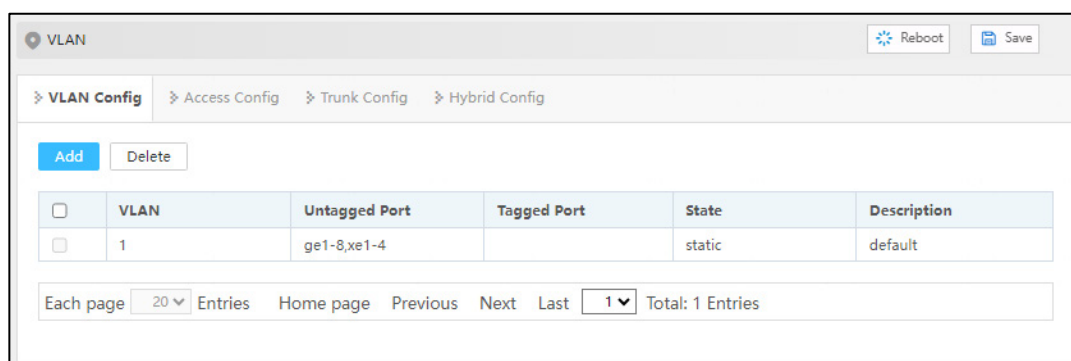

Main element configuration description of VLAN configuration interface:

Interface Element	Description
VLAN	VLAN ID number, value range is 1-4094.
Untagged Port	Untagged port member to conduct untagged process to sending data frame.
Tagged Port	Tag port member to conduct tagged process to sending data frame.
State	VLAN status: - Static: static VLAN - Dynamic: dynamic VLAN
Description	VLAN description information, which supports 0-32 characters and consists of uppercase letters, lowercase letters, numbers or special characters (! @ _-).

5.1.2 Access Configuration

Function Description

Configure the PVID (Port Default VLAN ID) of the Access interface, or modify it to Trunk interface.

Operation Path

Open in order: "Layer 2 > VLAN > Access Configuration".

Interface Description

Access configuration interface is as follows:

VLAN
Reboot
Save

VLAN Config
Access Config
Trunk Config
Hybrid Config

Port Type Selection
none
Config

☐	Port	Pvid
☐	ge1	1
☐	ge2	1
☐	ge3	1
☐	ge4	1
☐	ge5	1
☐	ge6	1
☐	ge7	1
☐	ge8	1
☐	xe1	1
☐	xe2	1
☐	xe3	1
☐	xe4	1

The main element configuration description of Access configuration interface.

Interface Element	Description
Port	The corresponding port name of the device Ethernet port.
Pvid	Port Default VLAN ID, which is the default VLAN of the port. Default is 1, value range is 1-4094. Note: Each port has a PVID property, when the port receives Untag messages, it adds Tag mark on them according to PVID. When the port transmits data message with the same Tag mark as PVID, it would erase the Tag mark and then transmit the message. The PVID of all ports default to 1.
Configuration	Check the port and click “Configure” to reset PVID and port mode. - Access: port only belongs to 1 VLAN(which is the default VLAN), all ports of the switch are Access mode by default and all PVID are 1. - Trunk: port can belong to multiple VLAN, Trunk port can allow the messages of multiple VLANs to pass with Tag, but only allow the messages of one VLAN to transmit

Interface Element	Description
	without tag (strip Tag) from this kind of interface. Commonly used in the connection between network devices.

5.1.3 Trunk Configuration

Function Description

Configure the pvid value and tagvlan of Trunk port, or modify it to Access interface.

Operation Path

Open in order: "Layer 2 > VLAN > Trunk Configuration".

Interface Description

Trunk configuration interface is as follows:

The main element configuration description of Trunk configuration interface:

Interface Element	Description
Port	The corresponding port name of the device Ethernet port.
Tagvlan	The VLAN ID number that the port allows to pass.
Pvid	Port Default Vlan ID, which is the default VLAN of the port. Default is 1, value range is 1-4094.
Configuration	Check the port and click "Configure" to configure the VLAN and PVID of the port, as well as the processing of PVID when sending messages.

Process for Port Receiving Message

Interface Type	Process for Receiving Untagged Message	Process for Receiving Tagged Message
Access	Receive this message and tag it with default VLAN ID.	Receive the message when the VLAN ID is the same as default VLAN ID, if not, discard the message.
Trunk		Receive this message when the VLAN ID is in the list of VLAN ID that allow to pass through the interface, if not, discard the message.

Process for Port Sending Message

Interface Type	The process of transmit frame
Access	Strip the PVID Tag of the message first, then transmit it.
Trunk	Sending the message when the VLAN ID is the VLAN ID allowed by the interface; In addition, if the VLAN ID is the same as the default VLAN ID, the Tag can be removed or reserved according to the configuration, and send the message.

5.1.4 Hybrid Configuration

Function Description

On the "Hybrid Configuration" page, a list of ports with the mode of "Hybrid" is displayed, and the PVID value, Untagvlan and Tagvlan of the hybrid interface can be configured, where TagVlan is the port tag value.

Operation Path

Open in order: "Layer 2 > VLAN Configuration > Hybrid Configuration".

The screenshot shows the 'VLAN' configuration page with a 'Hybrid Config' tab selected. The 'Port Type Selection' dropdown is set to 'none'. Below this, there are input fields for 'pvid', 'tagvlan', and 'untagvlan', each preceded by a checkbox. The 'Config' button is highlighted in blue. At the top right, there are 'Reboot' and 'Save' buttons.

The main element configuration description of Hybrid configuration interface.

Interface Element	Description
Port	The corresponding port name of the device Ethernet port.
pvid	VLAN ID number, value range is 1-4094.
tagvlan	A tagged value, a single value or range (range denoted by a "-"), such as 9 or 10-15.
untagvlan	An untagged value, a single value or range (range denoted by a "-"), such as 9 or 10-15.
Config	Check the entries that need to be reconfigured, click configure to reset pvid value and tagvlan parameters.

5.2 Source MAC

MAC (Media Access Control) address is the hardware identity of network device; the switch forwards the message according to MAC address. MAC address has uniqueness, which has guaranteed the correct retransmission of message. Each switch is maintaining a MAC address table. In the table, MAC address is corresponding to the switch port. When the switch receives data frames, it decides whether to filter them or forward them to the corresponding port according to the MAC address table. MAC address is the foundation and premise that switch achieves fast forwarding.

5.2.1 Global Configuration

Function Description

Set the aging time of dynamic MAC addresses.

Each port in the switch is equipped with automatic address learning function, it stores the frame source address (source MAC address, switch port number) that port sends and receives in the address table. Ageing time is a parameter influencing the switch learning process; the default value is 300 seconds. When the timekeeping starts after an address record is added to the address table, if each port doesn't receive the frame whose source address is the MAC address within the ageing time, then these addresses will be deleted from dynamic forwarding address table (source MAC address, destination MAC address and their corresponding switch port number).

Operation Path

Open in order: "Layer 2 Config > MAC > Global Config".

Interface Description

Global configuration interface is as follows:

The main element configuration description of global configuration interface:

Interface Element	Description
MAC Aging Enable	Enable switch of MAC address aging.
Max-Age	MAC address aging-time, unit is second, default value is 300, and range is 10-1000000.

5.2.2 Static Unicast MAC

Function Description

Source unicast MAC address binding and filtering will not age.

Operation Path

Open in order: "Layer 2 > MAC > Static Unicast MAC".

Interface Description

Static MAC interface is as follows:

The main element configuration description of static MAC interface:

Interface Element	Description
MAC	The unicast MAC address bound by the interface, such as 0001.0001.0001.
Forwarding Type	MAC forwarding type, as shown below: - Discard - Forward
Port	The binding port number.
VLAN ID	The VLAN ID number to which the data sent by this MAC address belongs, for example, 1-4094. Note: Input VLAN ID is the existing ID.



Note:

- The function is a sort of security mechanism, please carefully confirm the setting, otherwise, part of the devices won't be able to communicate;
- Please don't adopt multicast address as the entering address;
- Please don't enter reserved MAC address, such as the local MAC address.

5.2.3 Static Multicast MAC

Function Description

Source multicast MAC address binding will not age.

Operation Path

Open in order: "Layer 2 > MAC > Static Multicast MAC".

Interface Description

Static multicast MAC interface is as follows:

The screenshot shows a web-based configuration interface for MAC settings. At the top, there's a 'MAC' header with 'Reboot' and 'Save' buttons. Below it, a breadcrumb trail includes 'Global Config', 'Static Unicast MAC', 'Static Multicast MAC' (which is the active tab), 'MAC Information', and 'MAC Learning'. Under the 'Static Multicast MAC' tab, there are 'Add' and 'Delete' buttons. A table with columns 'MAC', 'Port', and 'VLAN ID' is shown, currently empty. At the bottom, there's a pagination bar with 'Each page' set to 20, 'Entries', 'Home page', 'Previous', 'Next', 'Last', a dropdown menu, and 'Total: 0 Entries'.

The main element configuration description of static multicast MAC interface:

Interface Element	Description
MAC	Multicast MAC address bound to the interface, for example: 0100.5e01.0001.
Port	The Binding Port Number.
VLAN ID	The VLAN ID number to which the data sent by this MAC address belongs, for example, 1-4094. Note: Input VLAN ID is the existing ID.

5.2.4 MAC Information

Function Description

Check the MAC address table information.

Operation Path

Open in order: "Layer 2 > MAC > MAC Information".

Interface Description

MAC Information interface is as follow:

MAC
Reboot
Save

Global Config
Static Unicast MAC
Static Multicast MAC
MAC Information
MAC Learning

Multicast Mac: S - Static, I - Igmp, M - Mld, G - Gmrp, T - Trunk-det, O - Other

Filtering Mode All

MAC	Forwarding Type	Port	VLAN ID	Type
00e0.4c68.05a0	forward	ge8	1	dynamic

Each page 20 Entries Home page Previous Next Last 1 Total: 1 Entries

The main element configuration description of MAC information interface:

Interface Element	Description
Filtering Mode	Drop-down list of MAC mode to filter the display of the MAC address list of the specified type. The options are as follows: - All - Dynamic Unicast - Dynamic Multicast - Static Multicast - Static Unicast
MAC	The dynamic MAC addresses that the device have learned or the static MAC address information that user has configured.
Forwarding Type	MAC forwarding type, as shown below: - Discard - Forward
Port	Corresponding port number of the MAC address.
VLAN ID	VLAN ID number the data MAC address sending belongs to.
Type	The type of MAC address, it displays as follows: - dynamic - static

5.2.5 MAC Learning

Function Description

The main function of MAC learning is to limit the number of MAC learning on the port. When the MAC address table of the switch is full, it is impossible to learn new MAC

addresses. At this time, if a large number of forged messages with different source MAC addresses are sent to the switch, it will exhaust the resources of the MAC address table of the switch and lead to the failure to learn normal MAC addresses. Therefore, limiting the number of MAC learning of the switch can prevent this from happening and improve the security of the switch and the network.

Operation Path

Open in order: "Layer 2 > MAC > MAC Learning".

Interface Description

The MAC learning interface is as follows:

Port	Learning Enable
ge1	enable
ge2	enable
ge3	enable
ge4	enable
ge5	enable
ge6	enable
ge7	enable
ge8	enable
xe1	enable
xe2	enable
xe3	enable
xe4	enable

The main element configuration description of MAC learning interface:

Interface Element	Description
Port	The corresponding port name of the device Ethernet port.
Learning Enable	"Learning Enable" means that the switch turns on or off the learning function of MAC address. When MAC learning is enabled, the switch will learn and record the MAC addresses received from each port to establish a MAC address table for forwarding packets. When MAC learning is disabled, the

Interface Element	Description
	switch will stop learning new MAC addresses and will only use the learned MAC addresses for forwarding. The operation of the 'learning enable switch' is as follows: • Disable: disable the learning restriction; • Enable: enable the learning restriction.

5.3 Spanning Tree

Spanning-tree protocol is a sort of layer 2 management protocol; it can eliminate the network layer 2 circuit via selectively obstructing the network redundant links. At the same time, it has link backup function. Here are three kinds of spanning-tree protocols:

- STP (Spanning Tree Protocol)
- RSTP (Rapid Spanning Tree Protocol)
- MSTP (Multiple Spanning Tree Protocol)

Spanning-tree protocol has two main functions:

- First function is utilizing spanning-tree algorithm to establish a spanning-tree that takes a port of a switch as the root to avoid ring circuit in Ethernet.
- Second function is achieving the convergence protection purpose via spanning-tree protocol when Ethernet topology changes.

Compared to STP, RSTP, MSTP can converge the network more quickly when network structure changes; MSTP is compatible with STP and RSTP, and is better than STP and RSTP. It can not only quickly converge but also send different VLAN along each path to provide better load sharing system for redundant link.

5.3.1 Global Configuration

Function Description

Configure the relevant parameters of spanning tree.

Operation Path

Open in order: "Layer 2 > Spanning-tree > Global Configuration".

Interface Description

Global configuration interface is as follows:

Spanning-tree Reboot Save

Global Config
Instance Config
Port Config
Port Instance Configuration

Enable Switch ☒

Work Mode

Priority

Max-hops

Forward-time

MAX-age

Hello-time

Revision Level

MST Name

Apply

The main element configuration description of global configuration interface:

Interface Element	Description
Enable Switch	Spanning-tree enable switch. Disable by default
Work Mode	Defaults to MSTP, there are three modes for spanning-tree protocol choice: 0-STP: Spanning-tree 2-RSTP: Rapid spanning tree 3-MSTP: Multiple spanning-trees Note: In RSTP or MSTP mode, when the connection with STP device is found, the port will automatically migrate to STP compatible mode to work.
Priority	Bridge priority level, value range is 0-61440. Note: Smaller the priority level value is, higher the priority level is. It must be a multiple of 4096.
Max-hops	The maximum hop in MST region, defaults to 20, the value range is 1-40. Note:

Interface Element	Description
	The maximum hop in MST region has limited the size of MST region. The maximum hop configured on a domain root will be used as the maximum hop in MST region.
Forward-time	Port state transition delay, defaults to 15s, the value range is 4-30.
MAX-age	The maximum lifetime of the message in the device, defaults to 20s, the value range is 6-40. It's used to determine whether the configuration message times out.
Hello-Time	Message sending cycle, defaults to 2s, the value range is 1-10. Note: - The spanning tree protocol sends configuration information every Hello time to check whether the link is faulty. - In order to avoid frequent network flap, forwarding delay, aging time and handshake time should satisfy the following formula: $2 \times (\text{forwarding delay} - 1) \geq \text{aging time} \geq 2 \times (\text{handshake time} - 1)$.
Revision Level	MSTP revision level, defaults to 0, the value range is 0-65535. Note: When the MST region name, revision level, instance-to-VLAN mapping relation are the same, the two or more bridges will belong to a same MST region.
MST Name	MST domain name, defaults to Default, up to 32 characters.

5.3.2 Instance Configuration

Function Description

Configure instance-to-VLAN mapping.

Multiple Spanning Tree Regions (MST Regions) are composed of multiple devices in the switched network and the network segments between them.

In an MST region, multiple spanning trees can be generated through MSTP. Each spanning tree is independent to others and corresponding to special VLAN. Each spanning tree is called an MSTI (Multiple Spanning Tree Instance).

VLAN mapping table is an attribute of MST region, and it's used to describe the mapping relation between VLAN and MSTI.

Operation Path

Open in order: "Layer 2 > Spanning-tree > Instance Configuration".

Interface Description

Instance configuration interface is as follows:

The main element configuration description of instance configuration interface:

Interface Element	Description
Instance	Instance ID number of Multiple Spanning-tree. The value range is 1-16.
Priority	Device priority level, value range is 0-61440, default to 32769, step is 4096. During adding, choose a priority based on 0-15 times the value on the 4096. Note: The priority of a device participates in spanning tree calculation. Its size determines whether the device can be selected as the root bridge of a spanning tree.
VLAN List	The list of VLANs mapped to MSTI instances, each VLAN can only correspond to one MSTI. Note: VLAN mapping table is an attribute of MST region, and it's used to describe the mapping relation between VLAN and MSTI. MSTP achieves load balancing based on the VLAN mapping table.

5.3.3 Port Configuration

Function Description

Enable port to participate in spanning-tree and configure port type, link type and BPDU protection function.

Operation Path

Open in order: "Layer 2 > Spanning-tree > Port Configuration".

Interface Description

Check port configuration interface as below:

Spanning-tree
Reboot
Save

Global Config
Instance Config
Port Config
Port Instance Configuration

Port Type Selection

none

Config

☐	Port	Enable Switch	bpduguard	Edge Port	Link Type
☐	ge1	enable	default	disable	auto
☐	ge2	enable	default	disable	auto
☐	ge3	enable	default	disable	auto
☐	ge4	enable	default	disable	auto
☐	ge5	enable	default	disable	auto
☐	ge6	enable	default	disable	auto
☐	ge7	enable	default	disable	auto
☐	ge8	enable	default	disable	auto
☐	xe1	enable	default	disable	auto
☐	xe2	enable	default	disable	auto
☐	xe3	enable	default	disable	auto
☐	xe4	enable	default	disable	auto

The main element configuration description of port configuration interface:

Interface Element	Description
Port	The corresponding port name of the device Ethernet port.
Enable Switch	The enable status of ports participating in spanning tree can be shown as follows: • Enable • Disable
bpduguard	BPDU (Bridge Protocol Data Unit) protection function. After starting the BPDU protection, if the edge port receives the BPDU message that should not exist, the edge port will be closed, and it can return to normal after a certain time. Edge

Interface Element	Description
	Port BPDU Guard State: • Default: global configuration protection status • Enable • Disable
Edge Port	The port that directly connects to terminal instead of other switches. The edge port does not participate in the spanning tree operation, and can be directly transferred to the Forwarding state by Disable. Enable state of edge port: • Enable • Disable
Link Type	Fast entry of the port into the forwarding state requires that the port must be a point-to-point link, not a shared media link. Port link type: • Auto: if the port is full duplex, it is judged as a point-to-point link; If it is half-duplex, it is judged as a non-point-to-point link. • Point-to-point: point-to-point link. • Shared: Non point-to-point link.

5.3.4 Port Instance Configuration

Function Description

Configure port priority and cost

Operation Path

Open in order: "Layer 2 > Spanning-tree > Port Instance Configuration".

Interface Description

Instance port configuration interface is as follows:

Spanning-tree
Reboot
Save

Global Config
Instance Config
Port Config
Port Instance Configuration

MSTID 0 Config

☐	Port	Enable Switch	Instance	Priority	Path Cost	Role	State
☐	ge1	enable	0	128	20000000	disabled	discarding
☐	ge2	enable	0	128	20000000	disabled	discarding
☐	ge3	enable	0	128	20000000	disabled	discarding
☐	ge4	enable	0	128	20000000	disabled	discarding
☐	ge5	enable	0	128	20000000	disabled	discarding
☐	ge6	enable	0	128	20000000	disabled	discarding
☐	ge7	enable	0	128	20000000	disabled	discarding
☐	ge8	enable	0	128	20000	designated	forwarding
☐	xe1	enable	0	128	20000000	disabled	discarding
☐	xe2	enable	0	128	20000000	disabled	discarding
☐	xe3	enable	0	128	20000000	disabled	discarding
☐	xe4	enable	0	128	20000000	disabled	discarding

The main element configuration description of instance port configuration interface:

Interface Element	Description
MSTID	Choose multiple Spanning-tree ID number.
Port	The corresponding port name of the device Ethernet port.
Enable Switch	Port enable status: - Enable: participate in spanning-tree; - Disable: not participate in spanning-tree.
Instance	Instance ID number port belongs to.
Priority	Port priority, the value range is 0-240, the step size is 16, the default value is 128, and the priority based on 0-15 times the value of 16 can be selected. Note: Port priority level in bridge, port priority level is higher when the value is smaller. The higher the priority of the port, the more likely it is to be a root port.
Path Cost	The path cost from network bridge to root bridge, defaults to 20000000. Value range: 1-200000000. Note: When the configuration cost is the default value, the actual cost of link up port is converted according to the port rate, the rate of 10M corresponds to the cost of 2000000, and 100M corresponds to the cost of 200000.
Role	Role - unkn: Unknown; - root: Root port;

Interface Element	Description
	• desg: Designated port; • altn: Alternate port; • back: Backup port; • disa: Disable port.
State	Port status in spanning-tree: • Disable: Port close status; • Blocking: Blocked state; • Listening: Monitoring state. • Discarding: Discarding status • Learning: Learning state; • Forwarding: Forwarding state;

5.4 Ring

Ring is a private ring network algorithm developed and designed for highly reliable industrial control network applications that require link redundancy backup. Its design concept is completely in accordance with international standards (STP and RSTP) implementation, and do the necessary for industrial control application optimization, with Ethernet link redundancy, fault fast automatic recovery ability.

Ring adopts the design of no master station. The devices running the Ring protocol discover the loop in the network by exchanging information with each other, and block a certain port. Finally, the ring network structure is trimmed into a tree network structure without loop, thus preventing messages from circulating continuously in the ring network, and avoiding the reduction of processing capacity caused by repeated reception of the same message. In a multi-Ring network composed of 250 switches, when the network is interrupted or fails, the ring can ensure that the user network automatically resumes link communication within 20 ms.

Ring needs to manually divide the ring network ports in advance, support multiple ring network types such as single ring, coupled ring, chain and Dual Homing, and provide visual management of network topology. In a single Ring, Ring supports master/slave and no master configuration to meet various network environment requirements.

5.4.1 Global Configuration

Function Description

Configure Ring private protocol ring network.

Operation Path

Open in order: "Layer 2 > Global Configuration".

Interface Description

Global configuration interface is as follows:

The main element configuration description of global configuration interface:


Interface Element	Description
Enable Switch	Enable switch, which can enable the Ring network function after being enabled.
Ring Group	Support ring group 1-12, it can create multiple ring networks at the same time.
Ring ID	When multiple switches form a ring, the current ring ID would be network ID. Different ring network has different ID. Value range is 1-255. Note: The ring network identification must remain the same in one ring network.
Ring Port 1	The network port 1 on the switch device used to form the ring network. Note: When the ring network type is "Couple", ring port 1 is the "Coupled Port". Coupling port is the port that connects different network identities.
Port 1 State	Conduction state of ring network port 1.
Ring Port 2	The network port 2 on the switch device used to form the ring network.

Interface Element	Description
	Note: When the ring network type is “Couple”, ring port 2 is the “console port”. Console port is the port in the chain where two rings intersect.
Port2 State	Conduction state of port 2 of ring network.
Ring Type	According to the requirement in the scene, user can choose different ring type. • Single: single ring, using a continuous ring to connect all device together. • Couple: couple ring is a redundant structure used for connecting two independent networks. • Chain: chain can enhance user's flexibility in constructing all types of redundant network topology via an advanced software technology. • Dual-homing: two adjacent rings share one switch. User could put one switch in two different networks or two different switching equipments in one network.
Hello Time (Unit: 100ms)	Hello_time is the sending time interval of Hello packet; via the ring port, CPU sends query packet to adjacent device for confirming the connection is normal or not. Value range is 0-300.
Master-slave	Single ring supports no master station and one master and multiple slave modes (optional): • No-master station mode: When all the single-loop devices are slave stations, the single-loop structure is no-master station. • One-Master Multi-Slave mode: When the device is set as master device and one end of it is backup link, it can enable backup link to ensure the normal operation of the network when failure occurs in ring network.
Heartbeat	Heartbeat detection mechanism. When this configuration is enabled, the network association will periodically send heartbeat messages to detect whether the corresponding devices are in live state, thus enhancing the reliability of the network.

Single Ring Configuration


Enable Single, enable ring group 1 (other ring group is OK), Set the device port 4 and port 5 to ring port, and set other switches to the same configuration as the switch

above, Enable these devices, and adopt network cable to connect port 4 and port 5 of the switch, then search it via network management software, the ring topology structure picture as below:

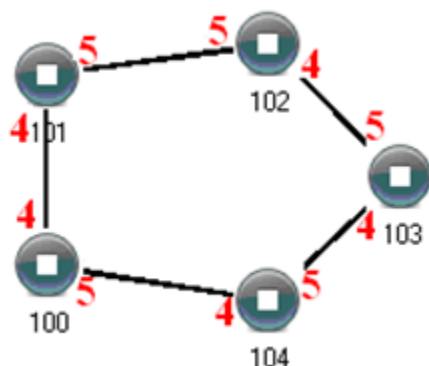

Double Ring Configuration

Double ring as shown below, in the figure, double ring is the tangency between two rings, and the point of tangency is NO. 105 switch.

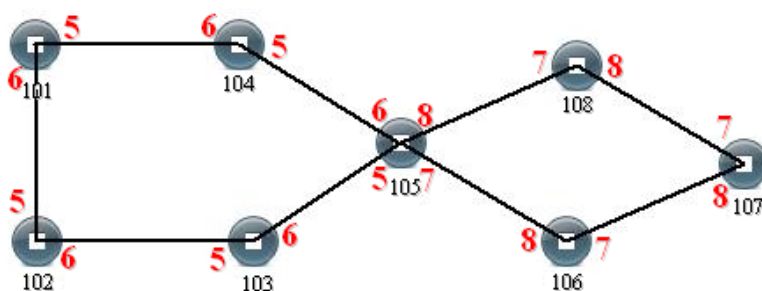


Configuration Method:

- Step 1** Adopt single ring configuration method to configure port 5 and port 6 of NO. 101, 102, 103, 104, 105 switches as the ring port, and the ring group is 1;
- Step 2** Adopt single ring configuration method to configure port 7 and port 8 of NO. 105, 106, 107 and 108 switches as the ring ports and the ring group 2;
- Step 3** Adopt network cable to connect the ring group 1;
- Step 4** Adopt network cable to connect the ring group 2;
- Step 5** Search the topology structure picture via network management software;
Since NO. 105 devices belong to two ring groups, the network IDs of the two ring groups cannot be the same.

Coupling Ring Configuration

Coupling ring basic framework as the picture below:

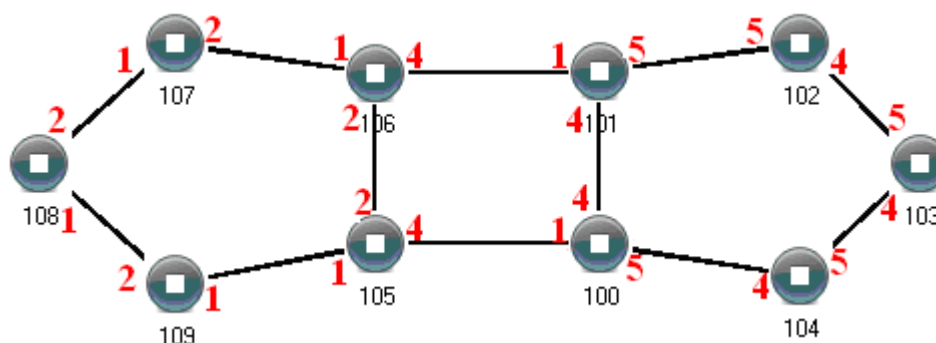


Operation method:

- Step 1** Enable ring network group 1 and 2: (Hello_time could be disabled, but the time could not be set to make Hello packet send too fast, otherwise it would effect CPU processing speed seriously);
- Step 2** Set the ring port of NO. 105, 106 device ring group to port 1 and port 2, network identification to 1, ring type to Single; Set the coupling port of ring group 2 to port 4, console port to 2, ring identification to 3, ring type to Coupling.
- Step 3** Set the ring port of NO. 100, 101 device ring group 1 to port 4 and port 5, network identification to 2, ring type to Single; Set the coupling port of ring group 2 to port 1, console port to port 4, ring identification to 3, ring type to Coupling.
- Step 4** Set the ring port of NO. 107, 108 and 109 device ring group 1 to port 1 and port 2, network identification to 1, ring type to Single; Set the ring port of NO. 102, 103 and 104 device ring group 1 to port 4 and port 5, network identification to 2, ring type to Single.
- Step 5** Connect the port 4 and port 5 of five devices NO. 100-104 to the single ring in turn, adopt network cable to connect the port 1 and port 2 of four devices NO. 105-109 to the single ring in turn, Then adopt Ethernet cable to connect port 4 of NO. 106 device to port 1 of NO. 101 device, port 4 of NO. 105 device to port 1 of NO. 100 device, coupling ring combination is completed.

Console ports are two ports connected to NO. 105 device and NO. 106 device in the above picture. The two ports connected to NO. 100 device and NO. 101 device are also called console ports.

Chain Configuration

Chain basic framework as the picture below:

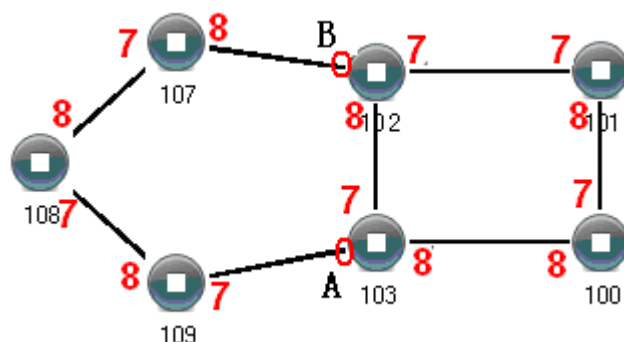

Operation method:

- Step 1** Enable ring group1: (Hello_time could be disabled, but the time shouldn't be set to send Hello packet too fast, otherwise it would affect the processing speed of CPU seriously).
- Step 2** Set the ring port of NO. 100, 101, 102 and 103 device ring group 1 to port 7 and port 8, network identification to 1, ring type to Single. Set the ring port of NO. 107, 108 and 109 devices ring group 1 to port 7 and port 8, network identification to 2, ring type to Chain.
- Step 3** Adopt network cable to connect the port 7 and port 8 of three devices NO. 107-109, adopt network cable to connect the port 7 and port 8 of four devices NO. 100-103 to the single ring in turn, then adopt network cable to connect port 7 of NO. 107 device and port 7 of NO. 109 device to normal ports of NO. 102 and 103 device, chain combination is complete.



Note

- Port that has been set to port aggregation can't be set to rapid ring port, and one port can't belong to multiple rings;
- Network identification in the same single ring must be consistent, otherwise it cannot form a normal ring or normal communicate;
- Network identification in different ring must be different;
- When forming double ring and other complex ring, user should notice whether the network identification in the same single ring is consistent, and network identification in different single ring is different.

5.4.2 Ring Information

Function Description

This function is provided by the system, and you can view it through the "Ring Information" page.

Operation Path

Open in order: "Layer 2 > Ring Information".

Interface Description

Ring Information interface is as follows:

The main element configuration description of Ring information interface:

Interface Element	Description
Ring Network Group	Support the display of ring network groups 1-12.
Local Ring Network Port 1	The network port 1 on the switch device used to form the ring network. Note: When the ring network type is "Couple", ring port 1 is the "Coupled Port". Coupling port is the port that connects different network identities.
Neighbor Ring Network Port 1	The port number of the neighbor ring network port 1, for example: 3.
Convergence Device MAC Address 1	The MAC address 1 of the convergence device is the MAC address 1 of the ring network device, for example, 00:22:6f:01:d0:a2.
Neighbor MAC address 1	The MAC address 1 of the neighbor device of the ring network group, for example: 00:22:6f:01:cc:a2.
Local Ring Network Port 2	The network port 2 on the switch device used to form the ring network. Note: When the ring network type is "Couple", ring port 2 is the "console port". Console port is the port in the chain where two rings intersect.
Neighbor Ring Network	The port number of the neighbor ring network port 2, for

Interface Element	Description
Port 2	example: 5.
Convergence Device MAC Address 2	The MAC address 2 of the convergence device is the MAC address 2 of the ring network device, for example, 00:22:6f:01:d0:a2.
Neighbor MAC Address 2	The MAC address 2 of the neighbor device of the ring network group, for example: 00:22:6f:01:cc:a2.
Ring Network Status	Ring network status display: - stable: indicates that the current ring network group is in a stable state; - open: indicates that the current ring network group is in an open state.

5.5 MRP

MRP (Media Redundancy Protocol), in MRP ring network, one device is regarded as redundancy manager, and the others are redundancy client. MRP supports up to 50 devices, and when the loop network is interrupted, the loop reconfiguration time is less than 200ms.

Function Description

Configure MRP ring network.

Operation Path

Open in order: "Layer 2 > MRP".

Interface Description

MRP interface is as below:

The main element configuration descriptions of MRP interface:

Interface Element	Description
Enable Switch	Enable switch, which can enable the MRP ring network

Interface Element	Description
	function after being enabled.
Group ID	The ID of ring network, its value range is 1-50.
Port1	Ring network port 1, the ports that make up the ring network and the forwarding state of port data.
Port2	Ring network port 2, the ports that make up the ring network and the forwarding state of port data.
Role	The redundant role of device in the ring network can be selected as follows: • manager: media redundancy manager • client: media redundancy client
Interval (ms)	When the MRP ring network is disconnected, the ring network reconfigures the convergence time. The options are as follows: • 200ms • 500ms
VLAN	VLAN ID used by MRP management message, its value range is 1-4094.
Ring State	Status of MRP ring network, Open or Close.
Domain ID	MRP ring network group domain ID, the format is x.x.x.x.x.x.x.x.x.x.x.x.x.x.x.x.

5.6 ERPS

Ethernet Ring Protection Switching (ERPS) is the Ethernet Ring Network Link Layer Technology with high reliability and stability. ERPS is a protocol defined by the International Telecommunication Union Telecommunication Standardization Sector (ITU-T) to eliminate loops at layer 2. Because the standard number is ITU-T G.8032/Y1344, ERPS is also called G.8032. ERPS defines Ring Auto Protection Switching (RAPS) Protocol Message and protection switching mechanisms. It can prevent the broadcast storm caused by data loop when the Ethernet ring is intact. When the Ethernet ring link failure occurs, it has high convergence speed that can rapidly recover the communication path between each node in the ring network.

5.6.1 Timer Configuration

Function Description

Configure the parameters of ERPS ring network timer. After the failure of the node device or link in the ERPS ring is restored, in order to prevent the flap, the timer to the ERPS ring will be enabled to help reduce the interruption time of traffic flow.

In ERPS protocol, timers used mainly include WTR (Wait to Restore) Timer, Guard and Hold Timer.

- WTR timer

If an RPL owner port is unblocked due to a link or node fault, the involved port may not go Up immediately after the link or node recovers. Blocking the RPL owner port may cause network flapping. To prevent this problem, the node where the RPL owner port resides starts the wait to restore (WTR) timer after receiving a RAPS (NR) message. The WTR Timer will be turned off if SF(Signal Fail) RAPS messages are received from other ports before the timer expires. If the node does not receive any RAPS (SF) message before the timer expires, it blocks the RPL owner port when the timer expires and sends NR-RB (RPL Block, RPL) RAPS message. After receiving this RAPS (NR, RB) message, the nodes set their recovered ports on the ring to the Forwarding state.

- Guard timer

Device involved in link failure or node failure sends NR(No Request) RAPS message to other device after failure recovery or clearing operation, and starts Guard Timer at the same time, and does not process NR RAPS message before the timer expires, in order to prevent receiving expired NR RAPS message. Before the Guard timer expires, the device does not process any RAPS (NR) messages to avoid receiving out-of-date RAPS (NR) messages. After the Guard timer expires, if the device still receives a RAPS (NR) message, the local port enters the Forwarding state.

- Hold Timer

On Layer 2 networks running ERPS, there may be different requirements for protection switching. For example, on a network where multi-layer services are provided, after a server fails, users may require a period of time to rectify the server fault so that clients do not detect the fault. Users can set the Hold timer. If the fault occurs, the fault is not immediately sent to ERPS until the Hold Timer expires and the fault is still not recovered.

Operation Path

Open in order: "Layer 2 > ERPS > Timer Configuration".

Interface Description

Timer configuration interface is as follows:

Main elements configuration description of timer configuration interface:

Interface Element	Description
Timer Name	The name of ERPS timer, which supports 1-32 characters and consists of uppercase letters, lowercase letters, numbers or special characters (! @ _-).
WTR (m)	WTR timer, value range is 1-12, unit: minute.
Guard timer (unit: 10ms)	Guard timer, its value range is 1-200, unit 10ms.
Hold Timer (unit: 100ms)	Hold timer, its value range is 0-100, unit 100ms.
Reversible	ERPS reversible mode status, options as follows: - enable If the failed link recovers, the RPL owner port will be blocked again after waiting for WTR time. Blocked links are switched back to RPL. - disable If the failed link recovers, the WTR timer is not started, and the original faulty link is still blocked and will be switched to RPL.

5.6.2 Ring Network Configuration

Function Description

Configure ERPS ring port.

Operation Path

Open in order: "Layer 2 > ERPS > Ring Network Configuration".

Interface Description

Ring configuration interface is as follows:

The main element configuration description of ring configuration interface:

Interface Element	Description
Ring Name	The name of ERPS ring network, which supports 1-32 characters, consists of uppercase letters, lowercase letters, numbers or special characters (! @ _-).
East Interface	ERPS ring port. Note: When the device is an intersecting node, only EastInterface can be configured for some ports of the sub-ring.
West Interface	ERPS ring port. Notice: - ERPS ring ports can be normal physical ports or static aggregation groups. - ERPS ring port cannot be opened at the same time with other layer 2 ring network protocols, when ERPS guard instance is not 0, it can be opened at the same time with MSTP. - ERPS ring ports can't be the same ports. - ERPS ring ports must be trunk ports and allow the ring instance VLAN to pass.

5.6.3 Instance Configuration

Function Description

Configure ERPS ring network instance.

Operation Path

Open in order: "Layer 2 > ERPS > Instance Configuration".

Interface Description

Instance configuration interface is as follows:

The main element configuration description of instance configuration interface:

Interface Element	Description
Instance Name	The name of the ERPS instance, which supports 1-32 characters, consists of uppercase letters, lowercase letters, numbers or special characters (! @ _ -).
Ring Type	ERPS instance ring network type, the options are as follows: - Major-ring: main ring, closed ring. - Sub-ring: a sub-ring, an unclosed ring, forms a multi-ring network such as an intersecting ring with the main ring.
Ring Name	ERPS Ring Name. Note: The ring name should be created in advance in ERPS "Ring Network Configuration", and the ring network port should be specified.
Instance ID	The ID of ERPS protection instance, its value range is 0-16. The VLAN in which RAPS PDUs and data packets are transmitted must be mapped to an Ethernet Ring Protection (ERP) instance so that ERPS forwards or blocks the packets based on configured rules. Note: - By default, all VLAN in MST domain are mapped to instance 0. - The mapping with VLAN instance can be created in spanning tree instance configuration.
Ring ID	The ID of ERPS ring network, its value range is 1-239. The ring ID is used to uniquely identify an ERPS ring, and all nodes on the same ERPS ring should be configured with the same ring ID. Note: ERPS ring ID will be the last byte of the MAC destination of the RAPS message.

Interface Element	Description
Timer Name	The name of the timer, which supports the default parameter timer or customization in the timer configuration.
RPL Role	Each device in ERPS ring is called a node. The node role is decided by user configuration, they are divided into following types: - owner: owner node is responsible for blocking and unblocking the port in RPL of the node to prevent loop forming and conduct link switching. - neighbor: neighbor node is connected to Owner node on RPL. Cooperating to the Owner node, it blocks and unblocks the ports on RPL of the node and conduct link switching. - non-owner: non-owner node is responsible for receiving and forwarding the protocol packet and data packet in the link.
RPL-Port	Port connected by RPL link, the options are as follows: - West-interface - East-interface
Topology Change Announcement	Notify the network topology change of this ERPS ring to other ERPS rings, and the enabling status is as follows: - Enable - Disable
Manage VLAN	The VLAN channel of protocol packet, its value range is 1-4094.
Level	ERPS ring network level, the value range is 0-7. The higher the ring network level, the greater the value. When the R-APS message needs to be transmitted across the ring, it can only be crossed by the ring with high rank to low rank.
State	The instance statuses of ERPS are as follows: - ERPS_INIT: initial state, which is the initialized state when the protocol starts. - ERPS__IDLE: idle state, it would enter this state when the ring topology is complete; - ERPS_FS: force-switch state, it would enter this state when force-switch command is implemented. - ERPS_MS: manual-switch state, it would enter this state when manual-switch command is implemented. - ERPS_PROTECTION: protection state, it would enter

Interface Element	Description
	this state when the ring link has failure. ERPS_PENDING: pending state, it would enter this state when the ring link has recovered from failure.
Start	ERPS instance startup status: - start - stop

5.7 IGMP Snooping

IGMP Snooping (Internet Group Management Protocol Snooping) is an IPv4 layer 2 multicast Protocol. It maintains the egress interface information of Group broadcast by snooping for the multicast protocol messages sent between the layer 3 multicast device and the user host, so as to manage and control the forwarding of multicast data message in the data link layer.

5.7.1 Global Configuration

Function Description

Enable/disable IGMP-Snooping and resident multicast.

Operation Path

Open in order: "Layer 2 > IGMP-Snooping > Global Configuration".

Interface Description

Global configuration interface is as follows:

The main element configuration description of global configuration interface:

Interface Element		Description
Global	Enable	Global enable configuration of IGMP-Snooping. By enabling IGMP Snooping, layer 2 devices can dynamically establish layer 2 multicast forwarding entries by listening to the IGMP protocol messages between the IGMP querier and the user host, thus realizing layer 2 multicast.
Switch		
Permanent Multicast		Do not age the received IGMP report member groups.
Vlan-id		VALN ID of the port that receives multicast messages.
Multicast addresses	or	Based on the network environment, the multicast address and source address information can be displayed.
source address		
Port		Port number that receives multicast messages.
Type		The method of adding multicast member ports to multicast groups. Possible display options are: • Remote: Dynamic grouping, joining multicast groups by sending messages through the terminal devices connected to the interface. • Static: Static grouping, joining multicast groups by configuring ports through commands. • Remote (static): Dynamic (static), joining multicast groups through static or dynamic means.
Uptime		Time that receives multicast messages.
Expire		Time when the multicast message expires. Possible display options are: • Static: Static address, multicast does not automatically expire and needs to be manually deleted or reconfigured. • Permanent: Permanent multicast, even if the multicast group members change, the multicast route will not be automatically deleted. • Include: When a network device receives multicast data, it checks whether the data belongs to the multicast group in the include list. If so, allow these data to pass through; If not, discard these data. • Exclude: When a network device receives multicast data, it checks whether the data belongs to the multicast group in the exclude list. If so, discard these data; If not, allow

Interface Element	Description
	these data to pass through.
Last Reporter	The IP address of the multicast member who sends the last report message to join the multicast group.
Version	Version of IGMP Snooping.

5.7.2 Interface Configuration

Function Description

Configure parameters related to IGMP Snooping of VLANIF interface.

Operation Path

Open in order: "Layer 2 > IGMP-snooping > Interface Config".

Interface Description

Interface configuration interface is as follows:

The main element configuration description of interface configuration interface:

Interface Element	Description
Interface	VLANIF interface, the value range is 1-4094.
Version	Different versions of IGMP Snooping can handle corresponding versions of IGMP protocol. IGMP Snooping protocol version, with the following options: • 1 • 2 • 3
Fast Leave	The enable state of the multicast group fast leave. After enabling fast leave, when the switch receives the IGMP Leave message sent by the host from a certain port and leaves a certain multicast group, it directly deletes the port from the

Interface Element	Description
	multicast forwarding table without waiting for the port aging, which can save bandwidth and resources. Note: When there are multiple receivers under the port, this function will cause other receivers in the same multicast group to interrupt receiving multicast data. It is recommended to configure this function on a port with only one receiver connected.
Querier	Enable status of IGMP Snooping inquirer. After the IGMP Snooping querier function is enabled, the switch will regularly send IGMP Query messages to all interfaces (including router ports) in the VLAN by broadcast. If the IGMP querier already exists in the multicast network, it will cause the IGMP querier to be re-elected.
Querier Address	The source IP address of IGMP Snooping querier when sending inquiry message.
Querier Election	Enable election status of IGMP Snooping querier. IGMPv2 uses an independent inquirer election mechanism. When there are multiple multicast routers on the shared network segment, the router with the smallest IP address becomes an inquirer, while the non-inquirer no longer sends universal group inquiry messages.
Enable State	IGMP Snooping enable status, enabling IGMP snooping on global or VLAN interface. Note: Only when IGMP snooping is enabled on the global and VLAN interfaces can the configuration of the other IGMP snooping properties on that interface take effect.

5.7.3 Mroute Interface Configuration

Function Description

Configure multicast router ports.

Operation Path

Open in order: "Layer 2 > IGMP Snooping > Mroute Interface Configuration".

Interface Description

Mroute Interface Configuration interface is as below:

Main elements configuration description of routing port configuration interface:

Interface Element	Description
Interface	VLANIF interface, the value range is 1-4094.
Port	The static router port in VLAN is generally the interface of Layer 2 device towards the upstream Layer 3 multicast device. If it is necessary to forward the IGMP Report/Leave message from an interface to the upstream IGMP querier stably for a long time, the interface can be configured as a static router port.

5.7.4 Mroute Interface information

Function Description

Check the router port information of IGMP Snooping in VLAN, including static router port and dynamic router port.

Operation Path

Open in order: "Layer 2 > IGMP Snooping > Mroute Interface Information".

Interface Description

Routing port information interface is as follows:

Configuration description of main elements of routing port information interface:

Interface Element	Description
Interface	VLANIF interface, the value range is 1-4094.
Port	Router port in VLAN.
Type	The type of router port, including dynamic and static.
Address	IP address.
Expiration Time	The remaining aging time of dynamic router port.

5.8 Link Flap Protection

Network jitter or network cable failure will cause frequent Up/Down changes in the physical state of device interface, which will lead to link flapping and frequent changes in network topology, thus affecting user communication. For example, in the application of active-standby link, when the physical Up/Down state of the main link interface changes frequently, the service will switch back and forth between the active-standby link, which will not only increase the device burden, but also cause the loss of service data.

In order to solve the above problems, users can configure the link flapping protection function, and close the interface whose physical Up/Down state changes frequently to keep it remain Down, so that the network topology will stop changing frequently back and forth.

5.8.1 Global Configuration

Function Description

Configure relative parameters of link flapping protection.

Operation Path

Open in order: "Layer 2 > Link Flap Protection > Global Configuration".

Interface Description

Global configuration interface is as follows:

Link Flap Protection

Reboot Save

Global Config Port Config

Detection Interval 20

Flap Threshold 5

Automatic Recovery disable

Recovery Time 3600

Apply

The main element configuration description of global configuration interface:

Interface Element	Description
Detection Interval	The value range of link detection interval is 10-100s, and the default value is 20s.
Flap Threshold	The threshold value of the number of oscillations detected by the link. If the number of oscillations exceeds the threshold value within the time specified by the "detection interval", an alarm log will be generated and the port will be set to shutdown. The range is from 3 to 100, default value is 5.
Automatic Recovery	Automatic recovery enable configuration. After being enabled, the port will automatically return to normal within the specified time.
Recovery Time	The value range of the time when the port automatically returns to normal is 30-86400s, and the default value is 3600s.

5.8.2 Port Configuration

Function Description

Enable link oscillation protection for this port.

Operation Path

Open in order: "Layer 2 > Link Flap Protection > Port Configuration".

Interface Description

Check port configuration interface as below:

☐	Port	Enable State	Port State
☐	ge1	-	down
☐	ge2	-	down
☐	ge3	-	down
☐	ge4	-	down
☐	ge5	-	down
☐	ge6	-	down
☐	ge7	-	down
☐	ge8	-	up
☐	xe1	-	down
☐	xe2	-	down
☐	xe3	-	down
☐	xe4	-	down

The main element configuration description of port configuration interface:

Interface Element	Description
Port	The corresponding port number of this device's Ethernet port.
Enable State	The enable status of port link flapping protection can be shown as follows: • ON: means enabled; • -:means disable
Port State	Ethernet port connection status, display as follows: • down: the port is not connected or forced to shutdown • up: port is connected.

5.9 Port Loopback Detection

The function of loop detection is to detect whether loop exists in external network of single port of switch. If it does, it would lead to address learning errors and broadcast storm easily, even switch and network breakdown in severe case. The influence

created by port loop could be effectively eradicated when enabling port protocol and closing port with loop.

Function Description

Enable port loop detection.

Operation Path

Open in order: "Layer 2 > Port Loop Detection".

Interface Description

Port loop detection interface is as follows:

☐	Port	State	Protected	Port Recovery Time (s)	Protected VLAN	Loop VLAN	Stable Packet Sending Interval (s)	Packet Sending Interval (s)
☐	ge1	Down	No	300	-	-	10	1
☐	ge2	Down	No	300	-	-	10	1
☐	ge3	Down	No	300	-	-	10	1
☐	ge4	Down	No	300	-	-	10	1
☐	ge5	Down	No	300	-	-	10	1
☐	ge6	Down	No	300	-	-	10	1
☐	ge7	Down	No	300	-	-	10	1
☐	ge8	Up	No	300	-	-	10	1
☐	xe1	Down	No	300	-	-	10	1
☐	xe2	Down	No	300	-	-	10	1
☐	xe3	Down	No	300	-	-	10	1
☐	xe4	Down	No	300	-	-	10	1

The main element configuration description of port loop detection interface:

Interface Element	Description
Enable Switch	Global enable configuration of port loop detection.
Port	The corresponding port number of this device's Ethernet port.
State	The connection status of this port, values are: - Down: the port is physically disconnected - Up: the port is connected - Shutdown: the port is closed - No Shutdown: the port is not closed
Protected	The protected status of the port can be shown as follows: - Yes - No
Port Recovery Time (s)	The delay time for the shutdown port to automatically return to normal after detecting the loop, ranging from 300-776000

Interface Element	Description
	seconds.
Protected VLAN	The VLAN ID of loop protection. The value range: 1-4094, the number of VLAN ID is ≤16. Note: This parameter must be configured, otherwise there would be errors in down sending the data.
Loop VLAN	The VLAN ID of the currently generated loop.
Stable Packet Sending Interval (s)	The normal interval time of loop detection data packet sending, value range: 10-300 seconds.
Packet Sending Interval (s)	After the port is connected, the interval between sending loop detection packets. In this interval, three detection messages will be sent out, and then the packet-sending interval will return to the normal packet-sending interval.

5.10 IPDT

Function Description

On the "IPDT Configuration" page, you can configure IPDT (IP Detection) to detect the specified destination address (ICMP) and link it with other functions, such as VRRP.

Operation Path

Open in order: "Layer-2 > IPDT".

Interface Description

The IPDT interface is as follows:

IPDT ID	State	Source IP	Destination IP	Echo-time	Echo-interval(ms)	Opposite Device State	Requests	Responses	Failed Requests	Other Responses
☐										

Main element configuration description of IPDT configuration interface:

Interface Element	Description
IPDT ID	IPDT session ID, value range 1-8.
State	IPDT function enable status.
Source IP	The source IP address that sends ICMP probe packet.
Destination IP	Destination IP address of ICMP probe packet.
Echo time	The number of request packets sent by each probe.

Interface Element	Description
Echo interval (ms)	The time interval of each probe request, the unit is 100ms, with a value range of 5-15.
Opposite Device State	The status of the opposite device is shown as follows: • UP: the opposite end device is online normally. • DOWN: there is no response from the opposite end device, which may lead to device disconnection or link failure. • undefined (undefined): undefined / undetected.
Requests	Display the number of probe packets sent.
Response	Display the number of probe packets answered by the destination IP.
Failed Requests	Displays the number of requests that failed.
Other Responses	Displays the number of probe packets responded by other devices.

6 IP Network

6.1 Interface

6.1.1 Layer 3 Interface

Function Description

Create layer 3 VLANIF Interfaces and configure interface IP address.

Operation Path

Open in order: "IP Network > Interface > Layer-3 Interface".

Interface Description

Layer 3 interface configuration interface is as follows:

The main element configuration description of interface configuration interface:

Interface Element	Description
Interface	VLANIF interface, the value range is 1-4094. VLANIF interface is a logical interface with layer 3 features that can be used to realize inter-VLAN access and Layer 3 task deployment by configuring the IP address of VLANIF Interfaces.
State	The connection state of the VLANIF port, which can be displayed as follows:

Interface Element	Description
	- Up: connection is normal. - Down: disconnected
Primary Address	Master IPv4 address and subnet mask of VLANIF interface, such as 192.168.1.1/24.
Secondary Address	Slave IPv4 address and subnet mask of VLANIF interface, such as 192.168.8.1/24. In order to connect one interface of the switch with multiple subnets, user can configure multiple IP addresses on one interface, one as the master IP address and the rest as the slave IP address.
Enable	The VLANIF interface enabled status can be displayed as follows: - enable - disable

6.2 ARP

ARP (Address Resolution Protocol) is the protocol that resolves IP address into Ethernet MAC address (or physical address).

In local area network, when the host or other network device sends data to another host or device, it must know the network layer address (IP address) and MAC address of the opposite side. So it needs a mapping from IP address to the physical address. ARP is the protocol to achieve the function.

6.2.1 ARP Information

Function Description

Check information such as IP address, MAC address and interface of the user via ARP table entries.

Operation Path

Open in order: "IP Network > ARP > ARP Information".

Interface Description

ARP Information interface is as follows:

The screenshot shows the ARP configuration interface. At the top, there are tabs for 'ARP Info', 'Static ARP', and 'ARP Parameter Config'. Below the tabs is a 'Clear ARP Table' button. A table displays the ARP entries with columns: Destination IP, Destination MAC, Interface, Type, Expiration Time (s), and Port. The table contains one entry: 192.168.1.22, 00:e0:4c:68:05:a0, vlanif1, dynamic, and empty fields for Expiration Time and Port. At the bottom, there are pagination controls: 'Each page' with a dropdown set to 20, 'Entries', 'Home page', 'Previous', 'Next', 'Last', a dropdown set to 1, and 'Total: 1 Entries'.

Destination IP	Destination MAC	Interface	Type	Expiration Time (s)	Port
192.168.1.22	00:e0:4c:68:05:a0	vlanif1	dynamic		

The main element configuration description of ARP information interface:

Interface Element	Description
Destination IP	Static binding or ARP resolves dynamically learned IP addresses.
Destination MAC	Static binding or ARP resolves dynamically learned MAC addresses.
Interface	VLANIF Interface to which ARP entry belongs.
Type	ARP table entry type, as shown below: - Static - Dynamic
Expiration Time (s)	The remaining survive time of dynamic ARP table entries, unit: second.
Port	Ports learned to ARP table entry.

6.2.2 Static ARP

Function Description

Configure static ARP entries, bind IP address and MAC address to avoid aging and prevent ARP attacks.

Operation Path

Open in order: "IP Network > ARP > Static ARP".

Interface Description

Static ARP interface is as follows:

The main element configuration description of static ARP interface:

Interface Element	Description
IP	IP address of static ARP table entry, such as 192.168.1.1.
MAC	MAC address bound to static IP address such as 0001.0001.0001.
Interface	Display VLANIF Interface to which static ARP entry belongs.

6.2.3 ARP Parameter Configuration

Function Description

Configure the aging time of dynamic ARP.

Operation Path

Open in order: "IP Network > ARP > ARP Parameter Configuration".

Interface Description

ARP parameter configuration interface is as follows:

The main element configuration description of ARP age-time interface:

Interface Element	Description
Interface	Display VLANIF Interface name in ARP entry.
MAX-age (s)	Configure aging time of dynamic ARP table entries, the value

Interface Element	Description
	range is 1-1200 seconds.

7 Unicast Routing

7.1 IPv4

7.1.1 IPv4 Routing Table

Function Description

Check IPv4 routing table information.

Operation Path

Open in order: "Unicast Routing > IPv4 > IPv4 Routing Table".

Interface Description

The IPv4 routing table interface is as follows:

IPv4

Reboot

Save

IPv4 Routing Table

IPv4 Static Route

Destination IP	Mask Length of Destination IP	Protocol Type	Next Hop	Egress Interface
192.168.1.0	24	connected	-	vlanif1

Each page20EntriesHome pagePreviousNextLast1Total: 1 Entries

The main elements configuration description of IPv4 routing interface:

Interface Element	Description
Destination IP	Destination IP addresses.
Mask Length of Destination IP	The length of destination subnet mask.
Protocol Type	The routing protocol type of the current connection.

Interface Element	Description
Next Hop	Gateway address information of next hop.
Egress Interface	Interface Name.

7.1.2 IPv4 Static Route

Static route refers to the route information that user or network administrator manually configures. When the network topology structure or link status changes, network administrator needs to manually modify relative static route information in the routing table. Static route usually adapts to simple network environment, under this environment, network administrator can clearly know the network topology structure, which is convenient for setting correct route information.

Function Description

Configure IPv4 static routing.

Operation Path

Open in order: "Unicast Routing > IPv4 > IPv4 Static Route".

Interface Description

The IPv4 Static Route interface is as follows:

The main element configuration description of IPv4 Static Route interface:

Interface Element	Description
Destination IP	Destination network IP address, such as destination address is 10.1.1.0.
Mask Length of Destination IP	Destination IP mask length. Value range is 0-32.
Next Hop	The gateway address of the next hop, format: no input or 192.3.3.3.

Interface Element	Description
Egress Interface	Interface Name.
Routing Distance Value	Specify the administrative distance of static routes. Distance values help routers determine preferences for different routes to the same destination. The lower the value, the more popular it is. Value range is 1-255.
Tag	The tag value set for the route, which is used for route filtering or management. Value range is 0-42949672.

8 Network Management

8.1 SNMP

Now, the broadest network management protocol in network is SNMP (Simple Network Management Protocol). SNMP is the industrial standard that is widely accepted and comes into use, it's used for guaranteeing the management information transmission between two points in network, and is convenient for network manager search information, modify information, locate faults, complete fault diagnosis, conduct capacity plan and generate a report. SNMP adopts polling mechanism and only provides the most basic function library, especially suit for using in minitype, rapid and low price environment. SNMP implementation is based on connectionless transmission layer protocol UDP, therefore, it can achieve barrier - free connection to many other products.

8.1.1 SNMP

Function Description

Enable/disable SNMP function.

Operation Path

Open in order: "Network > SNMP > SNMP Switch".

Interface Description

SNMP switch interface is as follows:

SNMP

Reboot Save

SNMP Switch View Community SNMP Group V3 User Trap Alarm

Enable Switch ☒

The main element configuration description of SNMP switch interface:

Interface Element	Description
Enable Switch	SNMP enable switch, which is enabled by default Note: If the agent side has opened, the SNMP server can't be closed.

8.1.2 View

Function Description

Add/delete SNMP view.

Operation Path

Open in order: "Network > SNMP > View".

Interface Description

View interface as below:

SNMP

Reboot Save

SNMP Switch View Community SNMP Group V3 User Trap Alarm

Add Delete

☐	Name	OID	Mode
☐	system	1	included

Each page 20 Entries Home page Previous Next Last 1 Total: 1 Entries

The main element configuration description of view interface:

Interface Element	Description
Name	SNMP view name definition, support 32 characters input.
OID	Node location information of MIB tree where the device resides.

Interface Element	Description
	Note: - OID object identifier, a component node of MIB, uniquely identified by a string of numbers that represent the path. - The information of OID could be viewed via the third-party software MG-SOFT MIB Browser.
Mode	Node OID dealing method, options as below: - Included: It contains all objects under the node subtree; - Excluded: Eliminate all objects beyond the node subtree.

8.1.3 Community

Function Description

Add/delete SNMP community. Define MIB view that community name can access, set MIB object access privilege of community name as read-write privilege or read-only privilege.

Operation Path

Open in order: "Network > SNMP > Community".

Interface Description

Community interface as below:

SNMP

Reboot Save

SNMP Switch View **Community** SNMP Group V3 User Trap Alarm

Add Delete

	Name	View Name	Read-write Type
☐	public	system	read-only

Each page 20 Entries Home page Previous Next Last 1 Total: 1 Entries

The main element configuration description of community interface:

Interface Element	Description
Name	Group name, including numbers or letters, with a length of no more than 32 characters.
View Name	SNMP view name.

Interface Element	Description
Read-write Type	View read-write permissions, options are as follows: - Read only - Read and write

8.1.4 SNMP Group

Function Description

Configure a new SNMP group and set the secure mode and corresponding SNMP view of the SNMP group.

Operation Path

Open in order: "Network > SNMP > SNMP Group".

Interface Description

SNMP Group interface is as follows:

Main elements configuration description of SNMP Group interface:

Interface Element	Description
Name	SNMP group name, ranging from 1 to 32 bytes.
Encryption Mode	Whether to authenticate and encrypt the message, values: - auth: indicates that the message is authenticated but not encrypted; - noauth: indicates that the message is neither authenticated nor encrypted; - priv: indicates that the message is authenticated and encrypted.
Read View	Specify the read view of the group.
Write View	Specify the write and read view of the group

Interface Element	Description
Notification View	Specify the notification view of the group.

8.1.5 V3 User

Function Description

SNMPv3 adopts User-Based Security Model (USM) authentication mechanism. Network manager can configure authentication and encryption function. Authentication is used to verify the validity of the packet sender and prevent unauthorized users from accessing it. Encryption encrypts the transmission packet between NMS and Agent to prevent eavesdropping. It adopts authentication and encryption function to provide higher security for the communication between NMS and Agent.

Operation Path

Open in order: "Network > SNMP > V3 User".

Interface Description

V3 user interface is as follows:

The main element configuration description of V3 user interface:

Interface Element	Description
User Name	SNMP v3 user name definition, can only contain numbers, letters, or @_! , no longer than 32 characters.
Group Name	Group name, ranging from 1 to 32 bytes. Note: Group name must be created snmp group, and only created group can create SNMP v3 users.
Security Mode	Whether to authenticate and encrypt the message, values: auth: indicates that the message is authenticated but not encrypted;

Interface Element	Description
	- noauth: indicates that the message is neither authenticated nor encrypted; - priv: indicates that the message is authenticated and encrypted.
Authentication Mode	Authentication mode type, acceptable value: - Md5: Information abstract algorithm 5; - Sha: Secure hash algorithm.
Encryption Mode	V3 user data encryption algorithm, options as follows: - Des: Adopt data encryption algorithm; - Aes: Adopt advanced encryption standard.
Privilege	V3 user access rights, options are as follows: - Ro: read only - RW: read and write

V3 User: “Add” Interface Description

The screenshot shows a dialog box titled "Add" with a close button (X) in the top right corner. It contains the following configuration fields:

- User Name: Text input field.
- Group Name: Dropdown menu.
- V3 Enable: Dropdown menu with "enable" selected.
- Authentication Enable: Dropdown menu with "enable" selected.
- Authentication Information: Dropdown menu with "md5" selected.
- Authentication Password: Text input field.
- Priv Enable: Dropdown menu with "Enable" selected.
- Encrypted Information: Dropdown menu with "des" selected.
- Encrypted Password: Text input field.
- Privilege: Dropdown menu with "ro" selected.

An "OK" button is located at the bottom center of the dialog.

The main element configuration description of V3 user “add” interface:

Interface Element	Description
User Name	SNMP v3 user name definition, can only contain numbers, letters, or @_! , no longer than 32 characters.
Group Name	The drop-down list of SNMP group name.
V3 Enable	V3 Enable, options are as follows: - enable - disable
Authentication	Authentication Enable, options are as follows:

Interface Element	Description
Enable	- enable - disable
Authentication Information	Authentication information type, acceptable values: - Md5: Information abstract algorithm 5; - Sha: Secure hash algorithm.
Authentication Password	Authentication password, character string, length greater than or equal to 8 bytes.
Priv Enable	Priv Enable, options are as follows: - enable - disable
Encrypted Information	V3 user data encryption algorithm, options as follows: - Des: Adopt data encryption algorithm; - Aes: Adopt advanced encryption standard.
Privacy Password	Encrypted password, character string, length greater than or equal to 8 bytes.
Privilege	Set user rights to ro or rw.

8.1.6 Trap Alarm

Function Description

Base on TCP/IP protocol, SNMP usually adopts UDP port 161 (SNMP) and 162 (SNMP-traps), SNMP protocol agent exists in the network device and adopts information specific to the device (MIBs) as the device interface; these network devices can be monitored or controlled via Agent. When a trap event occurs, the message is transmitted by SNMP Trap. At this point, an available trap receiver can receive the trap message.

Operation Path

Open in order: "Network > SNMP > Trap Alarm".

Interface Description

Trap alarm interface as below:

The main element configuration description of Trap alarm interface:

Interface Element	Description
Enable	SNMP Trap alarm enable switch.
Address	IP address of SNMP management device, used for receiving alarm information, such as PC.
Mode	SNMP management device version, options as below: - v1 - v2c
Team Name	Group name.
Port Number	The number of the port that receives the alarm.

8.2 RMON

RMON (Remote Network Monitoring) mainly achieves statistics and alarm functions, which are used for remote monitoring and management of management device to managed devices. Statistical function refers to that managed device can periodically or continuously keep track of all the traffic information on the network segment connected to the port, for example, the total number of packets received on a network segment in a period of time, or the total number of received super long packets. Alarm function refers to that the managed device can monitor the value of the specified MIB variable. When the value reaches the alarm threshold (such as the port rate reaches the specified value or the proportion of broadcast message reaches the specified value), it can automatically log and send Trap messages to the managed device.

8.2.1 Event Group

Function Description

On the "Event Group" page, user can add, delete or check the configuration information of event.

Operation Path

Open in order: "Network > RMON > Event Group".

Interface Description

Event group interface as below:

The main element configuration description of event group interface:

Interface Element	Description
No.	Triggered event serial number when monitoring MIB object exceeds threshold value. Note: This serial number corresponds to the rising event index and falling event index set in RMON alarm configuration information.
Description	Some description information for describing the event.
Type	Event dealing method, options as below: - log: Record the event in the log table when the event is triggered; - trap: Send Trap information to management station for informing the occurring of event when the event is triggered; - Log, trap: Record the event in the log table and produce a trap information when the event is triggered.
Team Name	Community name of the network management station receiving the alarm information.
Last Occurred Time	The time of the last incident occurred.
Owner	The creator of the table entry.
Operation	Check the entry and click the "Delete" button to delete it.

8.2.2 Statistical Group

Function Description

On the "Statistical Group" page, user can add, delete or check the configuration information of statistical.

Operation Path

Open in order: "Network > RMON > Statistics Group".

Interface Description

Statistical group interface as below:

The main element configuration description of statistical group interface:

Interface Element	Description
No.	Serial number is used to identify a special application interface, when the serial number is same to the application interface serial number set before, previous configuration will be replaced.
Port Number	The counted port serial number.
Port	The name of the port being counted.
Owner	The creator of the table entry.
Operation	Check the entry and click the "Delete" button to delete it.

8.2.3 Historical Group

Function Description

On the "Historical Group" page, user can add, delete or check the configuration information of history.

Operation Path

Open in order: "Network > RMON > Historical Group".

Interface Description

Historical group interface as below:

The main element configuration description of historical group interface:

Interface Element	Description
No.	Serial number is used to identify a special application interface, when the serial number is same to the application interface serial number set before, previous configuration will be replaced.
Actual Number Of Configured Samples	Set the historical statistics capacity corresponding to the history group, ranging from 1-65535.
Port	The recorded port name.
Maximum Configurable Sampling Number	Maximum capacity of historical statistics table supported by device.
Sampling Period	The interval time of gaining statistics data each two times.
Owner	The creator of the table entry.
Operation	Check the entry and click the "Delete" button to delete it.

8.2.4 Alarm Group

Function Description

On the "Alarm Group" page, user can add, delete the alarm or check the alarm configuration information. Alarm type adopts absolute to directly monitor MIB object value; Alarm type adopts delta to monitor changes in MIB object values between two samples;

- When monitoring MIB object reaches or surpasses the rising threshold value, it will trigger corresponding event of rising event index;
- When monitoring MIB object reaches or surpasses declining threshold value, it will trigger corresponding event of declining event index;

Operation Path

Open in order: "Network > RMON > Alarm Group".

Interface Description

Alarm group interface as below:

The main element configuration description of alarm group interface:

Interface Element	Description
No.	Triggered event serial number when monitoring MIB object exceeds threshold value. Note: This serial number corresponds to the rising event index and falling event index set in RMON alarm configuration information.
State	The status of alarm list items, which is not configurable when configuring alarm list items and is VALID by default.
Sampling Interval	Sampling time interval value, value range is 1-4294967295, unit: second.
Sampling Type	Two sampling methods, options as follows: • Absolute: When alarm variable value reaches alarm threshold value, an alarm is triggered; If the second sampling is same to last sampling alarm type, alarm isn't triggered again; • Delta: When alarm variable value reaches alarm threshold value during each sampling, an alarm is triggered.
Alarm Parameter	The monitored MIB node supports string format instead of oid format.
Statistical Values	That is, the defined statistical group.
Rising Edge	Alarm variable value, upper limit alarm, threshold value is

Interface Element	Description
Threshold	between 1-12147483647. Note: In the rising process of alarm variable value, when the variable value surpasses rising threshold, an alarm occurs at least one time.
Rising Edge Event	Event index, when alarm variable value reaches or surpasses the rising event threshold value, it will activate corresponding event in event group, value range is 1-65535.
Falling Edge Threshold	Alarm variable value, lower limit alarm, threshold value is between 1-12147483647. Note: In the falling process of alarm variable value, when the variable value reaches falling threshold, an alarm occurs at least one time.
Falling Edge Event	Event index, when alarm variable value reaches or is less than the falling threshold value, it will activate corresponding event in event group, value range is 1-65535.
Alarm effective type	There are three alarm effect types. The options are as follows: • Rising edge effective • Falling edge effective • Both the rising and falling edges are effective
Owner	The creator of the table entry.
Operation	Check the entry and click the "Delete" button to delete it.

8.3 LLDP

LLDP (Link Layer Discovery Protocol) is a link layer discovery protocol defined in IEEE 802.1ab. LLDP is a standard layer-2 discovery method, which can organize the management address, device identification, interface identification and other information of local devices and publish it to its neighbor devices. After receiving the information, the neighbor devices save it in the form of standard MIB(Management Information Base) for the network management system to query and judge the communication status of links.

8.3.1 Global Configuration

Function Description

Configure LLDP global parameter.

Operation Path

Open in order: "Network > LLDP > Global Configuration".

Interface Description

Global configuration interface is as follows:

The main element configuration description of global configuration interface:

Interface Element	Description
Enable Switch	LLDP enable switch.
System Name	The system name, which supports 0-32 characters, consists of uppercase letters, lowercase letters, numbers or special characters (! @ _-).
System Description	The system description information, which supports 0-32 characters, consisting of uppercase letters, lowercase letters, numbers or special characters (! @ _-).
Send Period	LLDP message sending cycle, the value range is 5-32768. When no device status changes, the device periodically sends LLDP messages to its adjacent nodes. Note: Type of TLV(Type/Length/Value) encapsulated by LLDP message, which can include system name and system description.

8.3.2 Port Configuration

Function Description

Configure the sending and receiving mode and management address of the port.

Operation Path

Open in order: "Network > LLDP > Port Configuration".

Interface Description

Check port configuration interface as below:

☐	Port	State	Enable State	Config IP
☐	ge1	down	txrx	192.168.1.254
☐	ge2	down	txrx	192.168.1.254
☐	ge3	down	txrx	192.168.1.254
☐	ge4	down	txrx	192.168.1.254
☐	ge5	down	txrx	192.168.1.254
☐	ge6	down	txrx	192.168.1.254
☐	ge7	down	txrx	192.168.1.254
☐	ge8	up	txrx	192.168.1.254
☐	xe1	down	txrx	192.168.1.254
☐	xe2	down	txrx	192.168.1.254
☐	xe3	down	txrx	192.168.1.254
☐	xe4	down	txrx	192.168.1.254

The main element configuration description of port configuration interface:

Interface Element	Description
Port	The corresponding port name of the device Ethernet port.
State	Ethernet port connection status, display status as follows: - down: port is disconnected - up: port is connected
Enable state	The options of LLDP working states of device port are as follows: - txonly: working mode is Tx, only sending and not receiving LLDP message. - rxonly: working mode Rx, only receiving and not sending LLDP message. - txrx: working mode is TxRx, both sending and receiving LLDP message. - disable: the working mode is Disable, neither receiving nor sending LLDP message. Note:

Interface Element	Description
	By default, the working mode of LLDP is TxRx when global LLDP is enabled.
Config IP	Corresponding LLDP management IP address of the port. Note: - LLDP management address is the address to be marked and managed by network management system. Management address can definitely mark a device, which is beneficial to the drawing of network topology and network management. Management address is encapsulated in Management Address TLV field of LLDP message and sent to adjacent nodes. - The management address released by the port in the LLDP message defaults to the main IP address of the smallest VLAN o in the VLAN where the port resides. If the VLAN is not configured with a main IP address, it will be 0.0.0.0.

8.3.3 Neighbor Information

Function Description

View neighbor-related information.

Operation Path

Open in order: "Network > LLDP > Neighbor Information".

Interface Description

Neighbor information interface is as follows:

Main elements configuration description of neighbor information interface:

Interface Element	Description
Local Port	Local port number of local switch connected to adjacent devices.
Chassis ID type	Neighbor device address type, which had been configured as MAC address.
Chassis ID	The MAC address of the neighbor device.

Interface Element	Description
Port ID type	The ID type of the neighbor port, and the default configuration of our device is the port number.
Port ID	According to the configuration of "Neighbor Port ID Type", the port ID is displayed correspondingly.
System Name	System name of the neighbor device.
Config IP	Management IP address of neighbor device or port.

8.4 DHCP-Server

DHCP(Dynamic Host Configuration Protocol) is usually applied to large LAN environment. Its main functions are centralized management and IP address distribution, which enables the host in the network to acquire IP address, Gateway address, DNS server address dynamically and improve the usage of addresses.

8.4.1 DHCP Switch

Function Description


On the "DHCP Switch" page, user can enable/disable DHCP.

Operation Path

Open in order: "Network > DHCP-Server> DHCP Switch".

Interface Description

DHCP switch configuration interface is as follows:

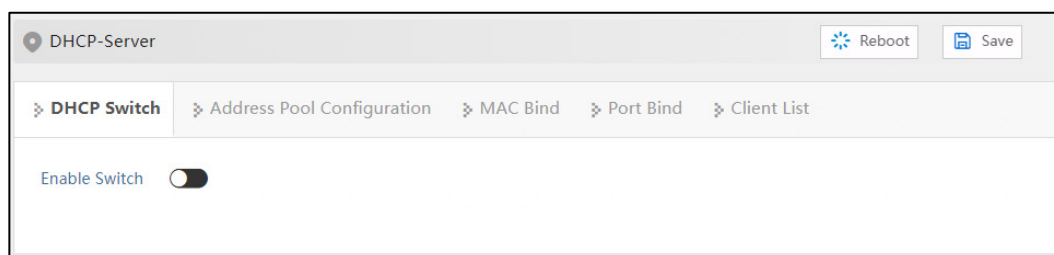

The main element configuration description of DHCP switch configuration interface.

Interface Element	Description
Enable Switch	After enabling the switch, set the device as a DHCP server by setting static allocation address table, the device can distribute IP address to devices connected to it.

8.4.2 Address Pool Configuration

After user defines DHCP range and exclusion range, surplus addresses constitute an address pool; addresses in the address pool can be dynamically distributed to hosts in network. Address pool is valid only for the method of automated IP acquisition; manual IP configuration can ignore this option only if conforming to the rules.

DHCP server chooses and distributes IP address and other relative parameters for client from address pool.

DHCP server adopts tree structure: Tree root is the address pool of natural network segment. Branch is the subnet address pool of the network segment. Leaf node is the manually binding client address. The order of address pool at the same level is decided by the configuration order. This kind of tree structure has realized the inheritance of configuration, that is, subnet configuration inherits the configuration of natural network segment, and client configuration inherits the subnet configuration. Therefore, as for some common parameters (such as DNS server address), user only needs to configure in the natural network segment or subnet. Specific inheritance situation as follows:

1. When the parent-child relationship is established, sub address pool will inherit the existing configuration of parent address pool.
2. After the parent-child relationship is established, parent address pool is configured, sub-address pool will inherit or not, two situations as follows:
 - If the child address pool doesn't include the configuration, it will inherit the configuration of parent address pool;
 - If the child address pool has included the configuration, it won't inherit the configuration of parent address pool.

Function Description

On the "Address Pool Config" page, user can add, delete the address pool and look over the configuration information of address pool.

Operation Path

Open in order: "Network > DHCP-Server > Address Pool Configuration".

Interface Description

Address pool configuration interface is as follows:

The main element configuration description of DHCP pool configuration interface:

Interface Element	Description
Address Pool Name	The name of address pool, up to 32 characters.
Allocate Network Segment	Address pool distributes the IP address network segment of client, for example: 192.168.0.1/24.
Lease Time	IP address utilization valid time of client, format: day, hour, minute, range is 0-30 day, 0-24h and 0-60m, which are separated by space. Note: When the time of ip address obtained by dhcp client reaches the lease time, it needs to renew it otherwise the ip address would be invalid and dhcp client needs to request ip address again.
Default Gateway	Default client gateway address, example: 192.168.1.0/24
Allocate IP Range	The lowest address and the highest address in the DHCP address pool. The address that belongs to the range could be distributed effectively.
DNS Server IP	IP address of NDS server, for example: 192.168.1.1.
Operation	Click "Edit" button to modify the information of address pool. Click "Delete" under "operation" to delete the corresponding address pool entry directly.
Add	Click "add" button to add the information of address pool.
Delete	Check address pool entry, click "delete" button to delete address pool information.

8.4.3 MAC Bind

Function Description

On the "MAC Bind" page, users can bind the IP address assigned by the address pool to the MAC address of the device.

Operation Path

Open in order: "Network > DHCP Server > MAC Bind".

Interface Description

The MAC bind configuration interface is as follows:

The main element configuration description of MAC binding interface:

Interface Element	Description
Add	Click the "Add" button to add a static binding between the IP address assigned by the address pool and the MAC address of the device.
Delete	After checking the entry, click the "Delete" button to delete the binding of the corresponding IP address and MAC address.
Address Pool Name	Corresponding list name of DHCP address pool.
IP	IP addresses distributed by DHCP address pool, IP addresses obtained by this MAC address.
MAC	The MAC address information of this device.
Operation	Click "Delete" under "operation" to delete this MAC binding.

8.4.4 Port Bind

Function Description

On the "Port Bind" page, users can bind the relationship of IP addresses assigned by ports. Device A enables DHCP Server function and sets 2 static distribution address tables: 192.168.1.19 corresponding port is 1; 192.168.1.20 corresponding port is 2. After device B enables IP address automated acquisition function, if device A is connected to device B via port 1, device B can automatically gain IP address 192.168.1.19; If device A is connected to device B via port 2, device B can automatically gain IP address 192.168.1.20.

Operation Path

Open in order: "Network > DHCP Server > Port Bind".

Interface Description

Port bind configuration interface is as follows:

The main element configuration description of port binding interface:

Interface Element	Description
Add	Click "Add" button to add a static binding between IP address allocated by address pool and layer 2 port.
Delete	After checking the entry, click the "Delete" button to delete the binding between the corresponding IP address and the layer 2 port.
Address Pool Name	Corresponding list name of address pool.
IP	IP address distributed by DHCP address pool, the IP addresses that client gains in the port.
Port	The corresponding port name of the device Ethernet port.
Operation	Click "Delete" under "Operation" to delete this port binding.

8.4.5 Client List

Function Description

On the "Client List" page, user can look over the information of DHCP client.

Operation Path

Open in order: "Network > DHCP-Server > Client List".

Interface Description

Client list interface is as follows:

The main element configuration description of client list interface:

Interface Element	Description
IP	IP address of DHCP client device.
MAC	MAC address of DHCP client device.
Remaining Time (s)	Valid remaining time of DHCP client.

8.5 DHCP Snooping

The function of DHCP Snooping

DHCP Snooping is a security feature of DHCP, which has the following functions:

- 1 Ensure that clients get IP addresses from legitimate servers.

If there is a pseudo-DHCP server set up privately in the network, it may cause the DHCP client to get the wrong IP address and network configuration parameters, and can't communicate normally. To enable DHCP clients to obtain IP addresses through legitimate DHCP servers, DHCP Snooping security mechanism allows ports to be set as trusted ports and untrusted ports:

- The trust port forwards the received DHCP message normally.
- The untrusted port discards the DHCP-ACK and DHCP-OFFER messages responded by the DHCP server.

The ports connecting DHCP server and other DHCP Snooping devices need to be set as trusted ports, and other ports should be set as untrusted ports, so as to ensure that DHCP clients can only obtain IP addresses from legitimate DHCP servers, while pseudo-DHCP servers erected privately cannot assign IP addresses to DHCP clients.

- 2 Record the corresponding relationship between IP address and MAC address of DHCP client

DHCP Snooping records DHCP Snooping entries by listening to DHCP-REQUEST messages and DHCP-ACK messages received by trusted ports,

including MAC addresses of clients, acquired IP addresses, ports connected with DHCP clients and VLAN to which the ports belong. Using this information, you can achieve:

- ARP Detection: according to the DHCP Snooping table entry, judge whether the user sending ARP message is legal or not, so as to prevent ARP attack by illegal users.
- IP Source Guard: filter the messages forwarded by the port by dynamically obtaining DHCP Snooping entries to prevent illegal messages from passing through the port.

Option 82

Option 82 is called the relay agent information option and records the location information of the DHCP client. When the DHCP relay or DHCP Snooping device receives the request message sent by the DHCP client to the DHCP server, it adds Option 82 to the message and sends it to the DHCP server.

Administrators can obtain location information of DHCP client from Option 82, so as to locate DHCP client and realize control over security and billing of client. Servers that support Option 82 can also make allocation policies for IP addresses and other parameters based on information about that Option, providing a more flexible address allocation scheme.

Option 82 can contain up to 255 sub-option. If Option 82 is defined, define at least one sub-option. Currently, the DHCP relay supports only three sub-options: Sub-option 1 (Circuit ID, Circuit ID sub-option) and Sub-option 2 (Remote ID, Remote ID sub-option) and sub-option 3 (Subscriber ID, Subscriber ID sub-option).

8.5.1 Global Configuration

Function Description

On the "Global Configuration" page, user can enable/disable DHCP Snooping.

Operation Path

Open in order: "Network > DHCP Snooping > Global Configuration".

Interface Description

Global configuration interface is as follows:

The main element configuration description of global configuration interface:

Interface Element	Description
Enable Switch	Swipe to the right to enable DHCP-Snooping.
MAC Check	Enable DHCP client MAC address checking. Note: Enabling DHCP-Snooping will automatically turn on DHCP client MAC address checking.
Port Disable Time Enable	When the DHCP message rate of a port is lower than the configured rate of the port, the port's port disable duration will be disabled.
Port Disable Time	Port disable time, the input range is 1-3600, the unit is s, and the default is 30s.

8.5.2 VLAN Enable Configuration

Function Description

On the "VLAN Enable Configuration" page, user can specify that the VLAN to enable DHCP Snooping.

Operation Path

Open in order: "Network > DHCP Snooping > VLAN Enable Configuration".

Interface Description

The Vlan enable configuration interface is as follows:

Main elements configuration description of Vlan enabled configuration interface:

Interface Element	Description
VLAN ID	The VLAN number.
DHCP Snooping	Enable status of DHCP Snooping. - enable - disable

8.5.3 Binding Configuration

Function Description

On the Binding Configuration page, user can bind ports, IP addresses and MAC addresses.

Operation Path

Open in order: "Network > DHCP Snooping > Binding Configuration".

Interface Description

The binding configuration interface is as follows:

Main elements configuration description of Binding configuration interface:

Interface Element	Description
VLAN ID	Binding VLAN ID information, for example: 1-4096.
Port	The corresponding port name of the device Ethernet port.
IP	Binding IP address, for example: 192.168.1.1.
MAC	Binding MAC address, for example: 0001-0001-0001.
Type	Port type: - Static Configuration - Dynamic
Aging-age	Port aging time.

8.5.4 Port

Function Description

On the port configuration page, user can configure DHCP Snooping port information.

Operation Path

Open in order: "Network > DHCP Snooping > Port".

Interface Description

Check port configuration interface as below:

	Port	Trust Enable	Message Rate(pps)	Option 82 Check	Option 82 Strategy	circuitType	Circuit ID	remoteType	Remote ID	SubscriberType	Subscriber ID
☐	ge1	disable	unlimited	disable	-	-	-	-	-	-	-
☐	ge2	disable	unlimited	disable	-	-	-	-	-	-	-
☐	ge3	disable	unlimited	disable	-	-	-	-	-	-	-
☐	ge4	disable	unlimited	disable	-	-	-	-	-	-	-
☐	ge5	disable	unlimited	disable	-	-	-	-	-	-	-
☐	ge6	disable	unlimited	disable	-	-	-	-	-	-	-
☐	ge7	disable	unlimited	disable	-	-	-	-	-	-	-
☐	ge8	disable	unlimited	disable	-	-	-	-	-	-	-
☐	xe1	disable	unlimited	disable	-	-	-	-	-	-	-
☐	xe2	disable	unlimited	disable	-	-	-	-	-	-	-
☐	xe3	disable	unlimited	disable	-	-	-	-	-	-	-
☐	xe4	disable	unlimited	disable	-	-	-	-	-	-	-

The main element configuration description of global configuration interface:

Interface Element	Description
Port	The corresponding port name of the device Ethernet port.
Trust Enable	Port trust enable, and the trust port forwards the received DHCP message normally.

Interface Element	Description
Message Rate (pps)	Message transmission speed of port, the input range is 10-1000 (s), and the default value is 1000s.
Option 82 Check	When Option 82 check is turned on, the location information of DHCP client can be obtained from Option 82, so as to locate DHCP client.
Option 82 Strategy	Option 82 dealing strategy, options as follows: • Drop: Discard messages. • Keep: Adopt different modes to fill Option 82, replace prime Option 82 in message and forward, filling modes will be described as below. • Replace: Keep Option 82 in messages unchanged and forward.
Circuit type	Circuit ID sub-option filling type, options as follows: • Normal: Normal mode; • String: Detailed mode.
Circuit ID	Circuit ID sub-option filling content, support ASCII and HEX mode. Note: • The input length is limited between 2 and 64; • When Hex is selected, the input content is a combination of uppercase and lowercase letters and numbers. • When ASCII is selected, the content is not limited.
Remote Type	Remote ID sub-option filling type, options as follows: • Normal: Normal mode; • Sysname: Directly adopt device system name to fill Option 82; • String: Detailed mode.
Remote ID	The filling content of the remote ID sub-option supports ASCII and HEX formats. Note: • The input length is limited between 2 and 64; • When Hex is selected, the input content is a combination of uppercase and lowercase letters and numbers. • When ASCII is selected, the content is not limited.
Subscriber Type	User option fill type, which supports ASCII format.
Subscriber ID	The filling content of Subscriber ID sub-option supports ASCII and HEX formats. Note: • The input length is limited between 2 and 64; • When Hex is selected, the input content is a combination of uppercase and lowercase letters and numbers. • When ASCII is selected, the content is not limited.

8.6 Modbus TCP

Function Description

Modbus TCP monitoring function can be enabled. Client can read the switch system, port, ring network, frame statistics and other parameters information via Modbus TCP protocol, which are convenient for various integrated systems to monitor and manage the device.



Note

Please see the switch read-only register address information in the "Modbus TCP data sheet" of this section.

Operation Path

Open in order: "Network Management > Modbus TCP".

Interface Description

Interface screenshot of Modbus TCP:



The main element configuration descriptions of Modbus TCP:

Interface Element	Description
Modbus TCP	Modbus TCP monitoring enable switch, which is disabled by default. After enabling Modbus TCP monitoring function, client can read the switch device information via function code 4.

Modbus_TCP Data Sheet

Switch read-only register (support function code 4) address information and stored device information, as the table below:



Note

The following table address is hexadecimal format, please convert it into suitable format according to the demands of current debugging tool.

Information Type	Address (HEX)	Data Type	Description
System Information	0x0000	2 Words	Device ID (reserved)
	0x0002	16 Words	Name (ASCII display)
	0x0012	16 Words	Description (ASCII display)
	0x0022	3 Words	MAC Address (HEX display)
	0x0025	2 Words	IP address
	0x0027	16 Words	Contact Information
	0x0037	16 Words	Firmware Ver (ASCII display)
	0x0047	16 Words	Hardware Ver (ASCII display)
	0x0057	16 Words	Serial No.
	0x0067	1 Word	Power supply 1 status: 0x0000: OFF 0x0001: ON
	0x0068	1 Word	Power supply 2 status: 0x0000: OFF 0x0001: ON
Port Information	0x1000-0x101B	1 Word	Port connection status: 0x0000: Link down 0x0001: Link up 0x0002: Disable 0xFFFF: No port
	0x101D-0x1038	1 Word	Port operating mode: 0x0000: 10M-Half 0x0001: 10M-Full 0x0002: 100M-Half 0x0003: 100M-Full

Information Type	Address (HEX)	Data Type	Description
			0x0004: 1G-Half 0x0005: 1G-Full 0xFFFF: No port
	0x1039-0x1054	1 Word	Port flow control status: 0x0000: OFF 0x0001: ON 0xFFFF: No port
	0x1056-0x1071	1 Word	Port interface type: 0x0000: Copper port 0x0001: Fiber port 0x0002: Combo port 0xFFFF: No port
Frame Statistics	0x2000-0x2037	2 Word	Port 1-24 Tx Packets For example: sending packets quantity of port 1 is 0x44332211, namely: - Word 1 is 0x4433; - Word 2 is 0x2211.
	0x2039-0x2070	2 Word	Port 1-24 Rx Packets For example: Receiving packets quantity of port 1 is 0x44332211, namely: - Word 1 is 0x4433; - Word 2 is 0x2211.
	0x2072-0x20A9	2 Word	Port 1-24 Tx Error Packets For example: sending error packets quantity of port 1 is 0x44332211, namely: - Word 1 is 0x4433; - Word 2 is 0x2211.
	0x20AB-0x20E2	2 Word	Port 1-24 Rx Error Packets. For example: receiving error packets quantity of port 1 is 0x44332211, namely: Word 1 is 0x4433;

Information Type	Address (HEX)	Data Type	Description
			Word 2 is 0x2211.
Ring Information	0x3000	1 Word	Link redundancy algorithm category: 0x0000: None 0x0001: SW-Ring V1 0x0002: SW-Ring V2 0x0003: SW-Ring V3 0x0004: RSTP
	0x3001	1 Word	Group I Ring Type: 0x0000: Single Ring 0x0001: Coupling Ring 0x0002: Chain 0x0003: Dual_homing
	0x3002	1 Word	Group I Ring Port 1
	0x3003	1 Word	Group I Ring Port 2
	0x3004	1 Word	Group I Ring ID:
	0x3005	1 Word	Group I HelloTime
	0x3006	1 Word	Group I Enable
	0x3007	1 Word	Group I Master- slave device: 0x0000: master device 0x0001: slave device
	0x3008	1 Word	Group II Ring Type: 0x0000: Single Ring 0x0001: Coupling Ring 0x0002: Chain 0x0003: Dual_homing
	0x3009	1 Word	Group II ring port1
	0x300A	1 Word	Group II ring port2
	0x300B	1 Word	Group II Ring ID
	0x300C	1 Word	Group II HelloTime
	0x300D	1 Word	Group II Enable
	0x300E	1 Word	Group II Master-slave device: 0x0000: master device 0x0001: slave device

Information Type	Address (HEX)	Data Type	Description
	0x300F	1 Word	Group III Ring Type: 0x0000: Single Ring 0x0001: Coupling Ring 0x0002: Chain 0x0003: Dual_homing
	0x3010	1 Word	Group III ring port1
	0x3011	1 Word	Group III ring port2
	0x3012	1 Word	Group III Ring ID
	0x3013	1 Word	Group III HelloTime
	0x3014	1 Word	Group III Enable
	0x3015	1 Word	Group III Master-slave device: 0x0000: master device 0x0001: slave device
	0x3016	1 Word	Group IV Ring Type: 0x0000: Single Ring 0x0001: Coupling Ring 0x0002: Chain 0x0003: Dual_homing
	0x3017	1 Word	Group IV ring port1
	0x3018	1 Word	Group IV ring port2
	0x3019	1 Word	Group IV Ring ID
	0x301A	1 Word	Group IV HelloTime
	0x301B	1 Word	Group IV Enable
	0x301C	1 Word	Group IV Master-slave device: 0x0000: master device 0x0001: slave device

Instance: MODBUS TCP Configuration

Acquire the switch device name information via DebugTool analogue client, the switch information as follows:

- Switch default IP address: 192.168.1.254;
- Address of switch register that stores the device name information: 0x002;
- Number of switch register that stores the device name information: 16 words;


Operation Steps

First, configure the switch Modbus_TCP monitoring enable.

Step 1 Log into Web configuration interface.

Step 2 Select "Network > Remote Monitoring > Modbus TCP".

Step 3 Slide on the "Modbus_TCP" enable switch, as shown in the figure below.

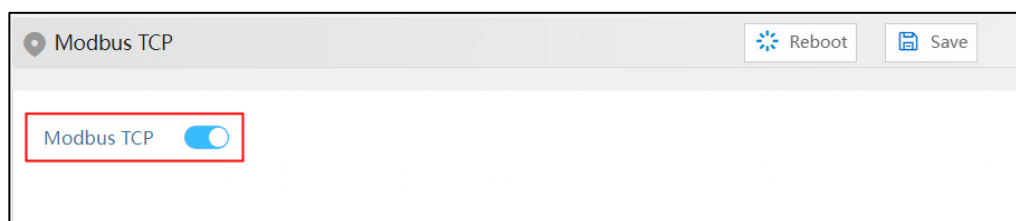


Step 4 End.

Then, run the debug tool software to acquire the device parameters.

Step 5 Open "Debug Tool".

Step 6 Click the drop-down list of "Create connection".

Step 7 Select "Create Modbus debugging > ModbusPoll", as the picture below.

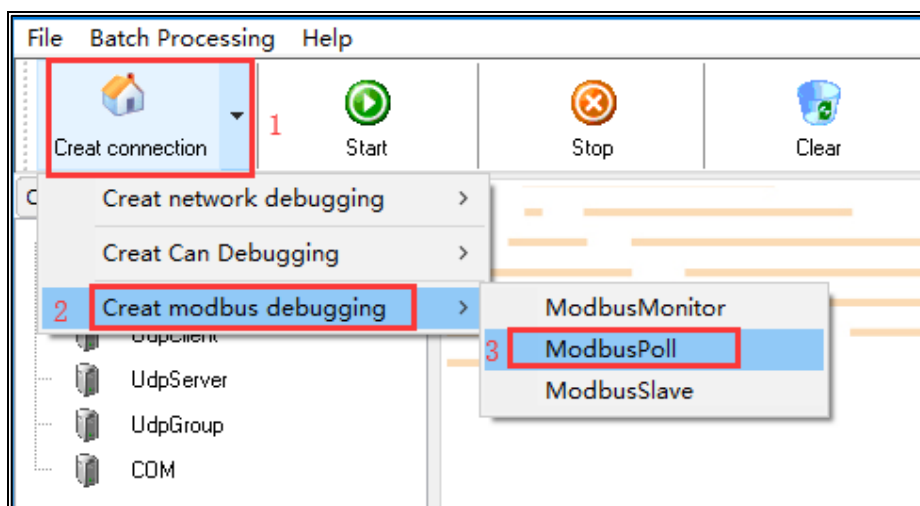


Step 8 Configuration window of ModbusPoll parameters pops up, the configuration as the picture below:

The screenshot shows the 'Modbus Poll Paramete' dialog box. It contains the following fields and settings:


- Connection Type:** 1. Modbus TCP/IP (selected in a dropdown menu).
- Serial Settings:**
 - Com: COM1
 - BaudRate: 115200
 - Parity: None
 - ByteSize: 8
 - StopBit: 1
 - Flow control: None
- RemoteServer:** 2. IP: 192.168.1.254, Port: 502, Timeout: 3000 [ms].
- View:**
 - Rows: 10 (selected), 20, 50, 100
 - Display: 4. HEX (selected in a dropdown menu)
- Mode:** RTU (selected), ASCII
- SalvelD:** 1
- Function:** 3. 04 Read Input Registers(3x) (selected in a dropdown menu)
- Address:** 2
- Quantity:** 16
- ScanRate:** 1000 [ms]
- ResponseTim:** 1000 [ms]
- Buttons:** OK (5), Cancel

- 1 On the drop-down list of "Connection Type", select "Modbus TCP/IP";
 - 2 Enter the switch IP address "192.168.1.254" and port number "502" on the column of "Remote Server";
 - 3 Select "04 Read Input Registers (3x)" on the drop-down list of "Function";
 - 4 Enter decimal device name register address "2" on the text box of "Address";
- Notice:
Here the start address is decimal format, so hexadecimal register address should be converted into decimal format.
- 5 Enter the register amount "16" on the text box of "Quantity";
 - 6 Select "HEX" on the drop-down list of "Display";
 - 7 Click "OK".

Step 9 On the page of Debug Tool, select created ModbusPoll, and then click "Start";

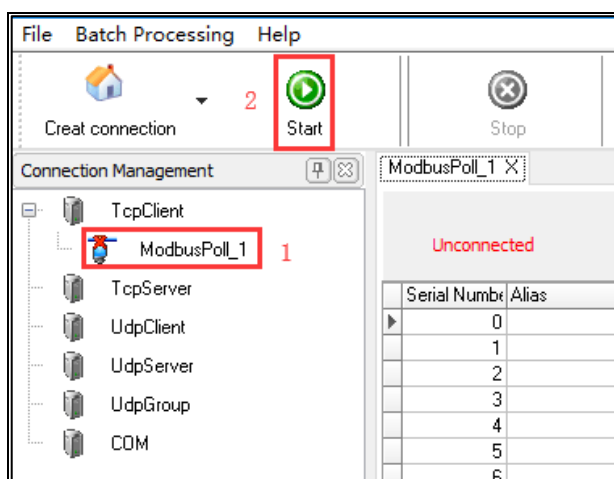

Step 10 Check responsive data, and convert the hexadecimal value read by register into ASCII code, displayed as "Industrial Switch";

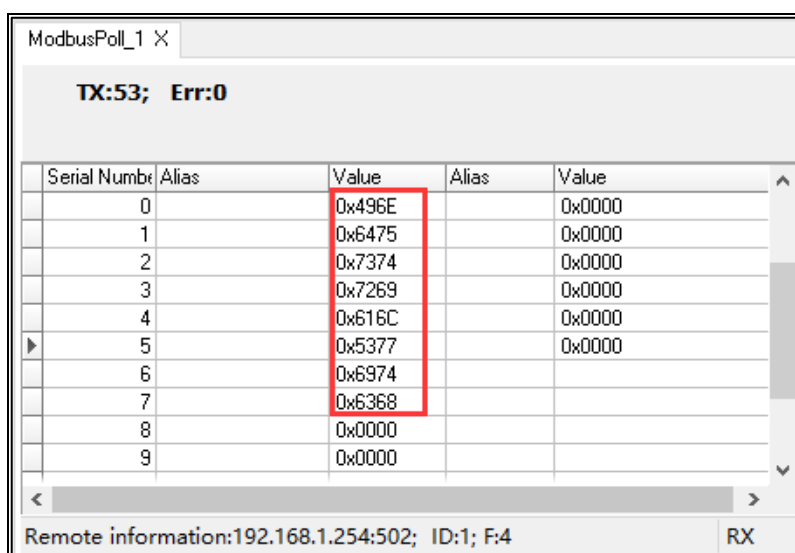

Step 11 End.



Note

- Switch can establish 4 Modbus TCP monitoring connections at the same time.
- Switch port information and frame statistics support the sequential read of port parameters of multiple registers. For example, address range of the register that stores port connection status information is 0x1000-0x101B, each register data is 1 word; when the start address of register is 0x1000, the register number is 1, it will read port 1 status; If the register quantity is 10, it will read the status from Port 1 to Port 10; If the port doesn't exist, then the read data will be 0xFFFF.

8.7 IEC61850-MMS

8.7.1 Global Configuration

Function Description

MMS (Manufacturing Message Specification) is an application layer protocol, which is mainly used for communication between devices in the field of industrial automation. Based on the OSI model, it provides a set of services and protocols to promote seamless communication between devices and systems produced by different manufacturers. MMS plays an important role in IEC 61850 standard, which is the only global standard in the field of power system automation.


MMS Server and MMS Client play different roles in communication. MMS Server is a service provider, which manages data objects, such as the status and configuration information of intelligent electronic devices (IEDs), and performs specific services and functions. MMS Client is a service requester, which sends requests to the server, such as reading or writing data, executing program calls, or requesting file transfer. In smart substation, the application cases of MMS protocol include substation parameter setting, real-time data reading, historical data query and so on. Through MMS protocol, remote monitoring and maintenance of intelligent electronic equipment can be realized, and the automation level and safety performance of substation can be improved. Generally speaking, MMS Server and MMS Client play a vital role in the communication system of intelligent substation, which together ensure efficient, reliable and standardized communication between substation devices.

Operation Path

Open in order: "Network > IEC 61850 MMS > Global Configuration".

Interface Description

Screenshot of IEC 61850 MMS interface:

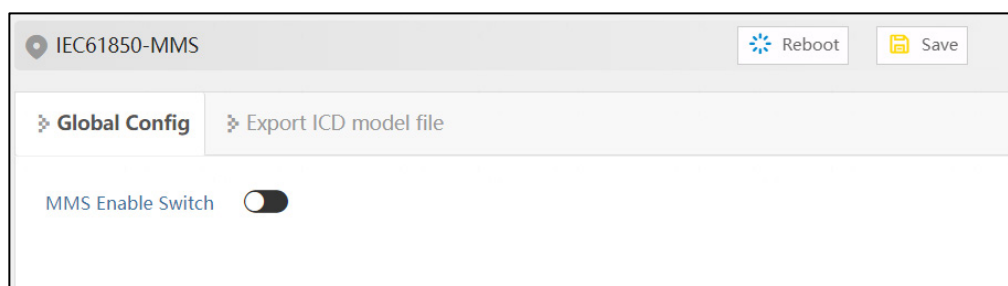

Interface Element	Description
MMS Enable Switch	Enable the MMS Server service.

8.7.2 Export IDC Model File

Function Description


ICD(IED Capability Description): It is provided by device manufacturers and describes the technical data model and services provided by IEDs, but does not include the actual name and communication parameters of IEDs. It contains model self-description information, device manufacturer name, device type, version number and modification information, etc. It is the factory configuration information of IED, that is, the function description file. MMS protocol supports the transmission of data and service requests defined in IDC files between IEDs. IDC model file is the basis of automation and informatization, which supports efficient communication and data management in substation.

Operation Path

Open in order: "Network > IEC 61850 MMS > Export ICD Model File".

Interface Description

The screenshot of the interface of Export ICD Model File is as follows. Click "Click to export ICD model file"

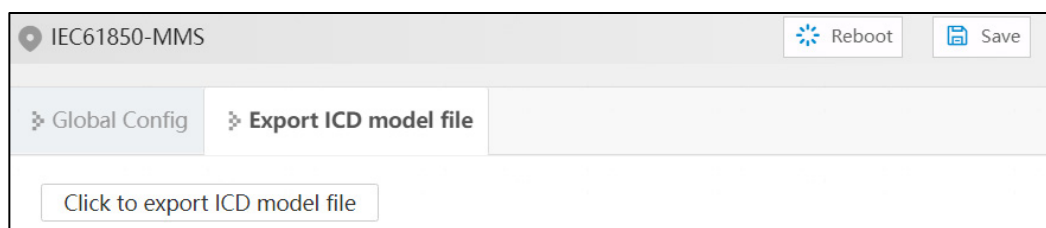

9 TSN Management

PTP(Precision Time Protocol) is a time synchronization protocol for high-precision frequency synchronization and phase synchronization between network nodes. IEEE1588 is the basic protocol of PTP, which specifies the principle of high-precision clock synchronization in the network and the specification of message interaction processing. Therefore, PTP is also called IEEE1588 for short. The 1588 is divided into two versions: 1588v1 and 1588v2. The 1588v1 can only achieve sub-millisecond time synchronization accuracy, while the 1588v2 can achieve sub-microsecond synchronization accuracy, which can realize both phase synchronization and frequency synchronization. Today, 1588v1 is basically replaced by 1588v2. Based on IEEE 1588, PTP derived IEEE 802.1AS and other protocols. Different PTP protocol standards have different usage scenarios and different functions, but their principles are basically the same. On the basis of IEEE1588, IEEE802.1AS refines it to form a more targeted time synchronization mechanism. It only supports two-step and P2P mode, but does not support UDP protocol and single-step and E2E mode.

9.1 Clock Configuration

Function Description


Configure the PTP clock.

Operation Path

Open in order: "TSN > PTP > Clock Configuration".

Interface Description

Clock Configuration interface is as follows:

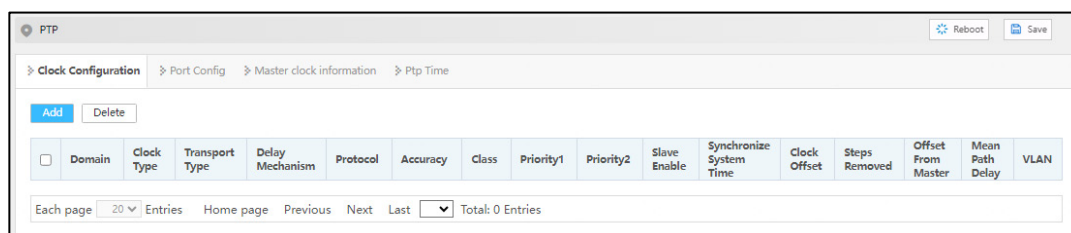

Main elements configuration description of clock configuration interface:

Interface Element	Description
Domain	Domain ID, the value range is 0-254.
Clock Type	Clock node options as follows: • boundary: Boundary Clock This clock node has multiple PTP interfaces in the same PTP domain to participate in time synchronization. It synchronizes the time from the upstream clock node through one interface, and issues the time to the downstream clock node through the other interfaces. In addition, when the clock node is used as the clock source, the time can be released to the downstream clock node through multiple PTP interfaces. • ordinary: Ordinary Clock This clock node has only one PTP interface in the same PTP domain to participate in time synchronization, and it synchronizes time from the upstream clock node through this interface. In addition, when the clock node is used as the clock source, the time can be released to the downstream clock node through only one PTP interface. • transparent: transparent clock. This clock node has multiple PTP interfaces, but it only forwards PTP protocol messages between these interfaces and corrects the forwarding delay, and does not synchronize the time through any interface.
Transport Type	The encapsulation types used for transmitting PTP messages are as follows: • ethernet: Ethernet encapsulation • udp v4: IPv4 UDP encapsulation • udp v6: IPv6 UDP encapsulation
Delay Mechanism	Link delay measurement mechanism, options are as follows: • e2e: Request response mechanism E2E(End to End), which calculates the time difference according to the overall path delay time between master and slave clocks. If there is a transparent clock between the master clock and the slave clock, the transparent clock does not calculate the average path delay. • p2p: Peer-to-peer delay mechanism, which calculates the time difference according to the delay time of each link

Interface Element	Description
	between master and slave clocks. If there is a transparent clock between the master clock and the slave clock, the transparent clock will participate in calculating the path delay of each link.
Protocol	Clock protocol type, options are as follows: • ieee1588 • 8021as
Accuracy	The time accuracy of the clock source, it ranges from 0 to 255. The smaller the value, the higher the accuracy. Note: When each clock node in PTP domain dynamically selects the optimal clock through BMC protocol, it will compare it according to the order of the first priority, time level, time accuracy, clock deviation and second priority of the clock carried in the Announce message, and the winner will become the optimal clock.
Class	The time level of the clock source, it ranges from 0 to 255. The smaller the value, the higher the level.
Priority 1	Priority 1 of the clock source. Value range is 0-255, smaller value represents higher priority.
Priority 2	Priority 2 of the clock source. Value range is 0-255, smaller value represents higher priority.
Slave Enable	When the clock node is an ordinary clock, the restrictions on the slave clock are as follows: • disable: Cancel the restriction that the local clock cannot be elected as the master clock. • enable: only as a slave clock, limiting that the local clock cannot be elected as the master clock.
Synchronize System Time	Update the master clock time of PTP domain to the system clock, with the following options: • enable • disable
Clock Offset	The logarithmic variance of the offset scale of the clock source, which measures the time offset. The value range is 0-65535.
Steps Removed	Displays the number of hops from the current clock to the main clock.
Offset From Master	Displays the deviation between the current clock and the main clock time.

Interface Element	Description
Mean Path Delay	Displays the path delay of the current clock from the master clock or neighboring nodes.
VLAN	VLAN ID number, value range is 1-4094.

9.2 Port Configuration

Function Description


Configure PTP port.

Operation Path

Open in order: "TSN > PTP > Port Configuration".

Interface Description

Check port configuration interface as below:

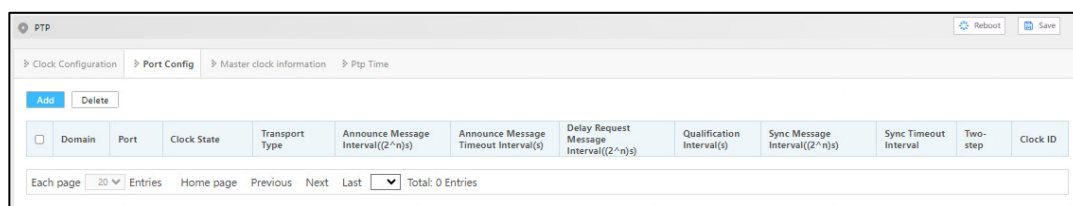

The main element configuration description of port configuration interface:

Interface Element	Description
Domain	Domain ID, the value range is 0-254.
Port	The corresponding port name of the device Ethernet port.
Clock State	Display port PTP clock state.
Transport Type	The encapsulation type used for transmitting PTP messages at the port can be selected as follows: - ethernet: Ethernet encapsulation - udp v4: IPv4 UDP encapsulation - udp v6: IPv6 UDP encapsulation
Announce Message Interval ((2 ⁿ)s)	The time interval for the main node to periodically send the Announce message, with the range of 0-4th power second of 2.
Announce Message Timeout Interval (s)	The timeout of receiving the Announce message from the node is a multiple of the period of sending the Announce message from the master node, and the value range is 2-10.

Interface Element	Description
Delay Request Message Interval ((2 ⁿ)s)	The time interval for sending the delay request message, the value range is 0-5th power second of 2.
Qualification Interval (s)	The minimum time interval for sending the Delay_Req message, the value range is 1-10th power second of 2.
Sync Message Interval ((2 ⁿ)s)	Specifies the time interval for sending Sync message, ranging from is -3-3th power second of 2.
Sync Timeout Interval	The timeout interval for sending Sync message, ranging from 2-10.
Two-step	The dual-step clock mode is enabled, and the options are as follows: • enable: the carrying mode of time stamp is two-step mode, that is, neither the Sync message nor the Pdelay_Resp message carries the time stamp of the time when this message was sent, but is carried by other subsequent messages. • disable: the carrying mode of timestamp is single-step mode, that is, the event messages Sync and Pdelay_Resp have the timestamp of the sending time of this message, and the announcement of time information is completed at the same time of message sending and receiving.
Clock ID	“Clock ID” is the clock ID of the master clock, which has the highest priority and the most accurate clock information. Note: When the master clock device sets its own clock ID to the master clock ID, it is responsible for sending the most accurate clock information to other devices. Other devices align their clocks with the master clock to ensure that time is synchronized throughout the system.

9.3 Master Clock Information

Function Description


View PTP Master Clock information,

Operation Path

Open in order: "TSN > PTP > Master Clock Information".

Interface Description

Master Clock Information interface is as follows:

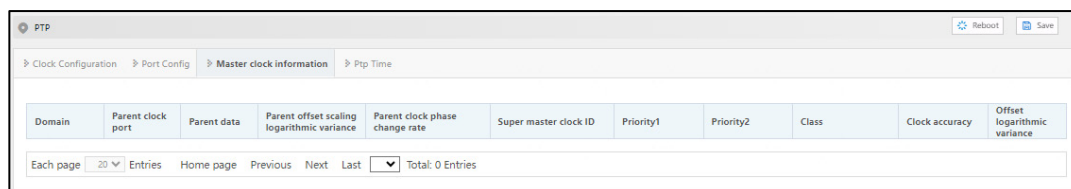

The main element configuration description of master clock information interface:

Interface Element	Description
Domain	Domain ID, the value range is 0-254.
Parent clock port	The Ethernet port of the master node device connected to the device, if the device is used as the master clock, it is itself.
Parent data	Refer to the master clock data in the switch that is used to synchronize individual ports and devices in the switch. During the processing of the switch, ensure that all data is transmitted synchronously within the switch and between external devices.
Parent offset scaling logarithmic variance	Indicate the deviation between clocks, i.e. the time difference between two clocks.
Parent clock phase change rate	Refer to the phase change of the clock signal with respect to the reference clock signal in unit time.
Super master clock ID	Grandmaster Clock ID is the clock ID of the master clock, which has the highest priority and the most accurate clock information. Note: When the master clock device sets its own clock ID to the master clock ID, it is responsible for sending the most accurate clock information to other devices. Other devices align their clocks with the master clock to ensure that time is synchronized throughout the system.
Priority 1	Priority 1 of the clock source. Value range is 0-255, smaller value represents higher priority.
Priority 2	Priority 2 of the clock source. Value range is 0-255, smaller value represents higher priority.
Class	The time level of the clock source, it ranges from 0 to 255. The

Interface Element	Description
	smaller the value, the higher the level.
Clock accuracy	The time accuracy of the clock source, it ranges from 0 to 255. The smaller the value, the higher the accuracy. Note: When each clock node in PTP domain dynamically selects the optimal clock through BMC protocol, it will compare it according to the order of the first priority, time level, time accuracy, clock deviation and second priority of the clock carried in the Announce message, and the winner will become the optimal clock.
Offset logarithmic variance	The logarithmic variance of the offset scale of the clock source, which measures the time offset. The value range is 0-65535.

9.4 PTP Time

Function Description


View PTP Time.

Operation Path

Open in order: "TSN > PTP > Ptp Time".

Interface Description

The PTP Time interface is as follows:

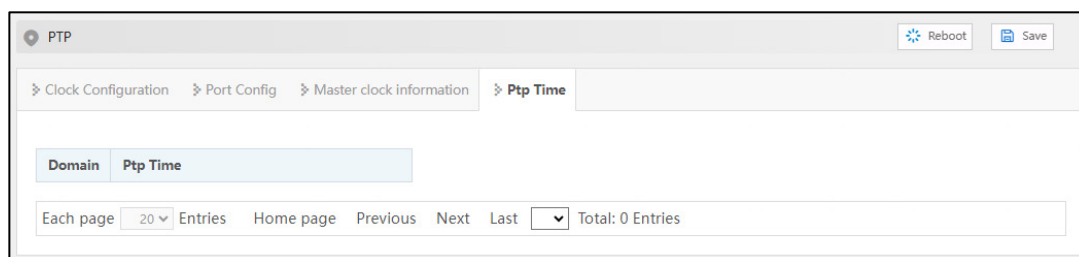

The main element configuration description of PTP Time information interface:

Interface Element	Description
Domain	Domain ID, the value range is 0-254.
Ptp Time	View the Ptp Time configured in the current system.

10 System Maintenance

10.1 Network Diagnosis

10.1.1 Ping

Function Description

Ping is used to check whether the network is open or network connection speed. The Ping command uses the uniqueness of the IP address on the network to send a packet to the target IP address, and then asks to return a packet of the same size to determine whether the network is connected and what the delay is.

Operation Path

Open in order: "System > Network Diagnosis > Ping".

Interface Description

The Ping interface is as follows:

The main element configuration description of Ping interface:

Interface Element	Description
IP	The IPv4 or IPv6 address of the detected device, that is, the destination address. The device can check the network intercommunity to other devices via the ping command.

10.1.2 Traceroute

Function Description

Test the network situation between the switch and the target host. Traceroute measures how long it takes by sending small packets to the destination device until they return. Each device on a path Traceroute returns three test results. Output result includes each test time (ms), device name (if exists) and the IP address.

Operation Path

Open in order: "System > Network Diagnosis > Traceroute".

Interface Description

Traceroute interface is as follows:

The main element configuration description of Traceroute interface:

Interface Element	Description
IP	Destination device IPv4 or IPv6 address, fill in the opposite device IP address that needs test.

10.1.3 Network Cable Diagnosis

Function Description

It can detect whether there is a fault in the cable used by the copper port of the device. When the cable is in normal condition, the length in the detection information refers to the total length of the cable. When the cable is in abnormal condition, the length in the detection information refers to the length from this interface to the fault location. The 8-wire network cable has 4 groups of differential lines, and the device can detect the length and status of each group of differential lines.



Note

- The accuracy of detecting cable length is about 5 meters, and the test results are for reference only. The test results of different types or different manufacturers may be different.
- When testing, it will affect the normal use of the interface business in a short time, and may also cause the interface of UP to oscillate.

Operation Path

Open in order: "System > Network Diagnosis > Network Cable Diagnosis".

Interface Description

Network cable diagnosis interface screenshot is as follows:

Main elements configuration description of network cable diagnosis interface:

Interface Element	Description
Port	The corresponding port name of the device Ethernet port.
State of Pair A/B/C/D	The state of the differential line, such as OK (normal), OPEN (open circuit), SHORT (short circuit), CROSS (cross/crosstalk), etc.
Length of Pair A/B/C/D (m)	Length of the differential line, unit: meter.

10.1.4 SFP Digital Diagnosis

Function Description


Monitor SFP parameters in real time. This function has greatly facilitated the troubleshooting process of optical fiber link and the cost of on-site debugging.

Operation Path

Open in order: "System > Network Diagnosis > SFP Digital Diagnosis".

Interface Description

The SFP digital diagnostic interface is as follows:

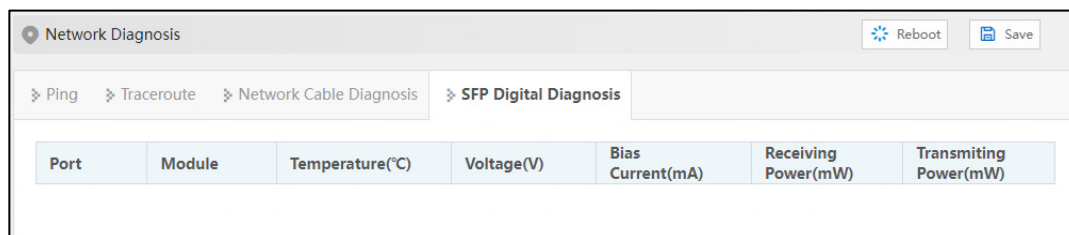

The main element configuration description of SFP digital diagnosis interface:

Interface Element	Description
Port	The corresponding port name of the device Ethernet port.
Module	Parameter information of optical module:
Temperature (°C)	This device's SFP temperature. Its unit is °C. The operating temperature of this SFP module should be within the
Voltage (V)	The voltage that this device offers SFP. Its unit is V. Overvoltage could lead to the breakdown of CMOS device; under voltage would disable the normal operation of lasers.
Bias Current (mA)	The bias current of laser.
Receiving Power (mW)	Optical input power, referring to the lowest optical power of receiving in certain rate and bit error rate.
Transmitting Power (mW)	Optical output power, referring to the output power of optical source in the sending end of optical module.

10.2 Time

10.2.1 NTP Configuration

The full name of NTP protocol is Network Time Protocol. Its destination is to transmit uniform and standard time in international Internet. Specific implementation scheme is appointing several clock source websites in the network to provide user with timing service, and these websites should be able to mutually compare to improve the accuracy. It can provide millisecond time correction, and is confirmed by the encrypted way to prevent malicious protocol attacks.

Function Description

Configure the device time and NTP server information.

Operation Path

Open in order: "System > Time > NTP Configuration".

Interface Description

The NTP configuration interface is as follows:

Main element configuration description of NTP configuration interface:

Interface Element		Description
NTP Enable Switch		NTP protocol enable switch.
Master Switch	Enable	Master enable switch, after enabled, the device starts NTP service, and uses the local clock of the device as NTP master clock to provide clock source for other devices.
Server		IP address of NTP server, for example: 192.168.1.1. Note: As NTP client, the system will synchronize time with NTP server every 11 minutes.

10.2.2 Time Zone Configuration

Function Description

Configure the device time zone.

Operation Path

Open in order: "System > Time > Time Configuration".

Interface Description

Time Configuration interface is as follows:

Main elements configuration description of time zone configuration interface:

Interface Element	Description
Time Zone	UTC (Universal Time Coordinated) time zone. Due to different regions, users can freely set the system clock according to the regulations of their own country or region.
Date	Month/Day/Year
Time	X hours, X minutes, X seconds.

10.3 Alarm

10.3.1 Alarm Trigger

Function Description

The device system provides multiple alarm trigger sources, including port status, abnormal temperature, power failure, and excessive network load. When these trigger sources are activated, users can trigger the alarm by configuring LED indicator, relay, Trap message or email alarm mode, so as to respond and deal with potential problems in time.

Operation Path

Open in order: "System > Alarm > Alarm Trigger".

Interface Description

The Alarm Trigger interface is as follows:

ID	Alarm trigger	Alarm reception
1	Power1 Enable	
2	Power2 Enable	

The main element configuration description of Alarm Trigger interface:

Interface Element	Description
ID	Alarm trigger entry.
Alarm Trigger	Device alarm triggers include port, temperature, power supply and network load.
Alarm reception	Device alarm modes include LED, relay, Trap and mail.

10.3.1.1 Port

Function Description

Configure the port alarm function. When the device port is in an abnormal state, the administrator can be informed in time, and the device state can be quickly repaired to avoid excessive loss.

Operation Path

Open in order: "System > Alarm > Alarm Trigger > Port".

Interface Description

Port alarm interface as below:

Alarm

Reboot Save

Port
Temperature
Power
Network load

Return

Alarm mode
☐ LED
☐ Relay
☐ Trap
☐ E-mail

Port	Enable	State
ge1	Disable ▾	down
ge2	Disable ▾	down
ge3	Disable ▾	down
ge4	Disable ▾	down
ge5	Disable ▾	down
ge6	Disable ▾	down
ge7	Disable ▾	down
ge8	Disable ▾	link
xe1	Disable ▾	down
xe2	Disable ▾	down
xe3	Disable ▾	down
xe4	Disable ▾	down

Apply

The main element configuration description of port alarm configuration interface:

Interface Element	Description
Port	The corresponding port name of the device Ethernet port.
State	Port link status, display items as follows: - link - down
Enable	Port alarm function status, options as follows: - Enable - Disable Note: After enabling port alarm, when port occurs abnormal status, such as disconnection, the device will output an alarm signal to hint the abnormal operation of device port via setting LED indicator, relay, Trap message or e-mail.
Alarm mode	Alarm mode of port alarm, with options: - LED - Relay - Trap - E-mail Note: If checked, the LED indicator, relay, Trap message or email alarm mode will be turned on to trigger the alarm.

10.3.1.2 Temperature

Function Description

Configure the temperature alarm function. When the device temperature is in an abnormal state, the administrator can be informed in time, and the device can be quickly protected to avoid damage.

Operation Path

Open in order: "System > Alarm > Alarm Trigger > Temperature".

Interface Description

The temperature alarm interface is as follows:

The main element configuration description of temperature alarm information interface:

Interface Element	Description
State	Temperature alarm switch status, with options: • Enable • Disable Note: After the temperature alarm is enabled, when the temperature of the device is abnormal, such as when the temperature exceeds the set upper limit or lower limit, the device will output an alarm signal to remind the device that the temperature is abnormal by setting LED indicator, relay, Trap message or email.
Upper temperature limit	Set the upper limit temperature of the device, ranging from -40 to 120 C.
Lower temperature limit	Set the lower limit temperature of the device, ranging from -40 to 120 C.

Interface Element	Description
Current temperature	Current temperature state of the device.
Alarm mode	Alarm mode of temperature alarm, with options: • LED • Relay • Trap • E-mail Note: If checked, the LED indicator, relay, Trap message or email alarm mode will be turned on to trigger the alarm.

10.3.1.3 Power

Function Description

The device system provides this function, and you can set the power alarm function.

Operation Path

Open in order: "System > Alarm > Alarm Trigger > Power".

Interface Description

Power alarm interface as below:

Alarm

Reboot Save

Port Temperature Power Network load

Return

Alarm mode ☐ LED ☐ Relay ☐ Trap ☐ E-mail

Power supply number	Enable	State
1	Enable ▾	Normal
2	Enable ▾	Absent

Apply

Main elements configuration description of power alarm interface:

Interface Element	Description
Power supply number	The corresponding name of this device's power supply
Enable	The state of power supply alarm, with options:

Interface Element	Description
	• Enable • Disable Note: The power alarm is applicable to dual power supplies. After it is enabled, when one of the power supplies is disconnected or fails, the device will output an alarm signal to hint the abnormal operation of device power via LED indicator, relay, Trap message or email.
State	Device power link status, display items as follows: • Normal • Absent
Alarm mode	Alarm mode of power alarm, with options: • LED • Relay • Trap • E-mail Note: If checked, the LED indicator, relay, Trap message or email alarm mode will be turned on to trigger the alarm.

10.3.1.4 Network Load

Function Description

The device system provides this function, and you can set the network load alarm function.

Operation Path

Open in order: "System > Alarm > Alarm Trigger > Network Load".

Interface Description

Network load alarm interface is as follows:

Alarm
Reboot
Save

Port
Temperature
Power
Network load

Return

Alarm mode
☐ LED
☐ Relay
☐ Trap
☐ E-mail

Port	Trigger	Upper limit	Current load	State
ge1	Disable ▼	80 %	0%	down
ge2	Disable ▼	80 %	0%	down
ge3	Disable ▼	80 %	0%	down
ge4	Disable ▼	80 %	0%	down
ge5	Disable ▼	80 %	0%	down
ge6	Disable ▼	80 %	0%	down
ge7	Disable ▼	80 %	0%	down
ge8	Disable ▼	80 %	0%	link
xe1	Disable ▼	80 %	0%	down
xe2	Disable ▼	80 %	0%	down
xe3	Disable ▼	80 %	0%	down
xe4	Disable ▼	80 %	0%	down

Apply

The main element configuration description of network load alarm interface:

Interface Element	Description
Port	The corresponding port name of the device Ethernet port.
Trigger	Network load alarm switch status, with options: - Enable - Disable Note: After enabling network load alarm, when the device's network load is abnormal, such as when the current network load of the device exceeds the upper limit value, the device will output an alarm signal, which will prompt the device to be abnormal by setting LED indicator, relay Trap messages, or email.
Upper limit	Set the upper limit of network load of device, ranging from 0 to 100.
Current load	If the current network load value of the device exceeds the upper limit value, an alarm will be triggered.
State	Port link status, display items as follows: - link - down
Alarm mode	Alarm mode of network load alarm, with options: - LED - Relay - Trap

Interface Element	Description
	E-mail Note: If checked, the LED indicator, relay, Trap message or email alarm mode will be turned on to trigger the alarm.

10.3.2 Alarm Reception

Function Description

Users can check the configured LED indicator, relay, Trap or email alarm modes, so as to know the different alarm modes of the device in time.

Operation Path

Open in order: "System > Alarm > Alarm Reception".

Interface Description

Alarm reception interface is as below:

ID	Action alarm	Related alarm trigger
1	LED	
2	Relay	
3	Trap	
4	E-mail	

The main element configuration description of alarm reception interface:

Interface Element	Description
ID	Alarm mode entry.
Action alarm	Device alarm modes include LED, relay, Trap and mail.
Related alarm trigger	Device alarm triggers include port, temperature, power supply and network load.

10.3.2.1 Trap Settings

Function Description

By setting the Trap message trap, the administrator can realize real-time monitoring and quick response to the device or system status, so as to find and deal with problems in time.

Operation Path

Open in order: "System > Alarm > Alarm Reception > Trap Settings".

Interface Description

The Trap settings interface is as follows:

The main element configuration description of Trap settings interface:

Interface Element	Description
Address	IP address of SNMP management device, used for receiving alarm information, such as PC.
Mode	SNMP management device version, options as below: - v1 - v2c
Group name	Group name.
Port number	The corresponding port name of the device Ethernet port.

10.3.2.2 E-mail Alarm

Function Description

On the "Email Alarm" page, user can configure the sender, recipient, mailbox server and other parameters. The system can inform the hot start, cold start, login failure, static IP modification and password modification of the device by email.

Operation Path

Open in order: "System > Alarm > Alarm Reception > E-mail Alarm".

Interface Description

The E-Mail Alarm configuration interface is as follows:

Enabled state	Mail server	Receiver address	Sender address	Port No.	TLS	Authentication	Email login address	Email login password
☐ disable					off	off		

Main elements configuration description of E-mail alarm configuration interface:

Interface Element	Description
Enabled state	Enable/disable E-mail alarm.
Mail server	Server address of used E-mail should be filled according to the account of used E-mail address. The host IP address or used host name that provides E-mail delivery service for the device.
Receiver address	Mailbox address used for receiving alarm mails.
Sender address	Mailbox address used for sending alarm mails.
Port No.	Port number of mailbox server.
TLS	TLS(Transport Layer Security) is a transport-layer security encryption protocol, which is used to provide data confidentiality and integrity in network communication. By using TLS protocol, the transmission process of mail will be encrypted to prevent sensitive information from being eavesdropped or tampered with during transmission. The operation of "TLS" is as follows: - Off: disable TLS encryption protocol; - On: enable TLS encryption protocol.
Authentication	Authentication refers to whether to verify the mailbox password. The operation of "Authentication" is as follows: - Off: disable the verification email password; - On: enable the verification email password.
Email login address	User name for logging in to the mailbox server.

Interface Element		Description
Email	login password	Password of the user name for logging in to the mailbox server.

10.4 Configuration File Configuration

10.4.1 Current Configuration

Function Description


Check current configuration information.

Operation Path

Open in order: "System > Configuration File Configuration > Current Configuration".

Interface Description

The current configuration interface is as follows:

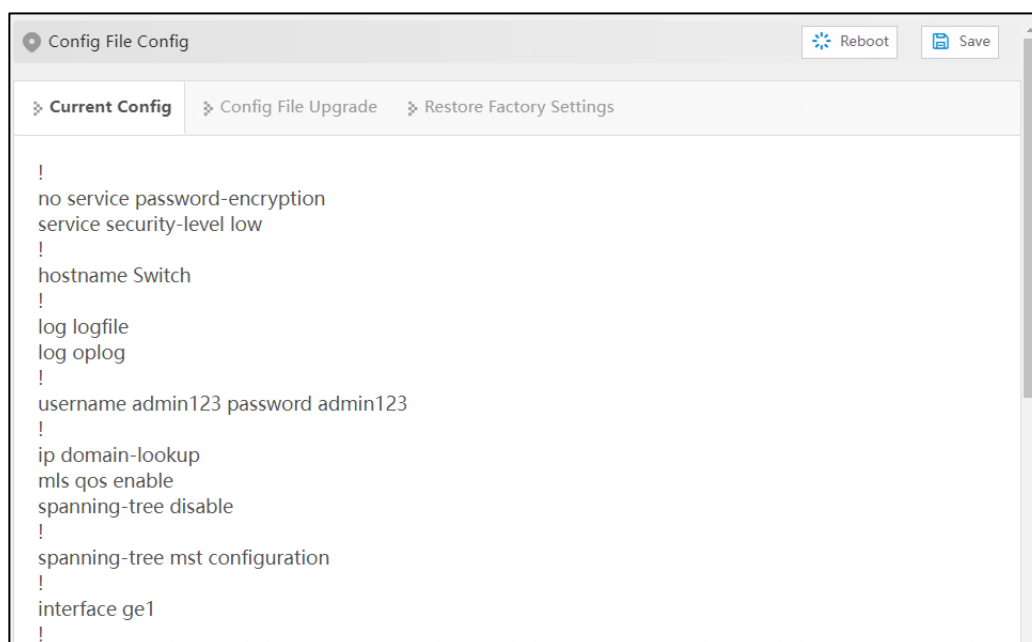

10.4.2 Configuration File Upgrade

Function Description


Upload and upload configuration file.

Operation Path

Open in order: "System > Configuration File Configuration > Configuration File Upgrade".

Interface Description

Configuration file upgrade interface is as follows:

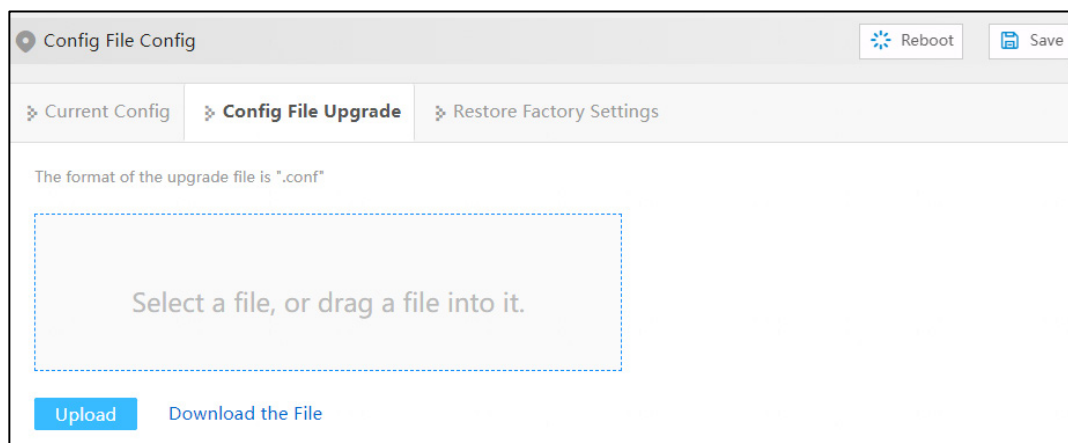

The main element configuration description of configuration file upgrade interface:

Interface Element	Description
Select a file, or drag a file into it	To select the uploaded configuration file, click this area to select the local configuration file, or drag the local configuration file directly into this area.
Upload	After selecting the uploaded configuration file, click the "Upload" button to start uploading the configuration.
Download the File	Click to download the configuration file of the current device. The default file name is "device.conf".

10.4.3 Restore Factory Settings

Function Description


Restore device to factory settings.

Operation Path

Open in order: "System > Configuration File Configuration > Restore Factory Setting".

Interface Description

Restore Factory Settings interface is as follows:

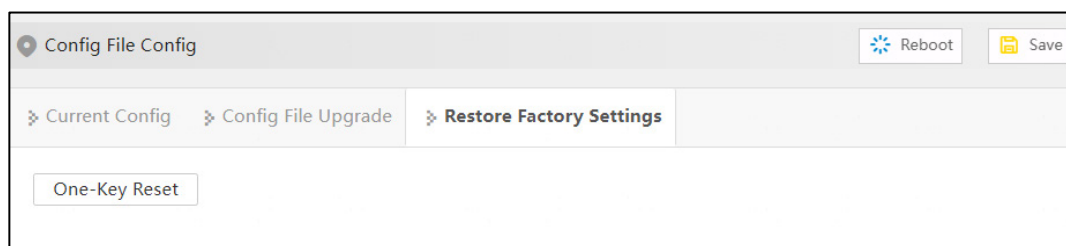

The main element configuration description of restore factory settings interface:

Interface Element	Description
One-Key Reset	Click "One-Key Reset" button, and the configuration file will be restored to the factory configuration.

10.5 Software Upgrade

Function Description


Update and upgrade the device program.

Operation Path

Open in order: "System > Software Upgrade".

Interface Description

The software update interface is as follows:

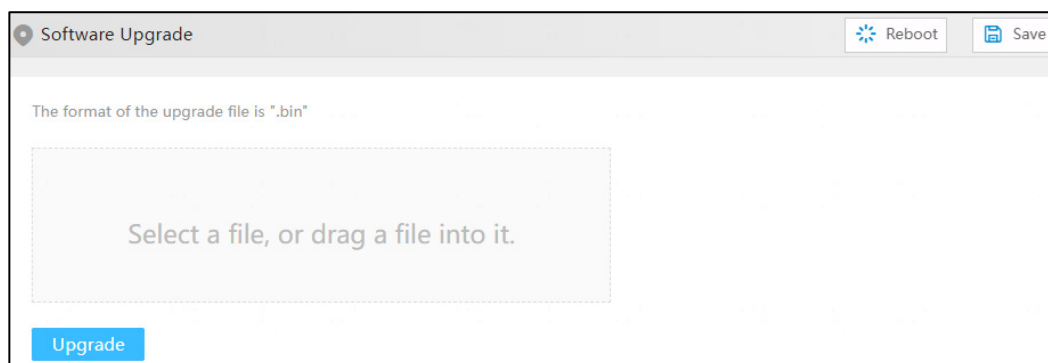

The main elements configuration description of software update interface:

Interface Element	Description
Select a file, or drag a file into it	For the upgrade files, click this area to select the local upgrade files, or drag the local upgrade files directly into this area.
Upgrade	After selecting the upgraded files, click the "Upgrade" button to start the upgrade process. Note: Generally, upgrade firmware is in ".bin" format.

10.6 Log Information

10.6.1 Log Information

Function Description

Check the log information of the device. Log information mainly records user operation, system failure, system safety and other information, including user log, security log and diagnostic log.


- User log: records user operations and system operation information.
- Security log: records information including account management, protocol, anti-attack and status.
- Diagnostic log: records information that assists in problem identification.

Operation Path

Open in order: "System > Log Information > Log Information".

Interface Description

Log information interface is as follows:

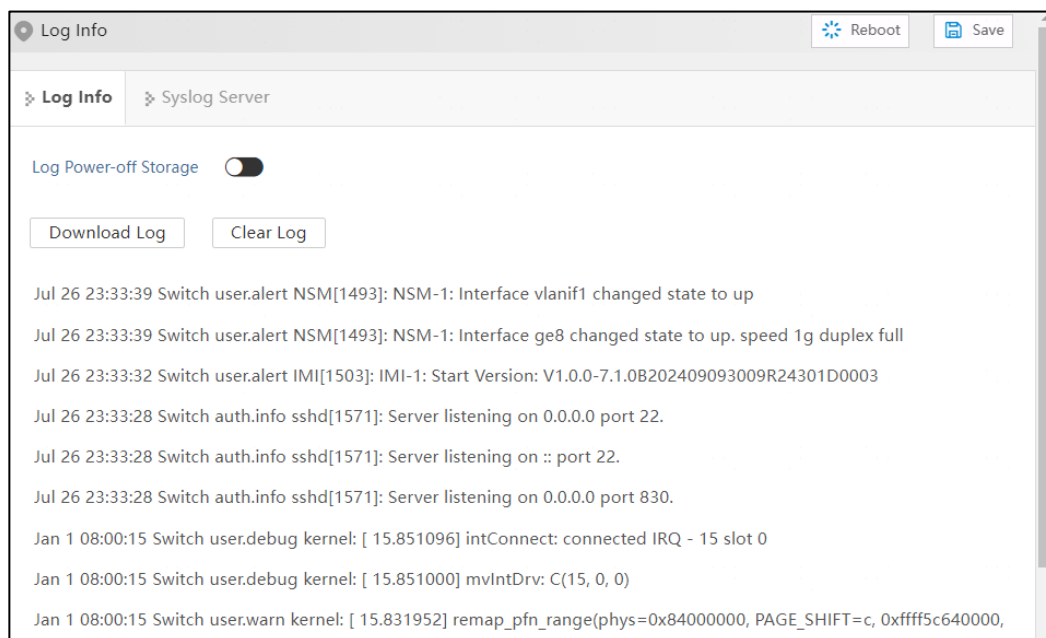

Main elements configuration description of log information interface:

Interface Element		Description
Log	Power-off Storage	Log information is stored in FLASH, log information will not be lost after power failure.

Interface Element	Description
Download Log	Click the "Download Log" button to download the current log information to the local.
Clear Log	Click the "Clear Log" button to clear the current log information record.

10.6.2 Syslog Server

Function Description

Configure the Syslog server IP address, and the system log information can be sent to the configured syslog server.

Operation Path

Open in order: "System > Log Information > Syslog Server".

Interface Description

The Syslog server interface is as follows:

Syslog server interface main elements configuration instructions:

Interface Element	Description
Syslog Server	IP address of Syslog server Note: - Supports port configuration and the input format is IP: port, for example: 192.168.1.1:80. - Users can configure up to 4 syslog servers at a time. If the configuration of one or more syslog servers needs to be canceled, delete the input box and click Set.

11.1 Login Problem

1. **Why the web page display abnormally when browsing the configuration via WEB?**

Before accessing the WEB, please eliminate IE cache and cookies. Otherwise, the web page will display abnormally.

2. **What should I do if I forget my login password?**

IF you forget the login password, you can initialize the password by restoring factory settings. The specific method is to search by BlueEyes_II software and use restore factory setting function, then the password will be initialized. Both of the initial user name and password are "admin123".

3. **Is configuring via WEB browser same to configuring via BlueEyes_II software?**

Both configurations are the same, without conflict.

11.2 Configuration Problem

1. **Why the bandwidth can't be increased after configuring Trunking (port aggregation) function?**

Check whether the port attributes set to Trunking are consistent, such as rate, duplex mode, VLAN and other attributes.

2. **How to deal with the problem that part of switch ports are impassable?**

When some ports on the switch are impassable, it may be network cable, network

adapter and switch port faults. User can locate the faults via following tests:

- Keep connected computer and switch ports unchanged, change other network cables;
- Keep connected network cable and switch port unchanged, change other computers;
- Keep connected network cable and computer unchanged, change other switch port;
- If the switch port faults are confirmed, please contact supplier for maintenance.

3. How about the order of port self-adaption state detection?

The port self-adaption state detection is conducted according to following order: 1000Mbps full duplex, 100Mbps full duplex, 100Mbps half-duplex, 10Mbps full duplex, 10Mbps half-duplex, detect in order from high to low, connect automatically in supported highest speed.

11.3 Indicator Problem

1. Why is the power supply indicator off?

Possible reasons include:

- Not connected to the power socket; troubleshooting, connected to the power socket.
- Power supply or indicators faults; troubleshooting, change the power supply or device test.
- Power supply voltage can't meet the device requirements; troubleshooting, configure the power supply voltage according to the device manual.

2. Link/Act indicator isn't bright, what's the reason?

Possible reasons include:

- The network cable portion of Ethernet copper port is disconnected or bad contact; troubleshooting, connect the network cable again.
- Ethernet terminal device or network card works abnormally; troubleshooting, eliminate the terminal device fault.
- Not connected to the power socket; troubleshooting, connected to the power socket.
- Interface rate doesn't match the pattern; troubleshooting, examine whether the device transmission speed matches the duplex mode.

3. Ethernet copper port and fiber port indicator are connected normally, but can't transmit data, what's the reason?

When the system is power on or network configuration changes, the device and switch configuration in the network will need some time. Troubleshooting, after the device and switch configuration are completed, Ethernet data can be transmitted; if it's impassable, power off the system, and power on again.

4. Why does the communication crashes after a period of time, namely, it cannot communicate, and it returns to normal after restarting?

Reasons may include:

- Surrounding environment disturbs the product; troubleshooting, product grounding adopts shielding line or shields the interference source.
- Site wiring is not normative; Troubleshooting, optical fiber, network cable, optical cable cannot be arranged with power line and high-voltage line.
- Network cable is disturbed by static electricity or surge; Troubleshooting, change the shielded cable or install a lightning protector.
- High and low temperature influence; troubleshooting, check the device temperature usage range.